

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZdalaMit](#) /

› [ZdalaMit RM-ADU005 Replacement Remote Control for Sony DVD Home Theater Systems](#)

## ZdalaMit RM-ADU005

# ZdalaMit RM-ADU005 Replacement Remote Control

Instruction Manual

## INTRODUCTION

---

This manual provides comprehensive instructions for the ZdalaMit RM-ADU005 replacement remote control. This remote is designed to function as a direct replacement for original Sony DVD Home Theater System remotes, requiring no programming or pairing. Simply install the batteries, and it is ready for immediate use.



Image: The ZdalaMit RM-ADU005 replacement remote control, showing its full layout with various function buttons for a Sony DVD Home Theater System.

## SETUP

### Battery Installation

The RM-ADU005 remote control requires two (2) 1.5V AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote is ready for use without any additional programming.

## OPERATING INSTRUCTIONS

This replacement remote control is designed to replicate the functions of your original Sony DVD Home Theater System remote. No programming or pairing is required. Simply point the remote at your Sony DVD Home Theater System and press the desired function button.

## Basic Functions:

- **Power (I/O):** Turns the system on or off.
- **Open/Close:** Opens or closes the disc tray.
- **Disc Skip:** Skips to the next or previous disc.
- **Volume (+/-):** Adjusts the audio volume.
- **Muting:** Mutes or unmutes the audio.
- **Navigation (Up/Down/Left/Right/Enter):** Used to navigate menus and confirm selections.
- **Play/Pause/Stop/Fast Forward/Rewind:** Standard media playback controls.
- **Number Buttons (0-9, 10/0):** For direct track selection or input.
- **DVD Top Menu/DVD Menu:** Accesses the main menu or disc menu.
- **Function:** Switches between various functions of the home theater system.
- **TV Input/TV Vol/TV CH:** Controls basic TV functions if supported by your system.

Refer to your Sony DVD Home Theater System's original manual for specific functions and their usage.

## MAINTENANCE

---

### Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

### Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's finish or internal components.

### Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

## TROUBLESHOOTING

---

- **Remote is not responding:**
  - Ensure batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new 1.5V AAA alkaline batteries.
  - Check for any obstructions between the remote control and the infrared sensor on your Sony DVD Home Theater System.
  - Ensure you are within a reasonable operating range and pointing the remote directly at the system.
- **Certain buttons do not work:**
  - Verify that the button corresponds to a function available on your specific Sony DVD Home Theater System model. Some buttons may be specific to certain models or features.
  - Clean the remote control surface, especially around the buttons, to ensure no debris is interfering with button presses.

## SPECIFICATIONS

<b>Model Number</b>	RM-ADU005
---------------------	-----------

<b>Brand</b>	ZdalaMit
<b>Power Supply</b>	2 x 1.5V AAA Alkaline Batteries (not included)
<b>Product Dimensions</b>	8.34 x 1.99 x 0.55 inches (21.18 x 5.05 x 1.4 cm)
<b>Item Weight</b>	2 ounces (56.7 grams)
<b>Compatible Devices</b>	Sony DVD Home Theater Systems

## COMPATIBLE SONY DVD HOME THEATER SYSTEMS

---

The ZdalaMit RM-ADU005 remote control is compatible with the following Sony DVD Home Theater System models:

- DAV-DZ20
- HCD-DZ20
- DAV-DZ230
- HCD-DZ230
- DAV-DZ630
- HCD-DZ630
- DAV-HDX265
- HCD-HDX265
- DAV-DZ231
- HCD-DZ231
- DAV-HDZ235
- HCD-HDZ235
- DAV-DZ30
- HCD-DZ30
- DAV-DZ530
- HCD-DZ530
- DAV-HDX665
- HCD-HDX665
- DAV-HDX266
- HCD-HDX266
- DAV-HDX267W
- HCD-HDX267W
- DAV-HDX465
- HCD-HDX465
- DAV-HDX466
- HCD-HDX466

## SUPPORT

---

For any questions or assistance regarding your ZdalaMit RM-ADU005 replacement remote control, please contact the seller or manufacturer directly. Refer to your purchase documentation for contact information.



