

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TOSHIBA](#) /

› [Toshiba TY-LP100 Vinyl Record Player Turntable User Manual](#)

TOSHIBA TY-LP100

Toshiba TY-LP100 Vinyl Record Player Turntable User Manual

MODEL: TY-LP100

Introduction

This manual provides detailed instructions for the safe and efficient operation of your Toshiba TY-LP100 Vinyl Record Player Turntable. Please read this manual thoroughly before using the product and retain it for future reference. The TY-LP100 is designed to play vinyl records at multiple speeds, convert analog records to digital files, and connect wirelessly via Bluetooth.

Product Overview

The Toshiba TY-LP100 is a versatile belt-drive turntable system featuring integrated stereo speakers, Bluetooth connectivity, and a USB port for vinyl-to-digital encoding. Its classic design includes a protective dust cover and a robust black cabinet.



Image: Toshiba TY-LP100 Turntable with dust cover open, displaying the main components.



Image: Toshiba TY-LP100 Turntable actively playing a vinyl record.



Image: Toshiba TY-LP100 Turntable positioned on a wooden cabinet, showcasing its design.

Key Features:

- **Belt Drive Turntable:** Ensures stable rotation for optimal sound reproduction.
- **Variable Speed Playback:** Supports 33 1/3, 45, and 78 RPM records.
- **Built-in Stereo Speakers:** Provides direct audio output without external speakers.
- **Bluetooth 3.0 Connectivity:** Allows wireless streaming from compatible devices.
- **Vinyl-to-Digital Encoder:** Convert analog records to digital audio files via USB.
- **Auxiliary Input:** Connect external audio sources.
- **Dust Cover:** Protects the platter and stylus from dust.

Setup Instructions

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts are present: turntable unit, dust cover, power adapter, and user manual.
2. **Placement:** Place the turntable on a stable, level surface away from direct sunlight, heat sources, and excessive vibration.
3. **Dust Cover Installation:** Gently attach the dust cover to the hinges at the rear of the turntable.
4. **Power Connection:** Connect the power adapter to the DC IN port on the turntable and then plug it into a standard wall outlet.
5. **Initial Inspection:** Before first use, ensure the stylus protector is removed from the needle and the tonearm is properly balanced.

Operating Instructions

Playing Vinyl Records

1. **Power On:** Press the Power button to turn on the turntable.
2. **Select Speed:** Choose the appropriate speed (33, 45, or 78 RPM) using the speed selector switch, matching the record you intend to play. For 45 RPM records, place the included 45 RPM adapter on the spindle.
3. **Place Record:** Carefully place your vinyl record on the turntable platter.
4. **Tonearm Operation:**
 - Release the tonearm lock.
 - Lift the tonearm using the cueing lever.
 - Position the tonearm over the desired starting groove of the record.
 - Gently lower the tonearm using the cueing lever. The stylus will make contact with the record, and playback will begin.
5. **Adjust Volume:** Use the volume control knob to set the desired listening level.
6. **Stopping Playback:** At the end of the record, the tonearm may automatically return to its rest position. Lift the tonearm using the cueing lever, return it to the tonearm rest, and secure it with the lock.

Bluetooth Pairing

1. **Activate Bluetooth Mode:** Press the Function button until the Bluetooth indicator light flashes, indicating pairing mode.
2. **Enable Bluetooth on Device:** On your smartphone, tablet, or other Bluetooth-enabled device, enable Bluetooth and search for available devices.
3. **Select Turntable:** Select "TY-LP100" from the list of found devices. Once paired, the Bluetooth indicator light will become solid.
4. **Play Music:** You can now stream audio from your paired device through the turntable's speakers.

Recording Vinyl to USB (Encoder Function)

1. **Insert USB Drive:** Insert a USB flash drive into the USB port on the turntable. Ensure the USB drive is formatted to FAT32.
2. **Prepare Record:** Place the record you wish to convert on the platter and start playback as described in "Playing Vinyl Records."
3. **Start Recording:** Press the "Record" button. The recording indicator will illuminate, signifying that recording has begun.
4. **Stop Recording:** To stop recording, press the "Record" button again. The recording indicator will turn off. The recorded audio file will be saved to your USB drive.
5. **File Management:** Recorded files are typically saved in MP3 format. You may need to use computer software to split tracks or edit metadata.

Using the AUX Input

Connect an external audio device (e.g., MP3 player, CD player) to the AUX IN port on the turntable using a 3.5mm audio cable. Select the AUX function on the turntable. Audio from the external device will play through the turntable's speakers.

Maintenance

- **Cleaning the Stylus:** Gently clean the stylus regularly using a soft brush designed for stylus cleaning, brushing from back to front. Avoid touching the stylus with your fingers.
- **Cleaning the Platter and Dust Cover:** Use a soft, dry, lint-free cloth to wipe the platter and dust cover. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth. Avoid harsh chemicals.
- **Unit Cleaning:** Wipe the main unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Record Care:** Keep your vinyl records clean and stored vertically in their sleeves to prevent dust accumulation and warping.

Troubleshooting

Problem	Possible Cause	Solution
No power	Power adapter not connected or outlet not active.	Ensure the power adapter is securely connected to the turntable and a working power outlet.
No sound from speakers	Volume too low; incorrect function selected; stylus protector still on.	Increase volume. Ensure the correct input mode (Phono, Bluetooth, AUX) is selected. Remove the stylus protector.
Record skips or sound distortion	Dirty record; dirty or damaged stylus; turntable not level; excessive vibration.	Clean the record. Clean or replace the stylus. Place the turntable on a stable, level surface. Avoid placing near speakers or vibrating objects.
Bluetooth pairing fails	Turntable not in pairing mode; device too far; interference.	Ensure the turntable is in Bluetooth pairing mode (flashing indicator). Move the device closer to the turntable. Reduce interference from other wireless devices.
USB recording issues	USB drive not formatted correctly; USB drive full; recording not initiated.	Ensure USB drive is FAT32 formatted. Check available space on the USB drive. Press the "Record" button to start recording.

Technical Specifications

Brand	TOSHIBA
Model	TY-LP100
Product Dimensions	42.67 x 7.87 x 34.29 cm (16.8 x 3.1 x 13.5 inches)
Item Weight	4.45 kg (9.81 lbs)
Rotational Speeds	33 1/3, 45, 78 RPM
Connectivity	Bluetooth, USB, AUX Input
Special Features	AUX Input, Built-In Speaker, Vinyl-to-Digital Encoder
Power Source	Corded Electric
Material	Plastic

Warranty and Support

For warranty information and technical support, please refer to the warranty card included with your product or visit the official TOSHIBA website. Keep your purchase receipt as proof of purchase for any warranty claims. For further assistance, you may contact TOSHIBA customer service through their official channels.