

Anderic RR7083T

Anderic RR7083T Remote Control Instruction Manual

For 3-Speed Ceiling Fans

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Anderic RR7083T Remote Control. This remote is designed as a direct replacement for original Hampton Bay UC7083T and other compatible ceiling fan remotes, offering seamless control over your fan's speed and lighting functions.

The Anderic RR7083T is compatible with ceiling fans that have the receiver already installed, specifically models using FAN28R and UC7067FMRX receivers.

PRODUCT OVERVIEW



Figure 1: Anderic RR7083T Remote Control. This image shows the black remote control with silver buttons for Light, High, Medium, Low, and Off fan speeds. The Anderic logo and model number RR7083T are visible at the bottom.

Key Features:

- Seamless replacement for original Hampton Bay UC7083T remotes.
- Easy dip-switch setup for quick pairing.
- Controls fan speeds (High, Medium, Low, Off) and light (On/Off).
- Ergonomic design for comfortable use.
- Compatible with FAN28R and UC7067FMRX receivers.

SETUP AND INSTALLATION

1. Battery Installation

The Anderic RR7083T remote requires one CR123A battery (not included). To install the battery:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off to open the compartment.
3. Insert one CR123A battery, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover.

2. Dip Switch Matching

For the remote to communicate with your ceiling fan receiver, the dip switches on the remote must match those on your fan's receiver. The receiver is typically located in the canopy of the ceiling fan, near the ceiling.

1. Access the dip switches on your existing ceiling fan receiver. Make a note of their ON/OFF (or UP/DOWN) positions. There are typically four switches.
2. Open the battery compartment of your Anderic RR7083T remote control.
3. Locate the four dip switches inside the remote's battery compartment.
4. Adjust the switches on the Anderic remote to exactly match the positions of the switches on your fan's receiver. A switch in the 'ON' or 'UP' position can be represented as '1', and 'OFF' or 'DOWN' as '0'.
5. If you cannot access your fan's receiver, you may need to try all 16 possible combinations until the remote pairs with your fan.

0000, 0001, 0010, 0011
0100, 0101, 0110, 0111
1000, 1001, 1010, 1011
1100, 1101, 1110, 1111

(Where '1' indicates the switch is ON/UP and '0' indicates OFF/DOWN for switches 1, 2, 3, and 4 respectively.)

6. Once the switches are matched, replace the battery compartment cover.

Important Note:

Ensure the power to the ceiling fan is off before attempting to access the receiver's dip switches. Consult your ceiling fan's manual for specific instructions on accessing its receiver.

OPERATING INSTRUCTIONS

Once the remote is set up, you can control your ceiling fan and light using the following buttons:

Button	Function
Light (Bulb Icon)	Turns the fan light ON or OFF. For proper dimming, use incandescent bulbs. Non-compliant bulbs may not dim correctly.
HI	Sets the fan speed to High.
MED	Sets the fan speed to Medium.
LOW	Sets the fan speed to Low.
OFF	Turns the fan OFF.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- **Battery Replacement:** Replace the CR123A battery when the remote's performance degrades or it stops responding. Ensure proper polarity during replacement.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed battery.	Replace the CR123A battery, ensuring correct polarity.
Remote not controlling fan/light.	Dip switches do not match the receiver.	Verify and match the dip switch settings on the remote to those on the fan's receiver. Refer to "Setup and Installation" section.
Light not dimming properly.	Non-incandescent bulbs are used.	Ensure incandescent bulbs are used for dimming functionality.
Interference or erratic behavior.	Other devices operating on similar frequencies.	Try changing the dip switch combination on both the remote and the receiver (if possible) to a new, unused setting.

SPECIFICATIONS

- **Model Number:** RR7083T
- **Dimensions:** 5.5 x 3 x 1 inches
- **Weight:** 0.01 ounces
- **Battery Type:** 1 x CR123A (not included)
- **Compatible Receivers:** FAN28R, UC7067FMRX
- **Manufacturer:** Dan's Electronics Etc., Inc.
- **Color:** Black/Silver
- **Special Feature:** Ergonomic

WARRANTY AND SUPPORT

Warranty Information

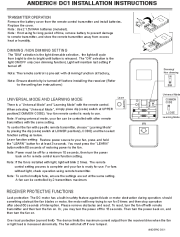 
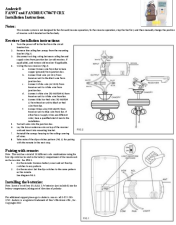 
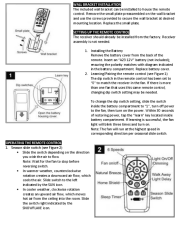 
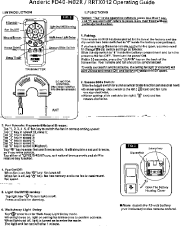 
The Anderic RR7083T Remote Control comes with a **1-YEAR replacement warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact Anderic customer support. Visit the official Anderic website or refer to your product packaging for the most current contact information. You can also visit the [Anderic Store on Amazon](#) for more information and products.



Related Documents

	<p>Anderic DC1 Ceiling Fan Remote Control Installation Instructions</p> <p>Comprehensive installation guide for the Anderic DC1 ceiling fan remote control, covering transmitter operation, mode settings, protective functions, and fan speed/light controls. Includes details on universal and learning modes, dimming, and FCC compliance.</p>
	<p>Anderic FAN9T and FAN28R/UC7067FCRX Installation Instructions</p> <p>Detailed installation guide for the Anderic FAN9T and FAN28R/UC7067FCRX ceiling fan remote control system, including receiver wiring, remote pairing, and battery installation.</p>
	<p>Anderic RRTX012 Remote Control Operating Instructions</p> <p>Operating instructions for the Anderic RRTX012 ceiling fan remote control, covering wall bracket installation, remote setup, battery installation, pairing, and detailed operation of fan speeds, natural breeze, light functions, walk-away light delay, home shield, sleep timer, and power off memory.</p>
	<p>Anderic FD40-H02R / RRTX012 Ceiling Fan Remote Control Operating Guide</p> <p>This guide provides operating instructions for the Anderic FD40-H02R / RRTX012 ceiling fan remote control, covering functions like fan speed, light control, timers, and installation.</p>