Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Anderic /
- Anderic RR7087TR Remote Control User Manual

Anderic UC7087T

Anderic RR7087TR Remote Control User Manual

Model: UC7087T

INTRODUCTION

This user manual provides detailed instructions for the Anderic RR7087TR thermostatic remote control, designed to replace original Hampton Bay and Harbor Breeze ceiling fan remotes. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance of your ceiling fan system.

The RR7087TR remote control is engineered to work seamlessly with compatible ceiling fan models, offering comprehensive control over fan speeds, lighting (with dimming), and temperature settings. It includes dedicated buttons for reverse, light delay, fan auto, and light timer functions.

PRODUCT OVERVIEW



Front view of the Anderic RR7087TR remote control, showcasing its ergonomic design, circular display for temperature and fan settings, and clearly labeled buttons for fan speed, light, reverse, and timer functions.



The Anderic RR7087TR remote control in use, demonstrating its compatibility and ease of operation with a ceiling fan. The image highlights the remote's sleek appearance and its function in a typical home environment.

SETUP

What's Included

- Anderic RR7087TR Thermostatic Remote Control
- Wall Mount Bracket (with two screws for mounting)

Battery Installation

The remote control requires 4 AAA batteries (not included). To install:

- 1. Open the battery compartment cover on the back of the remote.
- 2. Insert 4 AAA batteries, ensuring correct polarity (+ and -).
- 3. Close the battery compartment cover securely.

Dip-Switch Alignment

For the remote to communicate with your ceiling fan receiver, you must align its dip-switches to match the pattern of your existing ceiling fan receiver. This process ensures proper synchronization.

- 1. Locate the dip-switches inside the battery compartment of the RR7087TR remote.
- 2. Identify the dip-switches on your ceiling fan receiver (refer to your fan's manual if needed).
- 3. Adjust the switches on the RR7087TR remote to exactly match the ON/OFF pattern of your ceiling fan receiver's dipswitches.
- 4. Once matched, the remote should operate your fan without further programming.

Important Note:

Warning: Make sure you are using Incandescent bulbs if you intend to use the dimming function. Other bulb types may not dim properly.

Compatibility: This remote will not fully work for Windward III Fans (it will not control uplights). If your original Hampton Bay remote model is CHQ8BT7096T with a RED light button, this replacement remote will not control the lights.

OPERATING INSTRUCTIONS

The Anderic RR7087TR remote control provides comprehensive control over your ceiling fan and its integrated lighting. Below are the functions of each button:

Button/Function	Description
Fan Off	Turns the ceiling fan off.
Fan Speed Low	Sets the fan speed to low.
Fan Speed Medium	Sets the fan speed to medium.
Fan Speed High	Sets the fan speed to high.
Down-lights (with dimming)	Controls the fan's down-lights. Press and hold to dim or brighten the lights.
Reverse	Changes the direction of the fan blades, useful for seasonal air circulation (clockwise for winter, counter-clockwise for summer).
Light Delay	Activates a delay before the lights turn off, allowing time to exit the room.
Fan Auto	Engages automatic fan operation, often based on temperature settings.
Light Timer	Sets a timer for the lights to turn off automatically after a specified duration.
Temp/Set Hour	Adjusts temperature settings or sets the hour for timer functions.

The remote also features a thermostatic display, allowing you to monitor and adjust room temperature settings for optimal comfort when using the Fan Auto function.

MAINTENANCE

- Cleaning: Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Battery Replacement: Replace batteries when the remote's performance diminishes or the display becomes dim. Always replace all batteries at the same time with new ones of the same type.
- Storage: If storing the remote for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not operating fan/light.	 Check battery installation and ensure batteries are fresh. Verify that the dip-switches on the remote match those on the ceiling fan receiver. Ensure the remote is within range of the receiver.
Lights not dimming properly.	 Confirm that incandescent bulbs are being used. Other bulb types (e.g., LED, CFL) may not be compatible with the dimming function.
Reverse function not working.	 Ensure your ceiling fan receiver (e.g., UC7067REVB) supports the reverse module. Some fans require the fan to be completely stopped before the reverse function can engage.
Remote does not control lights on Windward III fans or CHQ8BT7096T (red light button) remotes.	 This is a known compatibility limitation. The RR7087TR remote is not designed to control uplights on Windward III fans or the specific light function of the CHQ8BT7096T remote with a red light button.

SPECIFICATIONS

Model Number: UC7087T (Anderic RR7087TR) **Product Dimensions:** 5.5 x 3 x 1.5 inches

Item Weight: 3.2 ounces

3

Batteries Required: 4 AAA batteries

Compatible Receivers (not limited to): UC7067FCRX, UC70960TX, UC7067REVB (reverse module)

Color: Silver

Special Feature: Ergonomic design

Max Number of Supported Devices: 1

Compatible Devices: Ceiling Fan Receiver

WARRANTY AND SUPPORT

Warranty Information

The Anderic RR7087TR remote control comes with a **1-Year Replacement Warranty** from the date of purchase. This warranty covers manufacturing defects and ensures your satisfaction with the product.

Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact Anderic customer support. Visit the official Anderic website for contact details and additional resources.

You can find more information and products from Anderic by visiting theirAnderic Store on Amazon.

© 2023 Anderic. All rights reserved.

Manufactured by Dan's Electronics Etc., Inc.

Related Documents - UC7087T



Anderic DC1 Ceiling Fan Remote Control Installation Instructions

Comprehensive installation guide for the Anderic DC1 ceiling fan remote control, covering transmitter operation, mode settings, protective functions, and fan speed/light controls. Includes details on universal and learning modes, dimming, and FCC compliance.



ANDERIC® RRTX001R Remote Control User Manual

User manual for the ANDERIC® RRTX001R Remote Control, detailing battery installation, pairing instructions, product functions, and wall mount bracket installation.



Anderic Universal Thermostatic Ceiling Fan Remote Control Kit Installation and Use Guide

Comprehensive guide for installing and operating the Anderic HD3 Universal Thermostatic Ceiling Fan Remote Control Kit, including safety information, troubleshooting, and warranty details.



RR1002 Universal Remote Control User Manual

User manual for the RR1002 Universal Remote Control, providing instructions on programming, code input, shortcut key usage, learning function, code identification, factory reset, setting the sleep timer, and setup lock.



Anderic FAN9T and FAN28R/UC7067FCRX Installation Instructions

Detailed installation guide for the Anderic FAN9T and FAN28R/UC7067FCRX ceiling fan remote control system, including receiver wiring, remote pairing, and battery installation.



Anderic UC7058RY Ceiling Fan Receiver Installation Guide

Detailed installation and pairing instructions for the Anderic UC7058RY ceiling fan receiver. Includes notes on compatibility with Anderic RR7078TR and RR7083TR remotes. Provides step-by-step guidance for setup and remote synchronization.