

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Casio](#) /
- › [Casio Edifice 5150 Chronograph Watch User Manual](#)

Casio 5150

Casio Edifice 5150 Chronograph Watch User Manual

Model: 5150

INTRODUCTION

Thank you for choosing the Casio Edifice 5150 Chronograph Watch. This manual provides essential information for the proper use and care of your timepiece. Please read it thoroughly to ensure optimal performance and longevity of your watch.



Image: Casio Edifice 5150 Chronograph Watch, featuring a black dial with three sub-dials and a black leather strap.

The Casio Edifice 5150 is a robust chronograph watch designed for precision and style. Key features include 100-meter water resistance, a 1-second chronograph with a measuring capacity of 29 minutes and 59 seconds, and a durable mineral glass crystal. The watch features a black face with three functional dials and a comfortable black leather band, making it a prominent accessory on your wrist.

SETUP

1. Setting the Time

1. Pull the crown out to the second click. The second hand will stop at the 12 o'clock position.
2. Rotate the crown to set the hour and minute hands. Ensure the AM/PM is correctly set if your watch has a 24-hour indicator or date changes at midnight.

3. Push the crown back in to the normal position. The second hand will resume movement.

2. Setting the Date

1. Pull the crown out to the first click.
2. Rotate the crown to set the date. Avoid setting the date between 9 PM and 1 AM, as this may interfere with the automatic date change mechanism.
3. Push the crown back in to the normal position.

3. Chronograph Reset (Zero Position Adjustment)

If the chronograph hands are not at their 12 o'clock zero positions when reset, they can be adjusted:

1. Pull the crown out to the second click.
2. Press Button A (usually top right) to advance the chronograph second hand.
3. Press Button B (usually bottom right) to advance the chronograph minute hand.
4. Adjust until all chronograph hands are aligned at the 12 o'clock position.
5. Push the crown back in to the normal position.

OPERATING INSTRUCTIONS

1. Basic Timekeeping

Your watch displays hours, minutes, and seconds, along with the date. Ensure the crown is fully pushed in for accurate timekeeping and water resistance.

2. Using the Chronograph

The 1-second chronograph measures elapsed time up to 29 minutes and 59 seconds.

1. **Start:** Press Button A to start the chronograph.
2. **Stop:** Press Button A again to stop the chronograph.
3. **Reset:** After stopping, press Button B to reset the chronograph hands to their 12 o'clock zero positions.
4. **Split Time:** While the chronograph is running, press Button B to measure split times. Press Button B again to release the split time and display the current elapsed time. Press Button A to stop, then Button B to reset.

MAINTENANCE

1. Water Resistance

This watch is water resistant to 100 meters (10 ATM). This means it is suitable for swimming and snorkeling, but not for scuba diving. Always ensure the crown is fully pushed in before exposing the watch to water. Do not operate the crown or buttons while the watch is wet or submerged.

2. Cleaning

- Wipe the watch case and crystal with a soft, dry cloth.
- For the leather band, wipe gently with a slightly damp cloth and allow it to air dry completely. Avoid excessive moisture, direct sunlight, and harsh chemicals, which can damage the leather.
- If the watch has been exposed to saltwater, rinse it with fresh water and dry thoroughly.

3. Battery Replacement

The watch uses an SR621SW battery with an approximate life of 2 years. When the battery runs low, the second hand may start moving at two-second intervals. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

4. General Care

- Avoid exposing the watch to extreme temperatures, strong magnetic fields, or strong vibrations.
- Keep the watch away from solvents, detergents, perfumes, and cosmetics, as these can damage the case, band, or gaskets.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped or is running erratically.	Low battery.	Replace the battery (refer to Maintenance section).
Time is incorrect.	Crown is not fully pushed in; Time was not set correctly.	Push the crown fully in. Reset the time (refer to Setup section).
Date is incorrect.	Date was not set correctly; Date was set during restricted hours.	Reset the date (refer to Setup section). Avoid setting between 9 PM and 1 AM.
Chronograph hands do not reset to 12 o'clock.	Chronograph hands are misaligned.	Perform chronograph zero position adjustment (refer to Setup section).
Condensation inside the watch.	Exposure to extreme temperature changes; Crown not fully pushed in when exposed to water.	Seek professional service immediately to prevent damage. Ensure crown is always fully pushed in.

SPECIFICATIONS

Model Number: 5150

Brand: Casio

Display Type: Multi-analog

Movement: Quartz

Water Resistance: 100 meters (10 ATM)

Chronograph: 1-second, measuring capacity 29'59"

Accuracy: +/- 20 seconds per month

Crystal Material: Mineral Glass

Case Material: Stainless Steel

Case Diameter: 45 mm

Case Thickness: 13 mm

Case Shape: Round

Band Material: Leather

Band Color: Black

Band Width: 1 inch

Clasp: Deployment Buckle

Dial Color: Black

Battery Type: SR621SW

Approximate Battery Life: 2 years

WARRANTY AND SUPPORT

Warranty information for your Casio Edifice 5150 watch is typically provided with your purchase documentation. Please refer to the warranty card or leaflet included in the original packaging for details regarding coverage, terms, and conditions.

For technical support, service, or inquiries not covered in this manual, please contact your authorized Casio dealer or visit the official Casio website for customer service contact information in your region. Keep your purchase receipt and warranty card handy when seeking support.