

[Manuals.plus](#) /

› [NEEWER](#) /

› NEEWER Mini Travel Tabletop Camera Tripod T210 Instruction Manual

NEEWER T210

NEEWER Mini Travel Tabletop Camera Tripod T210 Instruction Manual

Model: T210 | Item Model Number: 10090907

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your NEEWER Mini Travel Tabletop Camera Tripod T210. Please read this manual thoroughly before operating the product and retain it for future reference.



Image 1.1: The NEEWER Mini Travel Tabletop Camera Tripod T210 in its standard configuration.

2. SAFETY INFORMATION

- Do not exceed the maximum load capacity of 6.6 pounds (3 kilograms). Overloading can cause instability and damage to the tripod or attached equipment.

- Ensure all locks and adjustments are securely tightened before leaving equipment unattended.
- Avoid using the tripod in extreme weather conditions (e.g., strong winds, heavy rain) without proper precautions.
- Keep the tripod away from children to prevent accidents.
- Do not attempt to disassemble or modify the tripod beyond the instructions provided in this manual.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x NEEWER Mini Desktop Tripod (Model T210)
- 1 x Carrying Bag

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of the NEEWER Mini Travel Tabletop Camera Tripod T210:



Image 4.1: Labeled diagram of the tripod's key components.

1. **Multi-function Head:** The platform where your camera or device attaches, offering various adjustments.
2. **Horizontal Rotation Lock Knob:** Secures the head's horizontal panning movement.
3. **Handle:** Used to control the pan and tilt movements of the head.
4. **Pitch Adjustment Lever:** Controls the vertical tilt (pitch) of the camera.
5. **Height Adjustment Buckle:** Locks and unlocks the leg sections for height adjustment.
6. **Aluminum Alloy Material:** Indicates the primary construction material for durability.
7. **Rotatable Plastic Feet:** Provides stability on various surfaces and can be adjusted for uneven ground.
8. **Multi-function Hook:** Located at the bottom of the center column, used for hanging additional weight to enhance stability.

5. SETUP

Follow these steps to set up your tripod:

1. **Unfold the Tripod:** Gently spread the tripod legs until they are fully extended and locked into position.
2. **Adjust Leg Height:** Unlock the height adjustment buckles on each leg. Extend the leg sections to your desired height and securely close the buckles. Ensure all legs are extended evenly for stability.
3. **Extend Center Column (Optional):** For additional height, rotate the knob at the base of the center column counter-clockwise to loosen it. Pull the center column upwards to the desired height, then rotate the knob clockwise to secure it.
4. **Attach Your Device:**
 - Locate the quick release plate on the multi-function head.
 - Attach the quick release plate to the bottom of your camera or device by screwing it into the 1/4-inch thread. Ensure it is tightened securely.
 - Slide the quick release plate with your device into the multi-function head until it clicks into place. Secure any additional locking levers on the head.



Note: Camera is NOT included.

Image 5.1: Examples of a DSLR camera mounted on the tripod in different positions.

6. OPERATING

This section details how to operate the tripod for various shooting needs.

6.1 Height Adjustment

The tripod offers flexible height adjustments:

- **Leg Sections:** Each leg features flip-locks to extend or retract sections. Unlock, adjust, and relock each section for desired height.
- **Center Column:** The central column can be extended for additional height. Loosen the locking knob, raise the column, and tighten the knob to secure.



Image 6.1: The tripod demonstrating its adjustable height range from 12.6 inches to 24.4 inches.

6.2 Head Adjustments (Pan and Tilt)

The 3-way swivel pan head allows for precise camera positioning:

- **Horizontal Panning (360°):** Loosen the horizontal rotation lock knob. Rotate the handle to achieve a 360-degree panoramic view. Tighten the knob to lock the position.
- **Vertical Tilting (180°):** Loosen the pitch adjustment lever. Adjust the camera's vertical angle (up or down) by moving the handle. Tighten the lever to secure the tilt.



Image 6.2: Visual representation of the tripod head's 360° horizontal rotation and 180° vertical tilt capabilities.

6.3 Enhancing Stability

For increased stability, especially in windy conditions or with heavier equipment:

- **Multi-function Hook:** Utilize the hook located at the bottom of the center column to hang a weight (e.g., a camera bag, sandbag). This lowers the center of gravity and improves stability.



NOTE: Only Mini Tripod is included.

Image 6.3: The tripod shown with a smartphone and demonstrating its portability when attached to a backpack.

7. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your tripod:

- **Cleaning:** Wipe down the tripod with a soft, dry cloth after each use to remove dust and dirt. For stubborn grime, use a slightly damp cloth and then dry thoroughly. Avoid harsh chemicals or abrasive cleaners.
- **Lubrication:** Moving parts, such as leg locks and the center column mechanism, generally do not require lubrication. If movement becomes stiff, consult professional service.
- **Storage:** Store the tripod in its carrying bag in a cool, dry place away from direct sunlight and extreme temperatures. Ensure it is fully collapsed and all locks are gently secured before storage.

8. TROUBLESHOOTING

If you encounter issues with your tripod, refer to the following common problems and solutions:

- **Issue: Tripod is unstable.**

Solution: Ensure all leg sections are fully extended and their flip-locks are securely closed. Verify that the center column locking knob is tightened. If using on uneven ground, adjust individual leg lengths. Consider hanging a weight from the multi-function hook.

- **Issue: Camera is not level.**

Solution: Check the bubble level on the tripod head (if present). Ensure the quick release plate is securely attached to both the camera and the tripod head. Adjust the pitch and horizontal rotation of the head as needed, then tighten the respective levers/knobs.

- **Issue: Leg sections are difficult to extend or retract.**

Solution: Ensure the flip-locks are fully open. Clean any dirt or debris from the leg sections. If the issue persists, avoid forcing the mechanism.

- **Issue: Head movements are not smooth.**

Solution: Ensure the horizontal rotation lock knob and pitch adjustment lever are sufficiently loosened for movement. If there is resistance, check for any obstructions or debris.

9. SPECIFICATIONS

Feature	Specification
Brand	NEEWER
Model Name	T210
Item Model Number	10090907
Material	Aluminum Alloy + ABS Plastic
Head Type	3-Way Swivel Pan Head
Maximum Height	24.4 inches (62 centimeters)
Minimum Height	12.6 inches (32 centimeters)
Tripod Weight	1.6 pounds (0.73 Kilograms)
Load Capacity	6.6 pounds (3 Kilograms)
Tilt Range	180 degrees
Panning Range	360 degrees
Color	Black
Compatible Devices	DSLR Cameras, Smartphones, DV Video Cameras

10. WARRANTY AND SUPPORT

NEEWER products are designed for reliability and performance. For specific warranty details, please refer to the warranty card included with your purchase or visit the official NEEWER website. For technical support, product inquiries, or service, please contact NEEWER customer service through their official channels.

Online Resources: For additional information, FAQs, and product registration, please visit the [NEEWER Store on Amazon](#).

