

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bose](#) /
- › [Bose SoundSport Free True Wireless Earbuds Instruction Manual](#)

Bose 774373-0010

Bose SoundSport Free True Wireless Earbuds Instruction Manual

MODEL: 774373-0010

Introduction

The Bose SoundSport Free True Wireless Earbuds offer complete freedom of movement with no wires, designed for active lifestyles. They deliver clear and powerful sound, motivating you through workouts and sports activities. Featuring Bluetooth technology for reliable music streaming, these earbuds are built to stay comfortably in place even during intense training. Water-repellent materials ensure durability against sweat and weather.



A close-up view of the black Bose SoundSport Free True Wireless Earbuds, highlighting their sleek design and the Bose logo.

What's in the Box

- SoundSport Free wireless headphones
- USB cable
- Charging case

Setup

Charging

The earbuds play for up to five hours on a single charge. The fully charged case provides an additional 10 hours of music. When not in use, the charging case features built-in magnets to securely hold the earbuds.

Pairing

These earbuds utilize Bluetooth technology for wireless communication. Ensure your device is Bluetooth-enabled for seamless connection.

Fitting the Earbuds

StayHear Sport tips are designed to remain comfortably in place, even during rigorous training. Select the appropriate ear tip size for a secure fit.



The Bose SoundSport Free earbuds are shown nestled within their compact charging case, with indicator lights visible, signifying their charging status.

Operating Instructions

Controls

Play or pause tracks and access your phone's Siri or Google Assistant directly from the earbud. You can also take phone calls through the right earbud only.

Battery Life

Enjoy up to 5 hours of listening time on a single charge. The charging case extends this to a total of 15 hours (5 hours from earbuds + 10 hours from case).



A woman is shown wearing the Bose SoundSport Free earbuds during a workout, demonstrating their secure fit and suitability for sports activities.

Maintenance

Water Resistance and Cleaning

The earbuds feature water-repellent materials inside, protecting them from moisture, sweat, and light rain. They have an IPX4 rating, allowing them to be rinsed under running water to clean off sweat and debris. Ensure they are completely dry before placing them back in the charging case.



A hand holds a Bose SoundSport Free earbud under running water from a faucet, illustrating its water-repellent design for easy cleaning after workouts.

Troubleshooting

Lost Earbuds

If an earbud is misplaced, use the Bose Connect app's 'Find My Buds' feature. It displays the last known connection location and can emit an audio signal to help locate them.

Connectivity Issues

Bluetooth technology ensures reliable and consistent music playback. If experiencing issues, ensure your device's Bluetooth is enabled and the earbuds are within range.

Specifications

Feature	Detail
Model Name	SoundSport Free
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth
Charging Time	2 Hours
Battery Life (Earbuds)	5 Hours
Carrying Case Battery Average Life	10 Hours (additional)
Water Resistance Level	Water Repellent (IPX4)
Item Weight	0.02 Kilograms (0.634 ounces)
Product Dimensions	1.2 x 1 x 1.25 inches

Warranty and Support

For detailed warranty information and further support, please refer to the official Bose website or the [User Guide \(PDF\)](#).

Visit the [Bose Store](#) for additional product information and customer service.