

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [AEG](#) /

> [AEG VX6-2-IW-5 Vacuum Cleaner User Manual](#)

AEG VX6-2-IW-5

AEG VX6-2-IW-5 Vacuum Cleaner User Manual

Model: VX6-2-IW-5

1. IMPORTANT SAFETY INSTRUCTIONS

Before using the appliance, read these safety instructions carefully. Keep them for future reference. The appliance is designed for domestic use only.

- **Never vacuum liquids:** Do not use the vacuum cleaner to pick up water or any other liquids. This can cause electric shock or damage to the appliance.
- **Avoid flammable substances:** Never use the vacuum cleaner near flammable or combustible substances, such as gasoline, or in areas where they may be present.
- **Hose inspection:** Regularly check the hose for damage. Do not use the appliance if the hose is damaged.
- **Electrical safety:** Ensure the power cord is not damaged. If the cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- **Children and supervision:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

2. PRODUCT OVERVIEW

The AEG VX6-2-IW-5 is a powerful and maneuverable bagged vacuum cleaner designed for efficient cleaning on various floor types. It features 360° rotating wheels, an ergonomic handle, and a 9-meter operating radius.



Image: Top view of the AEG VX6-2-IW-5 vacuum cleaner, highlighting the power button, cord rewind button, and suction control dial. The 'OPEN' latch for bag access is also visible.



Image: The AEG VX6-2-IW-5 vacuum cleaner fully assembled with its flexible hose, telescopic tube, and standard floor nozzle, ready for use.

3. SETUP AND ASSEMBLY

1. **Unpack Components:** Carefully remove all components from the packaging. Ensure all included items are present: the main vacuum unit, hose, telescopic tube, DustPro floor nozzle, joint and upholstery nozzle, 5 Classic Long Performance dust bags, and the washable Hygiene Filter (pre-installed).
2. **Attach the Hose:** Insert the hose connector firmly into the suction inlet on the main vacuum unit until it clicks into place.
3. **Assemble the Telescopic Tube:** Connect the telescopic tube to the handle end of the hose. Adjust the length of the telescopic tube by pressing the release button and sliding it to your desired height.
4. **Attach the Floor Nozzle:** Connect the DustPro floor nozzle to the end of the telescopic tube. Ensure it is securely attached.
5. **Install Dust Bag and Filter:** The vacuum cleaner comes with a dust bag and washable Hygiene Filter pre-

installed. To check or replace, open the 180° access lid on the top of the unit. Refer to the 'Maintenance' section for detailed instructions on replacing the dust bag and cleaning the filter.

6. **Attach Accessories:** The 2-in-1 joint and upholstery nozzle can be attached to the handle for convenient access during cleaning.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Off

1. **Connect to Power:** Extend the power cord and plug it into a suitable electrical outlet. The vacuum has a 9-meter action radius for multi-room cleaning.
2. **Power On:** Press the power button (marked with 'I') located on the top of the vacuum cleaner.
3. **Power Off:** Press the power button again to turn off the appliance.
4. **Cord Rewind:** After use, press the cord rewind button (marked with a plug symbol) to automatically retract the power cord.

4.2 Suction Control

The vacuum cleaner features continuous suction control, allowing you to adjust the suction power for different cleaning tasks and surfaces.



Image: A hand rotating the central dial on the vacuum cleaner, which controls the suction power. The dial has '+' and '-' indicators for increasing or decreasing suction.

- **Adjusting Suction:** Rotate the central dial on the top of the unit to increase or decrease suction power.
- **Recommended Settings:** For general cleaning, adjust the dial to a comfortable level. For delicate surfaces or light fabrics, reduce suction. For heavily soiled carpets or hard floors, increase suction.

4.3 Cleaning Performance

The powerful motor and high-efficiency floor nozzle ensure thorough cleaning results on both hard floors and carpets.



Image: The floor nozzle of the AEG VX6-2-IW-5 vacuum cleaner effectively picking up scattered debris from a dark wooden floor, demonstrating its cleaning capability.

180° ACCESS™

s.bag®
LARGE BAG CAPACITY

AEG



VX6 | X FORCE



▲ OPEN ▲

Image: A person using the AEG VX6-2-IW-5 vacuum cleaner to clean a light-colored carpet in a modern living room, with the vacuum unit positioned on the floor.

- **Hard Floors:** Use the DustPro floor nozzle with the brush setting engaged (if applicable) for optimal cleaning on hard surfaces.
- **Carpets:** For carpets, ensure the brush setting is retracted (if applicable) to allow for maximum suction and smooth gliding.
- **Maneuverability:** The 360° rotating soft wheels and ergonomic handle provide excellent mobility, allowing you to navigate around furniture and obstacles with ease.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

5.1 Dust Bag Replacement

The vacuum cleaner uses 3.5-liter Classic Long Performance dust bags. Replace the dust bag when the dust bag indicator is full or when suction power noticeably decreases.

1. **Access the Dust Bag:** Ensure the vacuum cleaner is unplugged. Press the 'OPEN' latch on the top of the unit to lift the 180° access lid.
2. **Remove Old Bag:** Carefully pull the cardboard collar of the full dust bag upwards to seal the opening and remove it from the bag holder. Dispose of the bag responsibly.
3. **Insert New Bag:** Slide a new Classic Long Performance dust bag into the bag holder, ensuring the cardboard collar is fully seated.
4. **Close Lid:** Close the 180° access lid firmly until it clicks into place.



Image: A hand demonstrating the process of replacing a dust bag and the washable Hygiene Filter within the AEG VX6-2-IW-5 vacuum cleaner, with the top lid open.

5.2 Filter Cleaning and Replacement

The vacuum cleaner is equipped with a washable Allergy Plus Filter (HEPA Filter). Regular cleaning of the filter is crucial for maintaining suction power and air quality.

1. **Access the Filter:** With the 180° access lid open (as for dust bag replacement), locate the filter.
2. **Remove Filter:** Carefully lift the filter out of its compartment.
3. **Clean Filter:** Tap the filter gently over a waste bin to remove loose dust. If heavily soiled, rinse the filter under lukewarm running water. Do not use detergents.
4. **Dry Filter:** Allow the filter to air dry completely for at least 24 hours before reinserting. Do not dry in direct sunlight or with heat.
5. **Reinsert Filter:** Once completely dry, place the filter back into its compartment, ensuring it is correctly seated.
6. **Filter Replacement:** The Allergy Plus Filter should be replaced approximately once a year, or more frequently depending on usage. Use genuine AEG replacement filters (e.g., ASKVX8 performance kit).

5.3 Nozzle and Hose Cleaning

- **Floor Nozzle:** Periodically check the floor nozzle for tangled hair, threads, or debris. Remove any obstructions to ensure effective cleaning.
- **Hose:** Inspect the hose for blockages. If a blockage is suspected, disconnect the hose from the vacuum and carefully remove the obstruction using a blunt object. Never use sharp objects that could puncture the hose.

6. TROUBLESHOOTING

If you encounter issues with your AEG VX6-2-IW-5 vacuum cleaner, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No power	Power cord not plugged in; no power at outlet; damaged power cord.	Check power cord connection; test outlet with another appliance; contact service if cord is damaged.
Loss of suction	Dust bag full; filter clogged; hose or nozzle blocked.	Replace dust bag; clean/replace filter; check and clear blockages in hose/nozzle.
Unusual noise	Foreign object in fan or motor; blockage in hose/nozzle.	Turn off and unplug. Inspect for foreign objects. Clear any blockages. If noise persists, contact service.
Cord will not rewind	Cord is tangled or mechanism is jammed.	Pull out a small amount of cord and try rewinding again. Guide the cord manually if necessary. Do not force. If issue persists, contact service.

7. SPECIFICATIONS

Feature	Specification
Model Name	VX6-2-IW-5
Brand	AEG
Power Source	Corded Electric
Wattage	800 watts
Voltage	230 Volts
Amperage	3.48 Amps
Capacity	3.5 Liters (Dust Bag)
Filter Type	HEPA Filter (Washable Allergy Plus Filter)

Feature	Specification
Noise Level	76 Decibels
Surface Recommendation	Carpet, Hard Floor
Action Radius	9 meters
Item Weight	4.26 Kilograms
Item Dimensions (L x W x H)	17.36" x 11.54" x 9.37"
Number of Wheels	4 (360° rotating soft wheels)
Included Components	Floor Vacuum Cleaner VX6 with Pouch, DustPro Floor Nozzle, Washable Hygiene Filter, Joint and Upholstery Nozzle, 5 Classic Long Performance Dust Bags
Connectivity Technology	Wi-Fi (<i>Note: This feature may refer to internal system diagnostics or smart home integration, consult manufacturer for details</i>)

8. WARRANTY INFORMATION

AEG products are manufactured to high quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official AEG website. Keep your proof of purchase for any warranty claims.

9. CUSTOMER SUPPORT

For further assistance, technical support, or to order replacement parts and accessories, please contact AEG customer service. Contact details can typically be found on the official AEG website or in the documentation provided with your product.

- **Official Website:** www.aeg.com (Please check for your regional website)
- **Accessory Recommendation:** Performance kit ASKVX8, Dust bag GR201, SpeedyClean Hard Floor Nozzle AP350, BedPro Mattress Nozzle AZE123.