

[Manuals.plus](#) /

› [AEG](#) /

› AEG Ergorapido CX7-2-45AN 2-in-1 Cordless Vacuum Cleaner, Bagless, Pet Hair Nozzle, Up to 45 Minutes Running Time, Freestanding, 180° Swivel, Brush Cleaning Function, LED Light, Red, Exclusive to

AEG CX7-2-45AN

AEG Ergorapido CX7-2-45AN 2-in-1 Cordless Vacuum Cleaner User Manual

Model: CX7-2-45AN

INTRODUCTION

The AEG Ergorapido CX7-2-45AN is a versatile 2-in-1 cordless vacuum cleaner designed for efficient and flexible cleaning. It combines a powerful stick vacuum with a detachable handheld unit, offering convenience for various cleaning tasks around your home. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your vacuum cleaner.



Image: The AEG Ergorapido CX7-2-45AN vacuum cleaner, showcasing its upright form and the detachable handheld unit.

SAFETY INFORMATION

Please read all instructions carefully before using this appliance.

- This appliance is for household use only. Do not use it for any other purpose.
- Keep the appliance out of reach of children.
- Do not immerse the appliance in water or any other liquid.
- Do not pick up flammable or combustible materials, hot ashes, or sharp objects.
- Always ensure the charging station is placed on a stable, flat surface.
- Only use the original charger supplied with the appliance.

- Do not operate the vacuum cleaner if it is damaged or malfunctioning.
- Disconnect the charger from the power outlet before cleaning or performing maintenance.

PRODUCT OVERVIEW

Familiarize yourself with the components of your AEG Ergorapido CX7-2-45AN vacuum cleaner.

- **Main Unit:** The upright stick vacuum, housing the motor, dust container, and main battery.
- **Detachable Handheld Unit:** For quick clean-ups and hard-to-reach areas.
- **Floor Nozzle:** Equipped with a motor-powered electric suction brush and LED front lights.
- **Charging Station:** For convenient storage and charging.
- **Integrated Furniture Brush/Mini Crevice Nozzle:** Stored on the charging station for easy access.
- **Electric Suction Brush (for handheld):** Ideal for pet hair and upholstery.
- **Filter:** Washable filter system.



Image: The AEG Ergorapido CX7-2-45AN showing the main stick vacuum and the handheld unit detached, highlighting its 2-in-1 functionality.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts listed in the "Product Overview" section are present.
2. **Assembly:**
 - Attach the main stick handle to the vacuum body until it clicks into place.
 - Ensure the handheld unit is securely inserted into the main unit.
 - Place the charging station in a convenient location near a power outlet.
3. **Initial Charging:**

- Place the vacuum cleaner onto the charging station.
- Connect the charging station to a power outlet.
- Allow the vacuum to charge fully before first use. A full charge takes approximately 4 hours. The LED indicator lights will show charging status.



Image: An internal diagram illustrating the battery and power flow within the AEG Ergorapido CX7-2-45AN, relevant for understanding charging.

OPERATING INSTRUCTIONS

Using the Stick Vacuum

1. **Power On/Off:** Press the power button on the handle to turn the vacuum on or off.
2. **Power Modes:** Select between ECO mode for longer runtime (up to 45 minutes) and Power mode for stronger

suction (up to 16 minutes).

3. **Maneuverability:** The 180-degree rotating floor nozzle allows for easy steering around furniture and obstacles.
4. **LED Front Lights:** The integrated LED lights on the floor nozzle illuminate the cleaning path, making dust and debris more visible, especially in dimly lit areas or under furniture.
5. **Freestanding Function:** The vacuum can stand upright on its own, allowing for convenient pauses during cleaning.



Image: The AEG Ergorapido CX7-2-45AN in action, cleaning a carpeted floor, with its LED front lights illuminating the path.



Image: The AEG Ergorapido CX7-2-45AN demonstrating its maneuverability by cleaning under a chair.

Using the Handheld Vacuum

1. **Detaching:** Press the release button on the main unit to detach the handheld vacuum.
2. **Attachments:**
 - Attach the integrated furniture brush/mini crevice nozzle for cleaning crevices, corners, or delicate surfaces.
 - Attach the electric suction brush for effective removal of pet hair and dust from upholstery, car seats, and beds.
3. **Cleaning:** Use the handheld unit for quick spills, car interiors, furniture, and other areas where the stick vacuum is less practical.



Image: A user cleaning a sofa with the detachable handheld unit of the AEG Ergorapido CX7-2-45AN, demonstrating its versatility for upholstery.



Image: A user cleaning crumbs from a table surface using the handheld unit of the AEG Ergorapido CX7-2-45AN, highlighting its use for quick clean-ups.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Container

1. Ensure the vacuum is turned off.
2. Detach the handheld unit from the main body.
3. Locate the dust container release button and open the container.
4. Empty the contents into a waste bin. The dust container has a 0.5-liter capacity.

5. Close the dust container securely.

Cleaning the Filter

The filter should be cleaned regularly, especially when suction power decreases.

1. Remove the filter from the dust container.
2. Tap the filter gently over a waste bin to remove loose dust.
3. If heavily soiled, rinse the filter under lukewarm running water. Do not use detergents.
4. Allow the filter to air dry completely for at least 24 hours before reinserting it. Do not use heat to dry.

Cleaning the Brush Roller (BrushRoll-Clean Function)

The unique BrushRoll-Clean function simplifies brush roller maintenance.

1. Ensure the vacuum is turned on and in the upright position.
2. Place the vacuum on a hard, flat surface.
3. Press the pedal on the floor nozzle marked with the brush symbol.
4. Hold the pedal down for approximately 5 seconds. The internal blade will cut and remove tangled hair and fibers from the brush roller.
5. Release the pedal. The cut debris will be sucked into the dust container.
6. For manual cleaning, the brush roller can also be removed by following instructions in the full manual (refer to AEG website).



Image: An internal view of the AEG Ergorapido CX7-2-45AN's brushroll, illustrating the self-cleaning mechanism.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the vacuum cleaner fully (approx. 4 hours).
Reduced suction power.	Dust container is full. Filter is clogged. Brush roller is tangled.	Empty the dust container. Clean or wash the filter. Use the BrushRoll-Clean function or manually clean the brush roller.

Problem	Possible Cause	Solution
Vacuum stops during operation.	Battery is depleted. Overheating protection activated.	Turn off the vacuum and allow it to cool down for at least 30 minutes before resuming use. Recharge the battery.
Brush roller not spinning.	Obstruction in the brush roller.	Check for and remove any obstructions. Use the BrushRoll-Clean function.

If the problem persists after attempting these solutions, please contact AEG customer support.

SPECIFICATIONS

- **Model Name:** CX7-2-45AN
- **Brand:** AEG
- **Type:** 2-in-1 Cordless Stick and Handheld Vacuum Cleaner
- **Battery:** 18 V Lithium HD
- **Runtime:** Up to 45 minutes (ECO mode) / 16 minutes (Power mode)
- **Charging Time:** Approximately 4 hours
- **Dust Container Capacity:** 0.5 liters
- **Special Features:** 180° Swivel Nozzle, BrushRoll-Clean Function, LED Front Lights, Freestanding Parking Function
- **Dimensions (L x W x H):** 26.5 x 14.5 x 114.5 Centimeters
- **Weight:** 2.5 kg
- **Noise Level:** 79 dB
- **Filter Type:** Washable filter

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official AEG website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.
AEG Customer Service: Please visit www.aeg.com for contact details specific to your region.

© 2024 AEG. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question