

[Manuals.plus](#) /

> [Air Wick](#) /

> Air Wick Freshmatic Automatic Spray Refills - Fresh Linen User Manual

## Air Wick 062338936994

# Air Wick Freshmatic Automatic Spray Refills - Fresh Linen User Manual

Model: 062338936994

## PRODUCT OVERVIEW

The Air Wick Freshmatic Automatic Air Freshener system provides continuous, fresh fragrance to your home. Each refill is designed to neutralize odors and deliver a consistent scent for up to 60 days on the low setting. The Freshmatic diffuser offers three adjustable settings to control fragrance intensity, making it suitable for various rooms such as bathrooms, living rooms, offices, or dens.

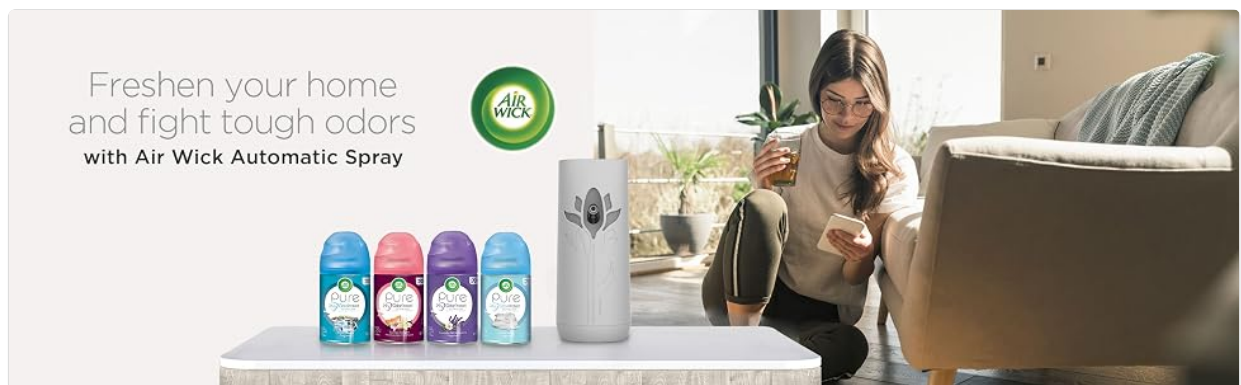


Image: Air Wick Freshmatic Automatic Spray with Fresh Linen scent, illustrating its ability to freshen your home and neutralize odors, reminiscent of fresh laundry.

## SETUP AND INSTALLATION

Follow these steps to set up your Air Wick Freshmatic Automatic Spray device and install a refill:

1. **Prepare the Device:** Twist the top part of the Freshmatic device counter-clockwise to separate it from the base.
2. **Insert Refill:** Insert the Air Wick Freshmatic refill can into the base of the device. Ensure the nozzle is facing outwards.
3. **Install Batteries:** Open the battery compartment (usually at the bottom or back) and insert the required batteries (typically 1 AA battery). Close the compartment securely.

4. **Reassemble Device:** Align the top part with the base and twist clockwise until it clicks into place.
5. **Select Fragrance Intensity:** Choose your desired fragrance intensity setting (Low, Medium, or High) using the control switch on the device.



Image: A visual guide demonstrating the four steps for setting up the Air Wick Freshmatic device: twisting to open, inserting the spray can, adding batteries, and reassembling.

Your browser does not support the video tag.

Video: This short video demonstrates the process of installing a refill into the Air Wick Freshmatic automatic spray device, highlighting its ease of use for continuous odor fighting.

## OPERATING INSTRUCTIONS

---

The Air Wick Freshmatic device automatically releases bursts of fragrance at set intervals. You can adjust the frequency of these bursts to match your preference and room size.

- **Fragrance Intensity Settings:** The device typically offers three settings:
  - **Low:** Sprays every 40 minutes. Provides up to 60-70 days of continuous fragrance.
  - **Medium:** Sprays every 18 minutes.
  - **High:** Sprays every 9 minutes.
- **Placement:** Place the device on a stable surface in the desired room. Ensure the spray nozzle is directed

away from your face and any furniture or fabrics.

- **Activation:** Once the refill and batteries are installed, and a setting is selected, the device will begin spraying automatically after a short delay.



Image: The Air Wick Freshmatic device illustrating its three fragrance intensity settings, allowing for spray bursts at 9, 18, or 40-minute intervals.

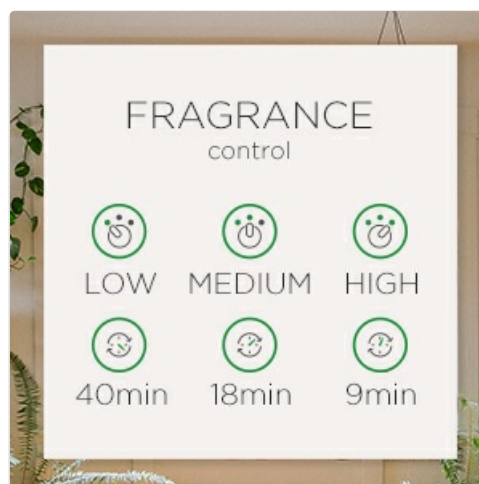


Image: A diagram detailing the fragrance control options for the automatic spray, including Low (40 minutes), Medium (18

minutes), and High (9 minutes) spray intervals.

## MAINTENANCE

To ensure optimal performance and continuous freshness, regular maintenance is recommended.

- **Refill Replacement:** Replace the fragrance refill can when the scent diminishes or when the device indicates a low refill (e.g., a red flashing light). Air Wick Freshmatic refills are compatible with all Air Wick Autospray devices.
- **Battery Replacement:** Replace batteries when the device stops spraying or the indicator light signals low power.
- **Cleaning:** Periodically wipe the exterior of the device with a soft, damp cloth to remove dust or residue. Do not immerse the device in water.



**REPLACE REFILL CAN**  
When there is a red flashing light

**Refill can works with all  
Air Wick Autosprays devices**

Image: An instruction graphic indicating that the refill can should be replaced when a red light flashes, and confirming that refills are compatible with all Air Wick Autospray devices.

## TROUBLESHOOTING

| Problem                               | Possible Cause                                                                          | Solution                                                                                   |
|---------------------------------------|-----------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|
| Device not spraying.                  | Batteries are low or incorrectly inserted. Refill can is empty or incorrectly inserted. | Check and replace batteries if needed. Ensure refill can is properly seated and not empty. |
| No scent or weak scent.               | Refill can is nearly empty. Device setting is too low for room size.                    | Replace the refill can. Increase the fragrance intensity setting.                          |
| Device makes noise but doesn't spray. | Nozzle may be blocked or refill is not properly aligned.                                | Remove refill and reinsert, ensuring it clicks into place. Check nozzle for obstructions.  |

## SPECIFICATIONS

| Feature | Detail   |
|---------|----------|
| Brand   | Air Wick |

| Feature            | Detail                                          |
|--------------------|-------------------------------------------------|
| Model Number       | 062338936994                                    |
| Scent              | Fresh Linen                                     |
| Item Form          | Spray                                           |
| Power Source       | Air Powered (Battery Operated)                  |
| Scent Duration     | Up to 60 Days (on low setting)                  |
| Recommended Uses   | General room freshening and odor neutralization |
| Container Type     | Bottle (Refill Can)                             |
| Item Weight        | 1.44 Pounds                                     |
| Product Dimensions | 5.75 x 5.25 x 6.25 inches                       |

## Safety Information

---

Please read and follow all safety warnings before use:

- **Keep out of reach of children and pets.**
- **Avoid direct inhalation of the spray.**
- **Do not spray directly onto food, fabrics, or surfaces.** Test on an inconspicuous area if contact is unavoidable.
- **Flammable:** Keep away from heat, sparks, open flames, and hot surfaces. No smoking.
- **Eye Irritant:** In case of contact with eyes, rinse immediately with plenty of water and seek medical advice if irritation persists.
- **Skin Irritant:** In case of contact with skin, wash with plenty of soap and water.
- **Do not puncture or incinerate container.**
- **Use in well-ventilated areas.**
- **Dispose of empty container in accordance with local regulations.**

## Warranty and Support

---

For warranty information, product support, or to contact customer service, please refer to the official Air Wick website or the contact details provided on the product packaging. Keep your purchase receipt as proof of purchase.

You can visit the [Air Wick Store](#) for more products and information.