

AUNA TIUWL5I-P

Auna BeeBerry Boom Box User Manual

Model: TIUWL5I-P

INTRODUCTION

The Auna BeeBerry Boom Box is a versatile and compact audio system designed for portable entertainment. It features a top-loading CD player, a tape deck, an FM radio, a USB port for MP3 playback, and an AUX input for connecting external audio sources. Its lightweight design and optional battery operation make it ideal for use in various settings, from children's rooms to hobby spaces.

This manual provides detailed instructions for the setup, operation, and maintenance of your Auna BeeBerry Boom Box. Please read it thoroughly before using the device to ensure proper function and safety.

IMPORTANT SAFETY INFORMATION

- Power Source:** Use only the specified power adapter or batteries. Ensure the voltage matches the requirements of the unit.
- Water and Moisture:** Do not expose the unit to rain, moisture, or dripping/splashing liquids. Do not place objects filled with liquids, such as vases, on the unit.
- Ventilation:** Ensure adequate ventilation. Do not block ventilation openings.
- Heat:** Do not place the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Cleaning:** Unplug the unit from the power outlet before cleaning. Use a dry cloth for cleaning.
- Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- Batteries:** Dispose of used batteries according to local regulations. Do not expose batteries to excessive heat.

PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- Auna BeeBerry Boom Box
- AC Power Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Auna BeeBerry Boom Box.



Figure 1: Front view of the Auna BeeBerry Boom Box, showing the main unit with speakers, control panel, and tape deck.



Figure 2: Detailed view of the control panel, including power button, LCD display, FM/ST indicator, play/pause, stop, back, next, mode, and album buttons.



Figure 3: Side view illustrating the rotary switch for selecting functions (OFF, TAPE, CD, USB, RADIO) and the volume control.



Figure 4: Rear panel of the boom box, highlighting the AC power input, AUX input, headphone output, and battery compartments.



Figure 5: Close-up view of the USB port located on the top of the unit, demonstrating where to insert a USB mass storage device.



Figure 6: Top view showing the open top-loading CD compartment and the front-loading tape deck, ready for media insertion.

SETUP

1. Power Connection

1. Ensure the function selector switch on the side of the unit is set to "OFF".
2. Connect the supplied AC power cable to the AC input jack on the rear of the boom box.
3. Plug the other end of the AC power cable into a standard wall outlet (100-240V~50/60Hz).

2. Battery Installation (Optional)

For portable use, the Auna BeeBerry Boom Box can be powered by batteries.

1. Locate the battery compartments on the rear of the unit (refer to Figure 4).
2. Open the battery compartment covers.
3. Insert the required number of C-size batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment covers securely.
5. *Note:* When operating on batteries, disconnect the AC power cable.

OPERATING INSTRUCTIONS

1. FM Radio Operation

1. Set the function selector switch to "RADIO".
2. Extend the telescopic antenna for optimal reception.
3. Turn the "TUNE" knob (usually on the side or top) to tune into your desired FM station.
4. Adjust the volume using the "VOLUME" knob.

2. CD Player Operation

1. Set the function selector switch to "CD".
2. Open the top-loading CD compartment cover (refer to Figure 6).
3. Place a CD (CD, CD-R, CD-RW) onto the spindle with the label side facing up.
4. Close the CD compartment cover securely.
5. The CD will begin playing automatically, or press the **PLAY/PAUSE** button.
6. Use the **BACK** and **NEXT** buttons to skip tracks.
7. Press **PLAY/PAUSE** to pause playback, and press again to resume.
8. Press the **STOP** button to stop playback.
9. The CD player supports programmable playback and repeat functions (1 track, album). Refer to the display for programming options.

3. Tape Deck Operation

1. Set the function selector switch to "TAPE".
2. Press the **STOP/EJECT** button on the tape deck to open the cassette compartment.
3. Insert a cassette tape with the open edge facing upwards.
4. Close the cassette compartment.
5. Press the **PLAY** button to start playback.
6. Use the **FAST FORWARD** and **REWIND** buttons for quick navigation.
7. Press **STOP/EJECT** to stop playback and eject the tape.

4. USB MP3 Playback

1. Set the function selector switch to "USB".
2. Insert a USB mass storage device (e.g., USB flash drive) into the USB port (refer to Figure 5).
3. The unit will automatically detect and begin playing MP3 files from the USB device.
4. Use the **BACK** and **NEXT** buttons to navigate between tracks.
5. The **MODE** and **ALBUM** buttons can be used to navigate folders or change playback modes if supported by the device.

5. AUX Input Usage

1. Connect an external audio device (e.g., smartphone, MP3 player) to the AUX input jack on the rear of the boom box using a 3.5mm audio cable (not included).
2. Set the function selector switch to "CD/USB" or the appropriate input mode.
3. Start playback on your external audio device. The audio will be routed through the boom box speakers.

4. Adjust the volume using the boom box's "VOLUME" knob and/or the volume control on your external device.

MAINTENANCE AND CARE

- Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the exterior of the unit. Do not use abrasive cleaners or solvents.
- CD/Tape Compartment:** Keep the CD and tape compartments free of dust and debris. Avoid touching the CD lens.
- Storage:** If storing the unit for an extended period, remove the batteries to prevent leakage. Store in a cool, dry place.
- Antenna:** Handle the telescopic antenna carefully to avoid bending or breaking.

TROUBLESHOOTING

If you encounter any issues with your Auna BeeBerry Boom Box, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
No power	Power cable not connected; Batteries depleted or incorrectly inserted.	Check AC power connection; Replace batteries or ensure correct polarity.
No sound from CD/USB/Tape	Incorrect function mode selected; Volume too low; Media inserted incorrectly or damaged.	Select correct function mode (CD, USB, TAPE); Increase volume; Reinsert media correctly or try different media.
Poor radio reception	Antenna not extended; Weak signal; Interference.	Fully extend the telescopic antenna; Reposition the unit; Tune carefully.
USB not playing	USB format not supported; Files not MP3; USB device not properly inserted.	Ensure USB is FAT32 format; Ensure files are MP3; Reinsert USB device.
Tape not playing or distorted	Tape inserted incorrectly; Tape damaged; Tape head dirty.	Reinsert tape correctly; Try a different tape; Clean tape head with a cleaning cassette.

TECHNICAL SPECIFICATIONS

Brand	AUNA
Model Number	TIUWL5I-P
Connectivity Technology	Auxiliary, USB
Speaker Type	Stereo

Power Source	Battery Powered (and AC)
Colour	Bone
Package Dimensions	31.5 x 26 x 17.5 cm
Item Weight	2 kg
Supported Disc Types	CD, CD-R, CD-RW
Features	Top loading CD player, tape deck, FM radio, USB port, AUX input, foldable carrying handle, LCD display.

WARRANTY AND SUPPORT


AUNA products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official AUNA website.


For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact AUNA customer service. You can often find support contact information on the official AUNA website or through your point of purchase.

Visit the official AUNA Store for more information:[AUNA Store on Amazon.co.uk](#)

© 2024 AUNA. All rights reserved.


Related Documents

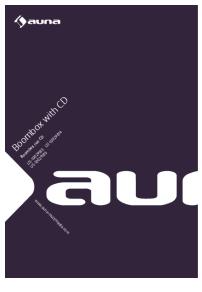	<p>auna Spacewoofer DAB+ Boombox Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für die auna Spacewoofer DAB+ Boombox, die detaillierte Informationen zu technischen Daten, Sicherheitshinweisen, Bedienung, Radiofunktionen (DAB+/FM), CD/MP3-Wiedergabe, USB, Bluetooth und AUX-IN bietet.</p>
	<p>Auna Roadie Boombox with CD User Manual</p> <p>User manual for the Auna Roadie Boombox with CD, detailing technical specifications, safety instructions, controls, operation, and warranty information.</p>

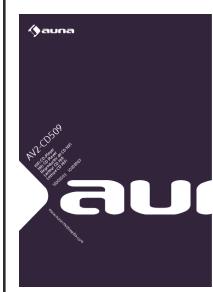

[auna AV2-CD509 HiFi CD-Player Bedienungsanleitung](#)

Umfassende Anleitung für den auna AV2-CD509 HiFi CD-Player. Enthält Sicherheitshinweise, Bedienung, Fehlerbehebung und Entsorgungsinformationen für optimale Leistung.

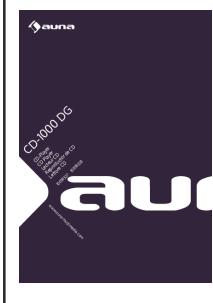

[Auna CD-1000 DG CD Player User Manual](#)

User manual for the Auna CD-1000 DG CD Player, detailing technical specifications, safety instructions, device description, remote control functions, and setup.