

De'Longhi ES0079588

De'Longhi Nespresso Essenza EN97 Series Cup Holder Grill Instruction Manual

Model: ES0079588

INTRODUCTION

This instruction manual provides essential information for the proper installation, use, and maintenance of your De'Longhi Nespresso Essenza EN97 Series Cup Holder Grill. This component is designed as a direct replacement or spare part for compatible De'Longhi Nespresso Essenza coffee machines.

Please ensure your coffee machine model is listed in the compatibility section before proceeding. If your model is not listed, contact De'Longhi customer support for verification.

COMPATIBILITY

This cup holder grill is compatible with De'Longhi Nespresso Essenza coffee machines, specifically models within the EN97 series. Compatible models include, but are not limited to:

- **EN97.W** (Versions: PT, ES, IT, DE, AT, CZ, HU, PL, RU, GR, EU)
- **EN97.WAE - NEW AEROCCINO 3 (SKU:3594)** (Versions: AU, NZ)

Refer to your coffee machine's original manual or product label to confirm your specific model number.

INSTALLATION

1. **Unpack the Cup Holder Grill:** Carefully remove the new cup holder grill from its packaging. Inspect it for any signs of damage.
2. **Prepare the Coffee Machine:** Ensure your De'Longhi Nespresso Essenza machine is turned off and unplugged from the power outlet before installation.
3. **Remove Existing Component (if applicable):** If you are replacing an old cup holder grill, gently slide it out from its designated slot on the coffee machine.
4. **Insert the New Cup Holder Grill:** Align the new cup holder grill with the guides on the coffee machine's drip tray area. Slide it firmly into place until it sits securely. It should click or fit snugly without excessive force.
5. **Verify Installation:** Gently tug on the installed cup holder grill to ensure it is properly seated and stable.



Image: The De'Longhi Nespresso Essenza Cup Holder Grill. This image shows the component ready for installation into the coffee machine's drip tray area.

OPERATION

The cup holder grill serves as a stable platform for your coffee cups during the brewing process and collects any accidental drips. Once installed, its operation is integrated with your coffee machine's normal use.

- **Cup Placement:** Place your coffee cup directly onto the grill before starting the brewing cycle.
- **Drip Collection:** The grill allows any excess liquid or drips to pass through into the underlying drip tray, keeping your counter clean.

MAINTENANCE AND CLEANING

Regular cleaning of the cup holder grill is essential to maintain hygiene and ensure optimal performance of your coffee machine.

1. **Removal:** Gently slide the cup holder grill out from the coffee machine.
2. **Washing:** Wash the grill with warm, soapy water. Use a soft sponge or cloth to remove any coffee residue or stains. Avoid abrasive cleaners or scouring pads, as these can scratch the surface.
3. **Rinsing:** Rinse thoroughly under running water to remove all soap residue.
4. **Drying:** Dry the cup holder grill completely with a clean cloth before reinserting it into the coffee machine.
5. **Frequency:** It is recommended to clean the cup holder grill daily or after each use, especially if spills occur.

TROUBLESHOOTING

This section addresses common issues related to the cup holder grill.

Problem	Possible Cause	Solution
Cup holder grill does not fit.	Incorrect model or misalignment.	Verify your coffee machine model against the compatibility list. Ensure the grill is aligned correctly with the machine's guides before inserting. Do not force it.
Grill appears unstable or loose.	Not fully inserted or damaged guides.	Push the grill firmly until it is securely seated. Inspect the machine's drip tray guides for any damage. If damaged, contact De'Longhi service.
Stains or residue on the grill.	Infrequent cleaning.	Clean the grill regularly as per the Maintenance section. For stubborn stains, a mild descaling solution safe for plastics can be used, followed by thorough rinsing.

SPECIFICATIONS

Brand: De'Longhi

Model Number: ES0079588

Product Dimensions: Approximately 15 x 12 x 1 cm (5.9 x 4.7 x 0.4 inches)

Weight: Approximately 30 g (1.06 oz)

Compatibility: De'Longhi Nespresso Essenza EN97 Series

WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase additional parts, please refer to the official De'Longhi website or contact their customer service department. Keep your proof of purchase for warranty claims.

De'Longhi Official Website: www.delonghi.com