

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rowenta](#) /

› [Rowenta TN8200 Multistyle Precision Hair Clipper Comb Attachment \(13-22mm\) User Manual](#)

Rowenta TN8200

Rowenta TN8200 Multistyle Precision Hair Clipper Comb Attachment (13-22mm)

User Manual

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the comb attachment and retain them for future reference. Failure to follow these instructions may result in damage to the product or personal injury.

- Use this comb attachment exclusively with compatible Rowenta TN8200 series hair clippers.
- Ensure the comb is securely attached to the clipper head before turning on the device.
- Do not force the comb onto the clipper; it should click into place easily.
- Inspect the comb for any signs of damage, such as cracks or broken teeth, before each use. Do not use a damaged comb.
- Keep the comb attachment out of reach of children.
- Clean the comb regularly as described in the maintenance section to ensure optimal performance and hygiene.

PRODUCT OVERVIEW

The Rowenta Peigne 3 (Comb 3) is an essential adjustable comb attachment designed specifically for the Rowenta TN8200 Multistyle Precision Hair Clipper. This attachment allows for precise control over hair cutting lengths, ranging from 13mm to 22mm, offering versatility for various styling needs.

Crafted from durable materials, the comb is engineered to glide smoothly through hair, facilitating an even and consistent cut. Its design ensures easy attachment and removal for convenient use and cleaning.



This image shows the Rowenta Peigne 3 comb attachment, designed for hair clippers. It features an adjustable length setting from 13mm to 22mm, indicated by markings on the side. The comb is made of black plastic with fine teeth, suitable for guiding hair during trimming.

SETUP AND INSTALLATION

Follow these steps to correctly attach the comb to your Rowenta hair clipper:

1. Ensure your Rowenta hair clipper is turned off and unplugged from the power source.
2. Align the comb attachment with the clipper head, ensuring the grooves on the comb match the corresponding slots on the clipper.
3. Gently push the comb onto the clipper until you hear or feel a secure click. This indicates that the comb is properly locked into place.
4. Lightly pull on the comb to verify it is firmly attached and will not detach during use.
5. Adjust the desired cutting length by sliding the integrated adjustment mechanism on the comb to the desired setting (13mm to 22mm).

OPERATING INSTRUCTIONS

Once the comb attachment is securely installed and the desired length is set, you can begin trimming hair:

- Turn on the hair clipper.
- Hold the clipper with the comb attachment flat against the scalp or the area you wish to trim.
- Move the clipper slowly and steadily against the direction of hair growth.
- For an even cut, ensure that each stroke slightly overlaps the previous one.
- Periodically turn off the clipper and clear any accumulated hair from the comb and blades to maintain optimal cutting performance.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your comb attachment and ensure hygienic use:

1. Before cleaning, always turn off and unplug the hair clipper from the power source.
2. Carefully remove the comb attachment from the clipper head.

3. Rinse the comb attachment thoroughly under running water to remove all hair clippings and debris.
4. For more stubborn hair or residue, use a small cleaning brush (often supplied with the clipper) to dislodge particles from between the comb teeth.
5. The comb attachment is dishwasher safe, offering an alternative for thorough cleaning.
6. Allow the comb to air dry completely before reattaching it to the clipper or storing it. Ensure no moisture remains to prevent damage or hygiene issues.

TROUBLESHOOTING

If you encounter any issues with your comb attachment, refer to the following common solutions:

Problem	Possible Cause	Solution
Comb not attaching securely	Incorrect alignment; debris obstructing attachment points.	Ensure the comb is correctly aligned with the clipper head. Check for and remove any hair or debris from the attachment points on both the comb and the clipper.
Uneven hair cut	Hair buildup in the comb; inconsistent clipper movement.	Clean the comb thoroughly to remove any trapped hair. Ensure you move the clipper slowly and consistently against the direction of hair growth, overlapping strokes.
Comb appears damaged (e.g., broken teeth)	Accidental impact or wear and tear.	Do not use a damaged comb as it may cause injury or an uneven cut. Replace the comb with a genuine Rowenta replacement part.

SPECIFICATIONS

- **Brand:** Rowenta
- **Model Compatibility:** TN8200, TN8200C4, TN8200C4/7C, TN8200D4/7C, TN8200E4/7C Multistyle Precision Hair Clippers
- **Cutting Lengths:** 13mm - 22mm
- **Material:** Durable Plastic
- **Approximate Dimensions (Package):** 8.5 x 4.5 x 3 cm
- **Approximate Weight:** 10 grams
- **Dishwasher Safe:** Yes
- **Country of Origin:** Italy

WARRANTY AND SUPPORT

This Rowenta comb attachment is designed to be a durable accessory for your hair clipper. For information regarding the warranty applicable to your Rowenta product, please refer to the warranty card included with your original hair clipper purchase or visit the official Rowenta website.

For technical assistance, inquiries about replacement parts, or any service-related questions, please contact Rowenta customer service. Contact details, including phone numbers and online support options, can typically be found on the official Rowenta website or within the main user manual for your hair clipper.