

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Onida](#) /
- › [Onida 43FB1 43-inch Full HD LED TV User Manual](#)

Onida 43FB1

Onida 43FB1 43-inch Full HD LED TV User Manual

Model: 43FB1

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Onida 43FB1 43-inch Full HD LED TV. Please read this manual thoroughly before using the television and retain it for future reference.

IMPORTANT SAFETY INFORMATION

- Do not expose the TV to rain or moisture to prevent fire or electric shock.
- Do not block ventilation openings. Ensure adequate space around the TV for proper airflow.
- Place the TV on a stable, level surface to prevent it from falling.
- Unplug the power cord during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

WHAT'S IN THE BOX

Upon unpacking, please ensure all the following items are present:

- 1 x Onida 43-inch LED TV
- 1 x Table Top Stand
- 1 x Wall Mount Bracket (for optional wall mounting)
- 1 x User Manual (this document)
- 1 x Warranty Card
- 1 x Remote Control



Image: Front view of the Onida 43FB1 43-inch Full HD LED TV. The screen displays a vibrant landscape, and the Onida logo is visible at the bottom center.

SETUP

1. Stand Installation

To install the table-top stand:

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align the stand bases with the corresponding slots on the bottom of the TV.
3. Secure the stands using the provided screws. Ensure they are tightened firmly.



Image: Angled view of the Onida 43FB1 TV, showcasing the attached table-top stand. This view helps visualize the TV's profile with the stand.

2. Wall Mounting (Optional)

A wall mount bracket is included for optional wall installation. For professional installation or assistance with wall mounting, please contact Onida customer service at [7490955555](tel:7490955555). Provide your product's model name (43FB1) and seller details.



Image: Rear view of the Onida 43FB1 TV, highlighting the VESA mounting points for wall installation and the location of the input/output ports.

3. Connecting Devices

Your TV offers various connectivity options. Ensure the TV is powered off before making any connections.

- **HDMI Ports (2):** Connect set-top boxes, Blu-ray players, gaming consoles, or other HDMI-enabled devices.
- **USB Ports (2):** Connect USB hard drives or other USB devices for media playback.
- **VGA Port (1):** Connect your laptop or PC.
- **AV In:** For older devices using composite video and stereo audio.
- **RF In:** For connecting an antenna or cable TV.



Image: Detailed close-up of the input/output panel on the rear of the Onida 43FB1 TV, clearly showing the HDMI, USB, VGA, AV In, and RF In ports.

4. Power Connection

After all other connections are made, plug the TV's power cord into a suitable AC power outlet.

OPERATING INSTRUCTIONS

1. Remote Control Overview

The included remote control allows you to operate all functions of your TV. Insert two AAA batteries (not included) into the remote control, observing the correct polarity.



Image: The remote control for the Onida 43FB1 TV, showing the button layout including power, volume, channel, source, menu, and navigation buttons.

- **POWER:** Turns the TV on or off.
- **SOURCE:** Selects input source (HDMI1, HDMI2, VGA, AV, TV).
- **VOL +/-:** Adjusts volume level.
- **CH +/-:** Changes channels.
- **MENU:** Accesses the main menu.
- **OK:** Confirms selections.
- **Navigation Buttons (Up/Down/Left/Right):** Navigates through menus and options.
- **EXIT:** Exits the current menu or function.

2. Initial Power On and Channel Scan

Press the **POWER** button on the remote control or the TV. The first time you turn on the TV, it may guide you through an initial setup process, including language selection and channel scanning. Follow the on-screen prompts.

3. Selecting Input Source

Press the **SOURCE** button on the remote control to cycle through available input sources (e.g., HDMI1, HDMI2, VGA, AV, TV). Select the source corresponding to the device you wish to view.

4. Menu Navigation

Press the **MENU** button to access the TV's main settings menu. Use the navigation buttons to move between options and **OK** to select.

- **Picture Settings:** Adjust brightness, contrast, color, sharpness, and select picture modes.
- **Sound Settings:** Adjust bass, treble, balance, and select sound modes.
- **Channel Settings:** Perform auto-scan, manual scan, and edit channels.
- **Time Settings:** Set time, date, and sleep timer.
- **Setup:** General settings like OSD language, factory reset.

MAINTENANCE

Cleaning the TV

- Always unplug the TV from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Never spray cleaner directly onto the screen.
- Avoid using alcohol, benzene, thinners, or other volatile substances, as they may damage the TV's finish.

Remote Control Care

- Keep the remote control dry.
- Avoid dropping or subjecting it to strong impacts.
- Replace batteries when the remote's range decreases.

TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and solutions:

Problem	Possible Cause / Solution
No power	Ensure the power cord is securely plugged into the TV and the wall outlet. Check if the wall outlet is functioning by plugging in another device. Press the power button on the TV or remote control.
No picture, but sound is present	Check the input source. Press the SOURCE button to select the correct input. Ensure the connected device (e.g., set-top box) is powered on and functioning. Check the cable connections (HDMI, VGA, AV) between the TV and the device.
No sound, but picture is present	Increase the volume using the VOL+ button. Check if the TV is muted. Press the MUTE button on the remote. Check audio settings in the TV menu. Ensure audio cables are correctly connected for AV input.
Remote control not working	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor. Point the remote directly at the TV.

If the problem persists after trying these solutions, please contact Onida customer service.

SPECIFICATIONS

Feature	Detail
Brand	Onida
Model	43FB1
Screen Size	43 Inches (109.22 cm)
Display Technology	LED ADS Panel
Resolution	Full HD (1920 x 1080 Pixels)
Refresh Rate	60 Hz
Viewing Angle	178 Degrees
Aspect Ratio	16:9
Audio Output	16 Watts (300 PMPO Sound)
HDMI Ports	2
USB Ports	2
VGA Port	1
Operating System	Android
Product Dimensions (LxWxH)	96.7 x 60.5 x 22.7 cm
Item Weight	10.5 kg
Power Source	AC

WARRANTY AND SUPPORT

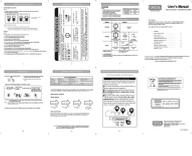
Your Onida 43FB1 TV comes with a **1-year standard warranty** from the date of purchase. Please retain your purchase invoice for warranty claims.

For any service, installation, wall mounting, or demonstration requests, please contact Onida customer service directly:

- **Onida Customer Service:** [7490955555](tel:7490955555)
- When contacting support, please provide the product's model name (43FB1) and details from your invoice.

This product is eligible for replacement within 10 days of delivery in case of any product defects, damage, or features not matching the description provided. Refer to your retailer's return policy for details.

Related Documents - 43FB1

	<p>Onida HD, FHD, UHD TV Instruction Manual</p> <p>Instruction manual for Onida HD, FHD, and UHD televisions, covering installation, operation, troubleshooting, and external information. Includes safety guidelines and warranty details.</p>
	<p>ONIDA F080 User Guide - Comprehensive Manual</p> <p>Detailed user guide for the ONIDA F080 mobile phone, covering setup, features, operations, safety, and maintenance. Learn how to use your ONIDA F080 effectively.</p>
	<p>MIRC Electronics Limited 44th Annual General Meeting Notice - August 18, 2025</p> <p>Official notice for the 44th Annual General Meeting (AGM) of MIRC Electronics Limited (Onida) scheduled for August 18, 2025. The agenda includes ordinary business like adopting financial statements and appointing directors, and special business such as appointing secretarial auditors, approving director re-appointments and remuneration, and altering Articles of Association. Details on e-voting and virtual meeting participation are provided.</p>
	<p>MIRC Electronics Limited: 44th AGM & FY 2024-25 Annual Report Notification</p> <p>Official notification from MIRC Electronics Limited (ONIDA) regarding the 44th Annual General Meeting (AGM) and the availability of the FY 2024-25 Annual Report. Includes details on accessing the report and KYC update requirements.</p>
	<p>Onida Semi-Automatic Washing Machine User Manual - Operation, Installation, and Maintenance</p> <p>Comprehensive user manual for Onida semi-automatic washing machines, covering installation, safety precautions, operating instructions, technical specifications, troubleshooting, maintenance, and warranty details.</p>
	<p>ONIDA Android TV Instruction Manual: Setup, Operation, and Troubleshooting</p> <p>Comprehensive instruction manual for ONIDA Android TVs, covering initial setup, remote control functions, connectivity options, smart features, troubleshooting, and warranty information.</p>

Documents - Onida – 43FB1

no relevant documents