

FAAC 390

FAAC 390 Swing Gate Opener Basic Single Kit Instruction Manual

Model: 390 | Part Number: 104572.5

1. INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of the FAAC 390 Swing Gate Opener Basic Single Kit. The FAAC 390 is designed for residential swing gates, offering continuous duty operation for gates up to 600 lbs and 14 feet in length per leaf. It features a low-voltage design and includes provisions for optional battery backup to ensure functionality during power outages. Please read this manual thoroughly before proceeding with installation or operation.

2. KIT CONTENTS

The FAAC 390 Swing Gate Opener Basic Single Kit includes the following components:

- FAAC 390 Swing Gate Operator
- FAAC E024U Control Board
- FAAC 787741 Receiver
- 14" x 16" Enclosure
- Transformer
- 2 FAAC XT4 Remotes
- 2 Batteries (for backup)
- 2 FAAC 785163 Photocells
- 2 Limit Switches



Image 1: Overview of the FAAC 390 Swing Gate Opener Basic Single Kit components. This image displays the main gate operator unit, the control board, receiver, two remote controls, two batteries, and two photocells, along with the enclosure and transformer.

3. SETUP AND INSTALLATION

The FAAC 390 is designed for straightforward installation, often requiring no gate modifications. However, professional installation is recommended to ensure proper functionality and safety. This section provides a general overview; always refer to the detailed installation guide provided with your kit for specific instructions and safety warnings.

1. **Mounting the Operator:** Securely mount the FAAC 390 Swing Gate Operator to the gate and post according to the detailed diagrams in the full installation manual. Ensure proper alignment for smooth gate movement.
2. **Control Board and Enclosure:** Install the FAAC E024U Control Board and transformer within the 14" x 16" enclosure. Mount the enclosure in a protected location near the gate.
3. **Wiring Connections:** Connect the gate operator, power supply, photocells, and limit switches to the E024U Control Board as specified in the wiring diagrams. Ensure all connections are secure and insulated.
4. **Photocell Installation:** Mount the FAAC 785163 Photocells at appropriate heights and distances to create a safety beam across the gate opening. Ensure they are aligned correctly.

5. **Limit Switches:** Install and adjust the limit switches to define the open and closed positions of the gate.
6. **Battery Backup:** Connect the two provided batteries to the control board for power failure operation.
7. **Receiver and Remotes:** Install the FAAC 787741 Receiver and program the FAAC XT4 Remotes according to the instructions for wireless control.

4. OPERATING INSTRUCTIONS

Once installed and configured, the FAAC 390 Swing Gate Opener is designed for simple operation.

- **Remote Control:** Use the FAAC XT4 Remotes to open and close the gate. Pressing the designated button will initiate the gate's movement. A second press may stop or reverse the gate, depending on the control board's programming.
- **Safety Features:** The photocells are designed to detect obstructions in the gate's path. If the beam is broken during closing, the gate will stop or reverse to prevent impact.
- **Power Failure Operation:** In the event of a power outage, the optional battery backup system will automatically engage, allowing continued operation of the gate for a limited number of cycles. Ensure batteries are charged and properly connected.

5. MAINTENANCE

Regular maintenance ensures the longevity and reliable operation of your FAAC 390 Swing Gate Opener. Perform the following checks periodically:

- **Visual Inspection:** Check for any signs of wear, damage, or corrosion on the gate operator, mounting hardware, and wiring.
- **Gate Movement:** Observe the gate's movement for smoothness and consistency. Address any unusual noises or jerky movements.
- **Photocells:** Ensure photocells are clean and properly aligned. Clear any obstructions that might block the safety beam.
- **Battery Check:** If using battery backup, periodically check the battery terminals for corrosion and ensure they are securely connected. Test the battery backup functionality by temporarily disconnecting main power.
- **Lubrication:** Consult the full installation manual for any recommended lubrication points on the mechanical components of the gate operator.

6. TROUBLESHOOTING

This section addresses common issues you might encounter. For complex problems, contact qualified technical support.

- **Gate Not Responding:** Check power supply, remote control batteries, and ensure the receiver is properly connected and programmed. Verify photocells are not obstructed.
- **Gate Stops Mid-Cycle:** This could indicate an obstruction detected by photocells or an issue with limit switch settings. Check for physical obstructions and verify limit switch calibration.
- **Unusual Noises:** Inspect mechanical components for wear or misalignment. Ensure all moving parts are free from debris.
- **Battery Backup Not Working:** Check battery connections, charge level, and ensure batteries are not expired.

7. SPECIFICATIONS

Feature	Detail
Model	FAAC 390
Part Number	104572.5
Duty Cycle	100%
Max Gate Swing	120 Degrees
Max Weight Per Leaf	600 lbs
Max Length Per Leaf	14 feet
Operating Temperature	-4°F to 131°F (-20°C to 55°C)
Absorbed Power	3W
Protection Class	NEMA 4x
Manufacturer	FAAC
ASIN	B074CGFPY7

8. WARRANTY AND SUPPORT


For warranty information, technical support, or to purchase replacement parts, please contact FAAC customer service or refer to the official FAAC website. Keep your purchase receipt and product model number handy when contacting support.

Related Documents

	FAAC S418 Electromechanical Swing Gate Operator Installation and Operation Manual Comprehensive guide for the FAAC S418 Electromechanical Swing Gate Operator, covering installation, operation, maintenance, safety precautions, and technical specifications. Includes details on the E024U control board and accessories.
	FAAC 390 Articulated Arm Swing Gate Operator Manual Comprehensive installation, operation, and safety manual for the FAAC 390 Articulated Arm Swing Gate Operator. Includes technical specifications, electrical diagrams, programming details, and maintenance guidelines.

 402 Hydraulic Swing Gate Operator	FAAC 402 Hydraulic Swing Gate Operator - Installation, Operation, and Safety Manual Comprehensive guide for the FAAC 402 Hydraulic Swing Gate Operator, covering installation, operation, safety precautions, programming the 455D control board, maintenance, and troubleshooting. Includes technical specifications and spare parts.
 B680H	FAAC B680H Barrier Gate Operator Manual: Installation & Technical Guide Comprehensive guide for the FAAC B680H Barrier Gate Operator, covering installation, technical specifications, safety, programming, and maintenance. Features detailed instructions for reliable vehicle access control.


Documents - FAAC – 390

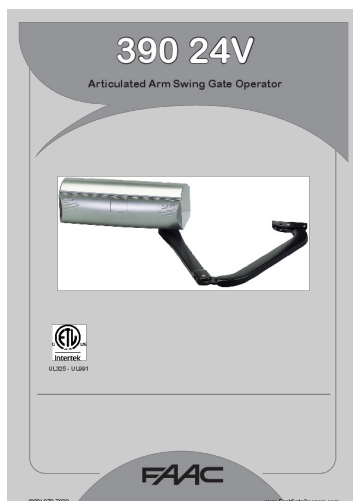

[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide Warranty Borchure Diagram

FAAC 390 24V Manual Manuals Brochures Resources Hub Fast Gate Openers manual fastgateopeners store media |||

 
390 24V Articulated Arm Swing Gate Operator UL325 - UL991 800 878-7829
www.FastGateOpeners.com CONTENTS IMPORTANT SAFETY INFORMATION 3
 Important Safety Instructions 3 Important Installation Instructions 3 General Safety
 Precautions 4 UL325 Gate Operator Classifications 5 Installing ...
 lang:en **score:36** filesize: 4.56 M page_count: 27 document date: 2015-09-30

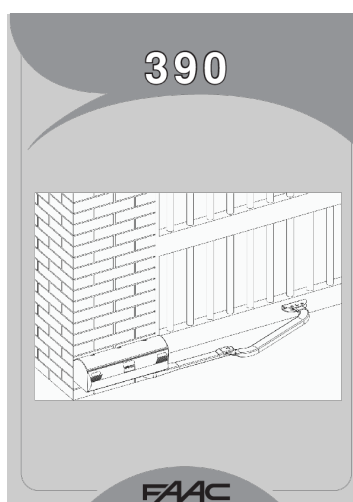

[\[pdf\]](#)

untitled 390 motepro au Manuals FAAC Swing

 
390 ITALIANO AVVERTENZE PER L INSTALLATORE OBBLIGHI GENERALI PER LA SICUREZZA ATTENZIONE importante per la sicurezza delle persone seguire attentamente tutta l istruzione. Una errata installazione o un errato uso del prodotto pu portare a gravi danni alle persone. 1. Leggere attentamente le istr...
 lang:it **score:36** filesize: 526.85 K page_count: 7 document date: 2009-03-23

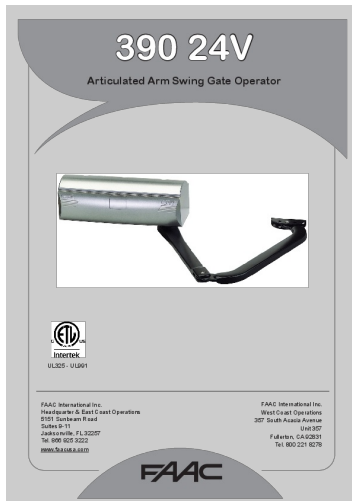

[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide Warranty Diagram

faac 390 24V swing gate operator manual allgateoperatormanuals

 390 24V Articulated Arm Swing Gate Operator UL325 - UL991 FAAC International Inc. Headquarter East Coast Operations 5151 Sunbeam Road Suites 9-11 Jacksonville, FL 32257 Tel. 866 925 3222 www.faacusa.com FAAC International Inc. West Coast Operations 357 South Acacia Avenue Unit 357 Fullerton, CA ...
lang:en score:35 filesize: 4.06 M page_count: 27 document date: 2012-07-02

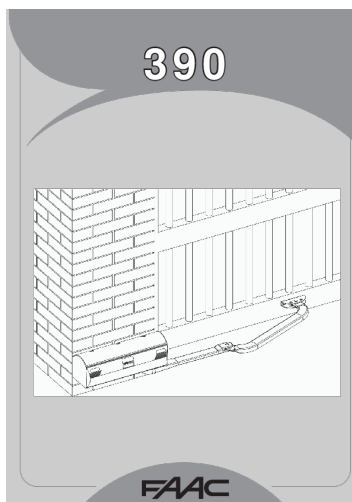


[\[pdf\]](#) User Manual

untitled FAAC 390 MANUAL Index of 2023 08 qga au |||

390 ITALIANO AVVERTENZE PER L'INSTALLATORE OBBLIGHI GENERALI PER LA SICUREZZA ATTENZIONE importante per la sicurezza delle persone seguire attentamente tutta l'istruzione. Una errata installazione o un errato uso del prodotto pu portare a gravi danni alle persone. 1. Leggere attentamente le istr...

 lang:it score:34 filesize: 525.19 K page_count: 7 document date: 2009-03-23

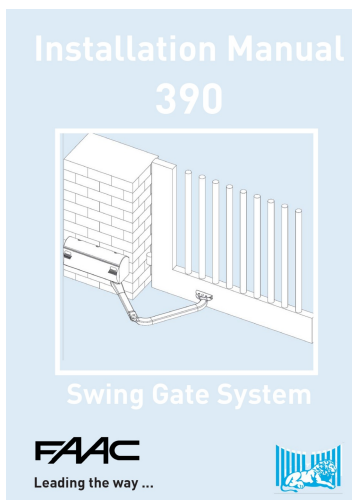

[\[pdf\]](#) User Manual Declaration of Conformity

390 indd sarahd FAAC Manual Automatic Gates User Manuals ISF Watermark 1 intelligentsecurity.org resources gates |||

Installation Manual **390** Intelligent Security Swing Gate SFyisreteLtd. Leading the way ... CE DECLARATION OF MACHINE CONFORMITY DIRECTIVE 89/392/EEC, ANNEX II, PART B Manufacturer : FAAC S.p.A. Address: Via Benini, 1 - 40069 Zola Predosa BOLOGNA - ITALY Declares that: Operator mod. **390** ...

lang:en score:34 filesize: 460.87 K page_count: 10 document date: 2007-05-02

THE 390 24V OPERATOR AND 425 D CONTROL PANEL: INSTALLATION MANUAL	
CONTENTS	
Important Safety Information	2
Technical Data	4
Unpacking the Operator	5
The 390 24V Operator General Characteristics	6
Installation Instructions	6
Prepare the Gate	6
Manual Release Mechanism	6
Install the Operator	7
Mounting Dimensions	7
Mounting the Base Plate	7
390 Limit Switch Instructions	10
Explosion View, 390 24V Operator	12
390 24V Operator Parts List	13
The 425 D Control Panel General Description	14
Installing the 425 D Control Panel	14
Connect the Main Power Supply	14
Connect the Operator to the Control Panel	14
Connect Accessory Devices	15
Set Operating Modes	16
Setting the DIP Switches	17
Obstacle Recognition	17
Programming	19
Stop for 2 seconds	20
Programming the Motor Run Time	20
Force Ratings	21
Maintenance	21
Safety in Case Design	23
Troubleshooting	23
Limited Warranty	24

[pdf] User Manual Installation Guide Instructions Troubleshooting Guide Parts List Dimension Guide Warranty Accessories

 
390 Install with 425 D Final pub JIM FAAC Swing Gate Operator Manual laornamental files FILES

THE **390** 24V OPERATOR AND 425 D CONTROL PANEL: INSTALLATION MANUAL

July, 2006 **390** 24v Operator And 425 D Control Panel Installation Manual

CONTENTS Important Safety Information 2 Technical Data 4 Unpacking the Operator 5 The **390** 24V Operator General Characteristics 6 Installation Instructi...

lang:en score:32 filesize: 691.96 K page_count: 24 document date: 2007-09-13

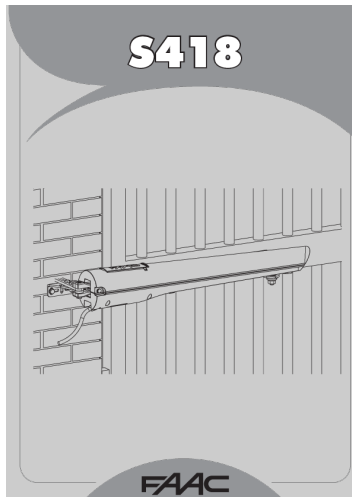

[pdf] User Manual Instructions Declaration of Conformity

untitled SS418418 EasyGates co uk 7 ENGLISH Notes on reading the instruction Read this installation manual to full before you begin installing product The symbol indicates notes that are important for safety of persons and good condition automated system Manual S418 manuals easygates 2013 02 |||

S418 ENGLISH CE DECLARATION OF CONFORMITY FOR MACHINES

DIRECTIVE 98/37/EC Manufacturer: FAAC S ... you should not wish to use the mechanical stops on opening and closing, the operator stroke becomes **390** mm. With leaves of over 2.3 m, an electric lock must be installed to ensure locking of the leaf...

lang:en score:32 filesize: 1.53 M page_count: 9 document date: 2009-04-30



[pdf] Tech Sheet Datasheet Guide

product guide 2012 1 indd sarahd Faac for email tlc direct co uk Technical DataSheets |||

Whichever way your automation needs take you, let s work together PRODUCT

GUIDE 422 HYDRAULIC SWI ... ates up to 2.5m per leaf. Residential applications. Built in adjustable open and close stops. **390** 412 Articulated arm operator. For gates up to 3m per leaf. Residential applications. Availa...

lang:en score:32 filesize: 1.29 M page_count: 12 document date: 2012-03-13



[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide Warranty Diagram
FAAC Model S450H 24V Hydraulic Swing Gate Operator Read this instruction manual before you begin installing the product Information 2021 07 63000826 RELEASE VALVE Part Number S450HManual E024U 01 cdn shopify s files 1 0141 9617 8998 seacesstech faac
S450H 24V Hydraulic Swing Gate Operator UL325 - UL991 FAAC International Inc. Headquarter East Co ... ELECTION OPERATOR TYPE SW 1 SW 2 SW 3 S450H, S800H OFF OFF OFF S418 OFF OFF ON 412, 413, 415, **390**, 770 ON OFF OFF 391 OFF ON OFF NON FAAC ON OFF ON DL 1 DL 2 DL 3 DL 4 DL 5 DS2 DS 2 LOCK ...
lang:en **score:32** filesize: 9.72 M page_count: 34 document date: 2012-02-21



[\[pdf\]](#) User Manual Instructions Catalog
188 0080 Manual MULTI-FREE E AnagnostouΟρισμένες μάρκες όπως FAAC και BFT επιτρέπουν την αντιγραφή μόνο από RCB2 4 TRC1 TRC2 ROLLING CODE ΤΥΠΟΥ C Dir 433 868 DL2 868 v1e anagnostou gr image catalog SUPERIOR MULTI FREE srsltid AfmBOoqVjkwe8GQ Q80b9CXU5J4VB3 YHhQ3kQuUzUul9ISLsmo4D9X 868 One moment pleasev1v1v1e YHhQ3kQuUzUul9ISLsmo4D9Xe AfmBOoqyYYrdkKOfRmPOAttvG6Bpw8c7uW4 9Kzl HvKrt7DEn2sl2Oie HvKrt7DEn2sl2Oi ||| ||| MULTIFREE INSTRUCTION MANUAL SUPRF008 EN - INSTRUCTIONS IT - ISTRUZIONI ES - MANUAL DE USUARIO FR - MANUEL D'UTILISATEUR DE - BENUTZERHANDBUCH PT - MANUAL DO USUARIO E - E - : 1x CR 2032 3 V : 60 - 80 : 433,92 MHz ; 868,35 MHz , 1. 1. 2 3 . MULTIFREE INSTRUCTION MANUAL SUPRF008 EN - INSTRUCTIONS IT - ISTRUZIONI ES - MANUAL DE USUARIO FR - ... ERONE 868 FAAC FADINI GENIUS/ADYX GIBIDI JCM 433 JCM 868 KING GATES KLING LIFTMASTER 315 LIFTMASTER **390** 1 N = 16 LIFTMASTER 433 N = 31 N = 3 MHOUSE/MOOVO N = 13 N = 4 NICE FLOR-S N = 30 N ...
lang:it **score:31** filesize: 272.64 K page_count: 14 document date: 2025-05-20




[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide Warranty Diagram
FAAC Model S418 See instructions on the placement of non contact sensors for each type application Exercise care to reduce risk nuisance tripping such as when a vehicle trips sensor while gate is still moving Locate one or more where entrapment obstruction exists at faac swing operator manual avtomatika dly s418 24vdc Swing Gate Operator Manual storage ua prom st 423916 allgateoperatormanuals laornamental 80 files FILES
S418 Swing Gate Operator UL325 - UL991 FAAC International Inc. Headquarter East Coast Operations ... OPERATOR SELECTION OPERATOR TYPE SW 1 SW 2 SW 3 S450H, S800H OFF OFF OFF S418 OFF OFF ON 415, **390**, 770 ON OFF OFF DL 1 DL 2 DL 3 DL 4 DL 5 DS2 DS 2 LOCK OUTPUT MODE OUTPUT MODE Active only f...
lang:en **score:31** filesize: 5.45 M page_count: 30 document date: 2012-07-02



[\[pdf\]](#) User Manual Instructions Warranty Diagram

Faac 740 Manual Pdf 741 FAAC 770 24VDC swing gate operator faacgateopeners Manuals |||
770 24V Underground Swing Gate Operator UL325 - UL991 FAAC International Inc.
Headquarter East Co ... ARTS DIAGRAM Code Description Pos. Code 001 770770
002 716078 004 727158 007 718076 008 719165 010 **390**451 POS. 01 02 P/N
770770 716078 DESCRIPTION 770 24V MOTOR PARTS 770 GEAR BOX LIST 04
727158...

 lang:en **score:30** filesize: 4.31 M page_count: 28 document date: 2012-10-17

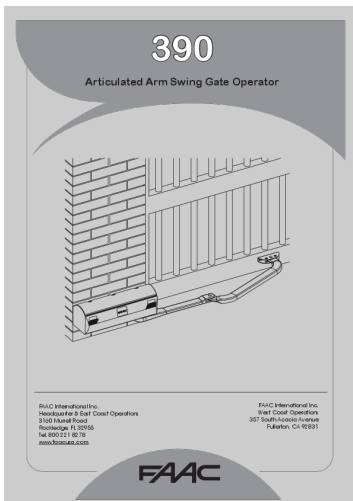

[FAAC 390 Articulated Arm Swing Gate Operator Manual](#)

Comprehensive installation, operation, and safety manual for the FAAC 390
Articulated Arm Swing Gate Operator. Includes technical specifications, electrical
diagrams, programming details, and maintenance guidelines.

 
lang:en **score:30** filesize: 4.88 M page_count: 32 document date: 2024-03-15



[Dieffematic RX Multifrequency 433/868 MHz Manual](#)

This manual provides instructions and specifications for the Dieffematic RX
Multifrequency receiver, covering its features, programming, and compatibility with
various remote control brands.

lang:es **score:30** filesize: 3.88 M page_count: 15 document date: 2025-06-23

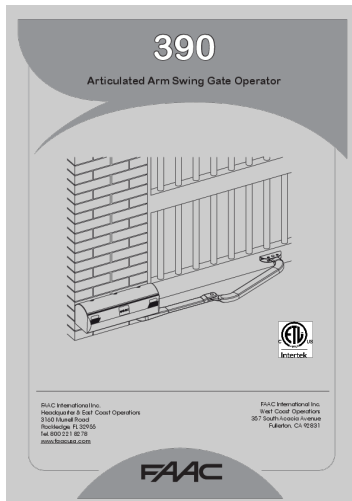


[\[pdf\]](#) User Manual Specifications Dimension Guide Accessories Diagram

FAAC 390 Articulated Arm Swing Gate Operator Manual FAAC 390 24V Only All Security Equipment
732669 RevD US v 1628172497 cdn shopify s files 1 0537 7916 9453 |||

390 Articulated Arm Swing Gate Operator FAAC International Inc. Headquarter East Coast Operations 3160 Murrell Road Rockledge, FL 32955 Tel. 800 221 8278
www.faacusa.com FAAC International Inc. West Coast Operations 357 South Acacia Avenue Fullerton, CA 92831 TABLE OF CONTENTS Important Safet...

 lang:en score:30 filesize: 5.05 M page_count: 32 document date: 2021-03-26

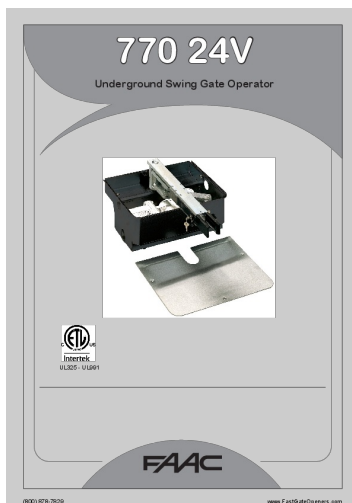


[\[pdf\]](#) User Manual Instructions Warranty Borchure Diagram

FAAC 770 24V Manual Manuals Brochures Resources Hub Fast Gate Openers manual fastgateopeners
store media |||

770 24V Underground Swing Gate Operator UL325 - UL991 800 878-7829
www.FastGateOpeners.com CON ... ARTS DIAGRAM Code Description Pos. Code
001 770770 002 716078 004 727158 007 718076 008 719165 010 **390**451 POS. 01
02 P/N 770770 716078 DESCRIPTION 770 24V MOTOR PARTS 770 GEAR BOX
LIST 04 727158...

 lang:en score:29 filesize: 7.35 M page_count: 28 document date: 2012-07-02

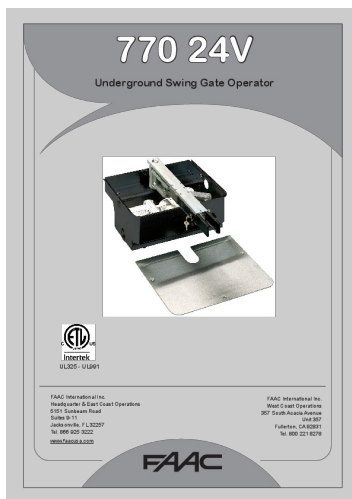

[\[pdf\]](#) User Manual Instructions Warranty Diagram

770 Manual E024U seacesstech faac

770 24V Underground Swing Gate Operator UL325 - UL991 FAAC International Inc.
Headquarter East Co ... ARTS DIAGRAM Code Description Pos. Code 001 770770
002 716078 004 727158 007 718076 008 719165 010 **390**451 POS. 01 02 P/N
770770 716078 DESCRIPTION 770 24V MOTOR PARTS 770 GEAR BOX LIST 04
727158...

lang:en score:29 filesize: 4.23 M page_count: 28 document date: 2012-02-21




[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide Warranty Borchure Diagram

FAAC 415 24V Manual L LS Manuals Brochures Resources Hub Fast Gate Openers manual fastgateopeners store media |||

415 L LS 24V Swing Gate Operator UL325 - UL991 800 878-7829

www.FastGateOpeners.com CONTENTS I ... OPERATOR SELECTION OPERATOR TYPE SW 1 SW 2 SW 3 S450H, S800H OFF OFF OFF S418 OFF OFF ON 415, **390**, 770 ON OFF OFF DL 1 DL 2 DL 3 DL 4 DL 5 DS2 DS 2 LOCK OUTPUT MODE OUTPUT MODE Active only f...

 lang:en score:29 filesize: 5.39 M page_count: 29 document date: 2015-09-30

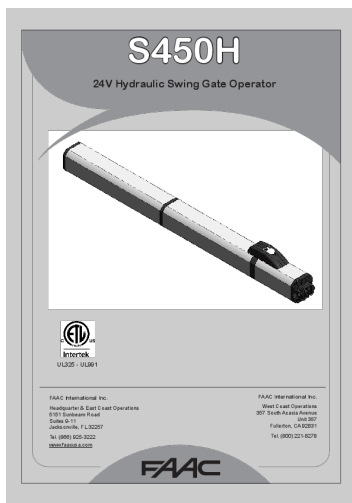


[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide Warranty Diagram

FAAC Model S450H faac swing gate operator manual allgateoperatormanuals

S450H 24V Hydraulic Swing Gate Operator UL325 - UL991 FAAC International Inc.

Headquarter East Co ... OPERATOR SELECTION OPERATOR TYPE SW 1 SW 2 SW 3 S450H, S800H OFF OFF OFF S418 OFF OFF ON 415, **390**, 770 ON OFF OFF DL 1 DL 2 DL 3 DL 4 DL 5 DS2 DS 2 LOCK OUTPUT MODE OUTPUT MODE Active only f...

 lang:en score:28 filesize: 9.72 M page_count: 34 document date: 2012-07-02

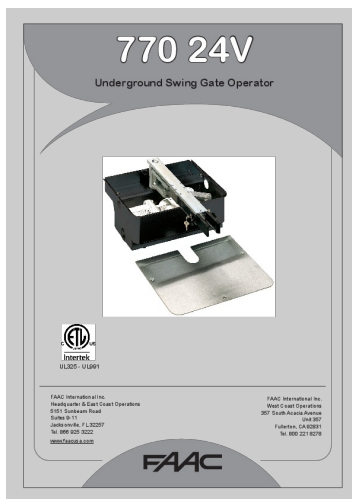


[\[pdf\]](#) User Manual Instructions Warranty Diagram

faac 770 swing gate operator manual allgateoperatormanuals

770 24V Underground Swing Gate Operator UL325 - UL991 FAAC International Inc.

Headquarter East Co ... ARTS DIAGRAM Code Description Pos. Code 001 770770 002 716078 004 727158 007 718076 008 719165 010 **390**451 POS. 01 02 P/N 770770 716078 DESCRIPTION 770 24V MOTOR PARTS 770 GEAR BOX LIST 04 727158...

 
lang:en score:28 filesize: 4.23 M page_count: 28 document date: 2012-07-02

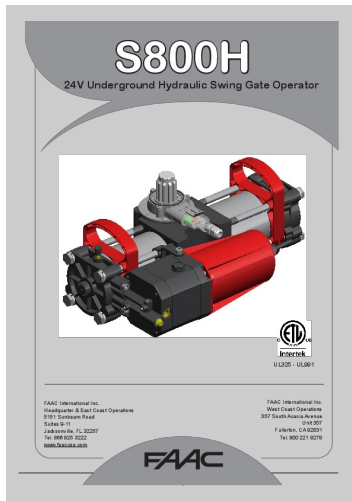


[\[pdf\]](#) User Manual Installation Guide Instructions Specifications Warranty Diagram
 faac S800H swing gate operator manual allgateoperatormanuals
 S800H 24V Underground Hydraulic Swing Gate Operator FAAC International Inc.
 Headquarter East Coas ... pe 16 Plastic adjustment wrench and support bushing 17
 Foundation box cover 18 Grooved bushing p/n **390972** 18 Fig.1 1.1 TECHNICAL
 SPECIFICATIONS TECHNICAL SPECIFICATIONS CBAC OPERATOR SB
 OPERATO...
 lang:en score:28 filesize: 7.82 M page_count: 33 document date: 2012-07-02



[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide Warranty Borchure
 Diagram
 FAAC Model S418 Manual OEM Replacement Swing Gate Opener Arm Only 10430115 Fast Openers
 Manuals Brochures Resources Hub manual fastgateopeners store media |||
 S418 Swing Gate Operator UL325 - UL991 800 878-7829
 www.FastGateOpeners.com CONTENTS IMPORTAN ... OPERATOR SELECTION
 OPERATOR TYPE SW 1 SW 2 SW 3 S450H, S800H OFF OFF OFF S418 OFF OFF
 ON 415, **390**, 770 ON OFF OFF DL 1 DL 2 DL 3 DL 4 DL 5 DS2 DS 2 LOCK OUTPUT
 MODE OUTPUT MODE Active only f...
 lang:en score:28 filesize: 5.82 M page_count: 30 document date: 2015-09-30

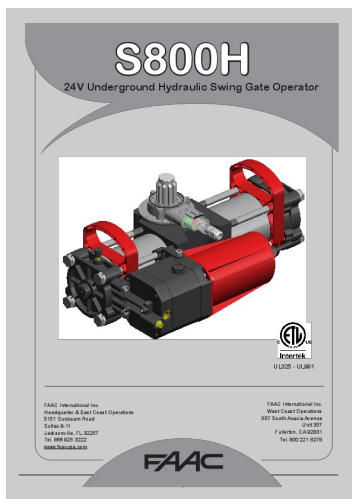 

[\[pdf\]](#) User Manual Installation Guide Instructions Specifications Warranty Diagram
 24V Underground Hydraulic Swing Gate Operator FAAC S800H In Ground affordableopeners manuals
 Manufacturer faac |||
 S800H 24V Underground Hydraulic Swing Gate Operator FAAC International Inc.
 Headquarter East Coas ... pe 16 Plastic adjustment wrench and support bushing 17
 Foundation box cover 18 Grooved bushing p/n **390972** 18 Fig.1 1.1 TECHNICAL
 SPECIFICATIONS TECHNICAL SPECIFICATIONS CBAC OPERATOR SB
 OPERATO...
 lang:en score:27 filesize: 7.9 M page_count: 33 document date: 2012-10-17

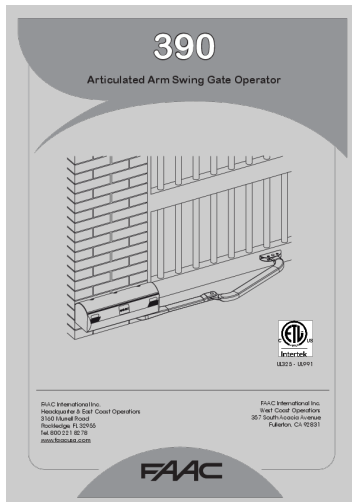 

[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide Diagram

Articulated Arm Swing Gate Operator Automated Gates and FAAC 390 Manual aegates Use the manual release mechanism only when gate is not moving KEEP GATE PROPERLY MAINTAINED Have a qualified service person make repairs to The Release key operated device that disengages or engages gears in 24v When drive disengaged you can open close leaf by hand designed manufactured automate vehicular swing gates Do use for any other purpose Measurements Inches 1 Cover according procedures presented this Before performing cleaning maintenance operations disconnect power faac operator manuals

390 Articulated Arm Swing Gate Operator FAAC International Inc. Headquarter East Coast Operations 3160 Murrell Road Rockledge, FL 32955 Tel. 800 221 8278 www.faacusa.com UL325 - UL991 FAAC International Inc. West Coast Operations 357 South Acacia Avenue Fullerton, CA 92831 TABLE OF CONTENTS I... lang:en score:27 filesize: 4.35 M page_count: 32 document date: 2016-09-29

 


[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide Warranty Diagram

faac 415 24V swing gate operator manual allgateoperatormanuals 80

415 L LS 24V Swing Gate Operator UL325 - UL991 FAAC International Inc. Headquarter East Coast Ope ... OPERATOR SELECTION OPERATOR TYPE SW 1 SW 2 SW 3 S450H, S800H OFF OFF OFF S418 OFF OFF ON 415, **390**, 770 ON OFF OFF DL 1 DL 2 DL 3 DL 4 DL 5 DS2 DS 2 LOCK OUTPUT MODE OUTPUT MODE Active only f...

lang:en score:27 filesize: 4.9 M page_count: 29 document date: 2012-07-02

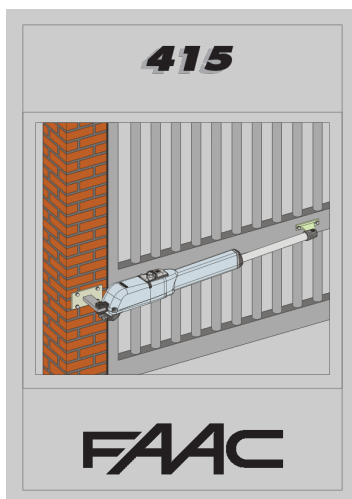


[\[pdf\]](#) User Manual Specifications Declaration of Conformity Accessories

untitled 415 motepro au Manuals FAAC Swing

441155 CONTENTS 1. CE DECLARATION OF CONFORMITY FOR MACHINES 2. DESCRIPTION 3. TECHNICAL SPECIFICA ... useful travel 2 max. dimension B C 1 D 2 Z 3 145 290 85 60 135 295 60 60 195 **390** 125 70 170 **390** 110 60 3 min. dimension L 1110 1110 1290 1290 Fig. 4 E 3 45 45 4.3....

 
lang:en score:27 filesize: 835.8 K page_count: 10 document date: 2007-05-17

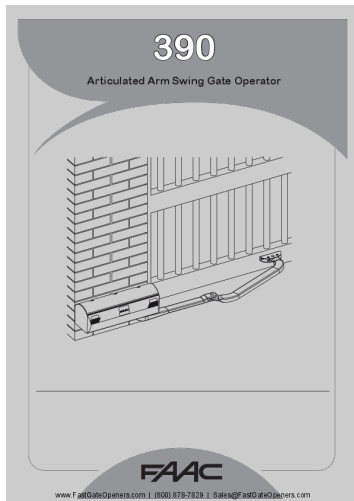


[\[pdf\]](#) User Manual Specifications Dimension Guide Accessories Diagram
 FAAC 390 Manual 1045791 5 Dual Electromechanical Swing Gate Opener With Articulated Arm
 Secondary Kit 14ft 600 lbs Southwest Automated Security southwestautomated product attachment |||
390 Articulated Arm Swing Gate Operator www.FastGateOpeners.com 800 878-7829
 Sales FastGateOpeners.com TABLE OF CONTENTS Important Safety Information 3
 Important Installation Information 3 General Safety Precautions 4 UL325 Gate
 Operator Classifications 5 Installing the Warning Sign...
 lang:en **score:27** filesize: 8.72 M page_count: 32 document date: 2024-05-23



[\[pdf\]](#) User Manual Specifications
 Provided by ManualsAndMore Download User Manual FAAC E024S manualsandmore |||
 E024S ENGLISH INDEX 0 BOX LAYOUT.....
 d DS4 DS3 DS2 DS1 Description OFF OFF ON OFF OFF ON ON ON MOTOR 391
 MOTOR 418 MOTOR 412-413-415-**390**-770 HYDRAULIC MOTOR * S450H / S700H
 / S800H OFF OFF LOW FORCE ON OFF MEDIUM - LOW FORCE OFF O...
 lang:i-klnglon **score:27** filesize: 1.54 M page_count: 16 document date: 2019-07-24

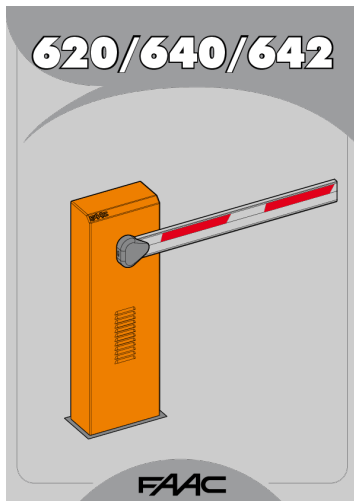 

[\[pdf\]](#) User Manual Installation Guide Instructions
 620 640 642 faac manual usuario ftp3 syscom mx usuarios gjimenez merik FAAC640 |||
 620/640/642 Leggere completamente questo manuale di istruzioni prima di iniziare l
 installazione d ... b Fotoclulas c Pulsador de llave d Destellador e Receptor radio f
 Espiras magnticas Fig. 3 230 **390** Las cotas estn expresadas en mm. 4 INSTALACIN
 DEL AUTOMATISMO Fig. 5 4.1 COMPROBACIONES PREVI...
 lang:nl **score:27** filesize: 1.43 M page_count: 16 document date: 2016-04-13

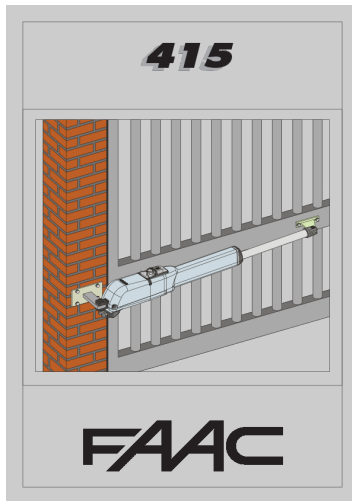 

[\[pdf\]](#) User Manual Specifications Declaration of Conformity Accessories

untitled FAAC 415 MANUAL Index of 2023 08 qga au |||

441155 CONTENTS 1. CE DECLARATION OF CONFORMITY FOR MACHINES 2. DESCRIPTION 3. TECHNICAL SPECIFICA ... useful travel 2 max. dimension B C 1 D 2 Z 3 145 290 85 60 135 295 60 60 195 **390** 125 70 170 **390** 110 60 3 min. dimension L 1110 1110 1290 1290 Fig. 4 E 3 45 45 4.3....

lang:en score:27 filesize: 835.8 K page_count: 10 document date: 2007-05-17




[\[pdf\]](#) User Manual Specifications Accessories

E124 COP RevA multi indd bosat07 FAAC Manual Access Control System User Manuals Watermark intelligentsecurity.org resources access control |||

E124 Intelligent Security Fire Ltd. Intelligent Security Fire Ltd. ENGLISH INDEX 1 LAY-OUT ... eters with DEFAULT values corresponding to an installation with operators FAAC 412, 413/415, 770, **390** see default column 1 . 2 Configures the parameters with DEFAULT values I corresponding to a...

 lang:en score:26 filesize: 1.47 M page_count: 32 document date: 2010-03-11

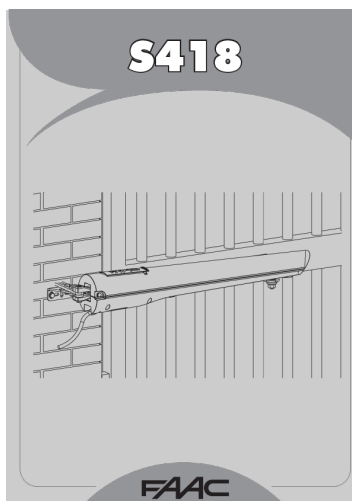


[\[pdf\]](#) User Manual Instructions Declaration of Conformity

untitled FAAC S418 Manual S p A Address Via Benini 1 40069 Zola Predosa Bologna ITALY Declares that Operator mod is built to be integrated into a machine or motepro au Manuals Swing


S418 ENGLISH CE DECLARATION OF CONFORMITY FOR MACHINES

DIRECTIVE 98/37/EC Manufacturer: FAAC S ... you should not wish to use the mechanical stops on opening and closing, the operator stroke becomes **390** mm. With leaves of over 2.3 m, an electric lock must be installed to ensure locking of the leaf...

 
lang:en score:26 filesize: 1.53 M page_count: 9 document date: 2010-02-11

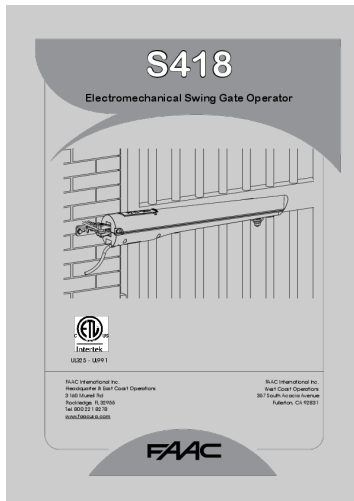

[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide Warranty Diagram
FAAC Model S418 faac s418 manual 2016 01 Rev A Electromechanical Linear Arm Operator gatedepot
amfile file 38555 product 29459 |||
S418 Electromechanical Swing Gate Operator UL325 - UL991 FAAC International
Inc. Headquarter East ... the mechanical stops on opening and closing are not used
the operator stroke increases to 15.3 in **390** mm 1.3 Electrical Setup 2.
INSTALLATION 2.1 Preliminary Checks The structure of the gate d...
lang:en **score:26** filesize: 4.64 M page_count: 30 document date: 2017-09-27

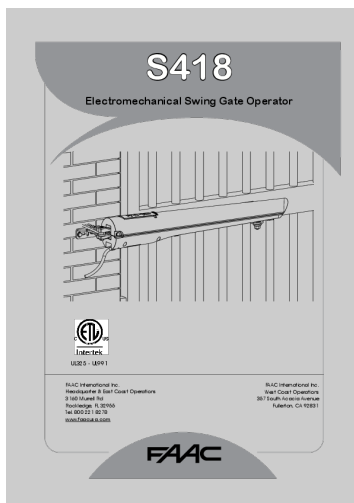 


[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide Warranty Diagram
FAAC Model S418 faac s418 manual 2016 01 Rev AFAAC 10430115 Secondary Operatorfaac
Agatedepot amfile file 38555 product 16932 |||
S418 Electromechanical Swing Gate Operator UL325 - UL991 FAAC International
Inc. Headquarter East ... the mechanical stops on opening and closing are not used
the operator stroke increases to 15.3 in **390** mm 1.3 Electrical Setup 2.
INSTALLATION 2.1 Preliminary Checks The structure of the gate d...
lang:en **score:26** filesize: 4.64 M page_count: 30 document date: 2017-09-27

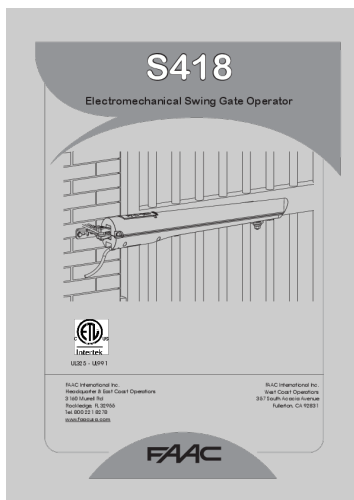 

[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide Diagram
FAAC Model S418 faac s418 manual 2016 09 Rev BFAAC 10430115 Secondary Operatorfaac
Bgatedepot amfile file 38557 product 16932 |||
S418 Electromechanical Swing Gate Operator UL325 - UL991 FAAC International
Inc. Headquarter East ... the mechanical stops on opening and closing are not used
the operator stroke increases to 15.3 in **390** mm Gate Length 10 ft 3.0 m 12 ft 3.7 m
14 ft 4.3 m 16 ft 4.9 m 1.3 Electrical Setup G...
lang:en **score:26** filesize: 5.91 M page_count: 36 document date: 2017-09-27

 E124

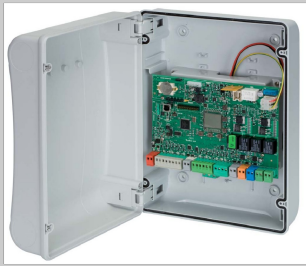

FAAC

[\[pdf\]](#) User Manual Specifications Accessories


E124 COP RevA multi indd bosat07 FAAC Control Panel Manual Automatic Gates User Manuals ISF
Watermark intelligentsecurity.org resources gates |||

E124 Intelligent Security Fire Ltd. Intelligent Security Fire Ltd. ENGLISH INDEX 1
LAY-OUT ... eters with DEFAULT values corresponding to an installation with
operators FAAC 412, 413/415, 770, **390** see default column 1 . 2 Configures the
parameters with DEFAULT values I corresponding to a...

lang:en score:26 filesize: 1.47 M page_count: 32 document date: 2010-03-11

S418

 Electromechanical Swing Gate Operator

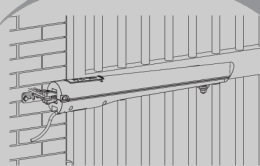

FAAC International Inc.
Headquarter & East Coast Operations
2000 Grand Ave.
Bloomington, IL 61709
Tel: 800 221 3676
www.faac.com

FAAC International Inc.
West Coast Operations
2817 Southview Avenue
Tulsa, OK 74117


FAAC

[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide Diagram

FAAC Model S418 faac s418 manual 2016 09 Rev B Electromechanical Linear Arm Operator gatedepot
amfile file 38557 product 29459 |||

S418 Electromechanical Swing Gate Operator UL325 - UL991 FAAC International
Inc. Headquarter East ... the mechanical stops on opening and closing are not used
the operator stroke increases to 15.3 in **390** mm Gate Length 10 ft 3.0 m 12 ft 3.7 m
14 ft 4.3 m 16 ft 4.9 m 1.3 Electrical Setup G...

 lang:en score:26 filesize: 5.91 M page_count: 36 document date: 2017-09-27

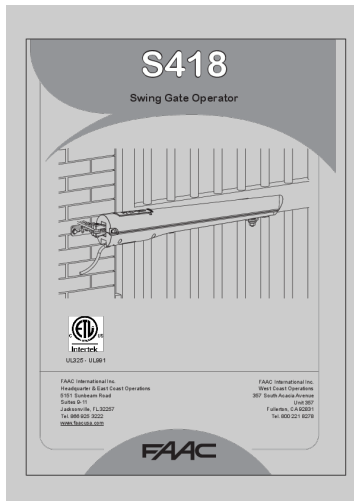


[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide Warranty Diagram

FAAC Model S418 faac s418 manual 2012 06 Rev 2FAAC 10430115 Secondary Operatorfaac

2gatedepot amfile file 38556 product 16932 |||

S418 Swing Gate Operator UL325 - UL991 FAAC International Inc. Headquarter East Coast Operations ... OPERATOR SELECTION OPERATOR TYPE SW 1 SW 2 SW 3 S450H, S800H OFF OFF OFF S418 OFF OFF ON 415, **390**, 770 ON OFF OFF DL 1 DL 2 DL 3 DL 4 DL 5 DS2 DS 2 LOCK OUTPUT MODE OUTPUT MODE Active only f...

 lang:en score:26 filesize: 5.45 M page_count: 30 document date: 2012-07-02

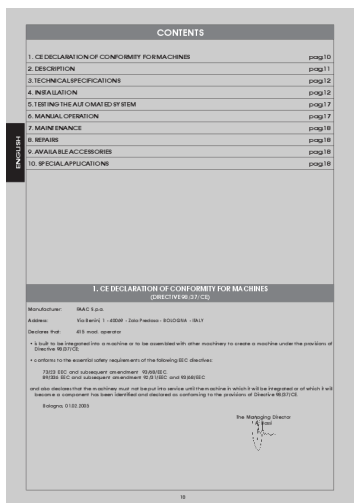

[\[pdf\]](#) User Manual Specifications Tech Sheet Datasheet Declaration of Conformity Accessories

untitled 415 MANUAL tlc direct co uk 80 Technical DataSheets Faac


CONTENTS 1. CE DECLARATION OF CONFORMITY FOR MACHINES 2.

DESCRIPTION 3. TECHNICAL SPECIFICATIONS 4. ... useful travel 2 max.

dimension B C 1 D 2 Z 3 145 290 85 60 135 295 60 60 195 **390** 125 70 170 **390** 110

60 3 min. dimension L 1110 1110 1290 1290 Fig. 4 E 3 45 45 4.3....

 lang:en score:26 filesize: 782.18 K page_count: 9 document date: 2005-04-15

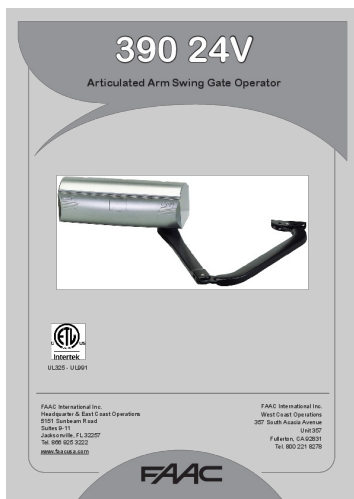

[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide Warranty Diagram

390 E024U 01 seaccesstech faac

390 24V Articulated Arm Swing Gate Operator UL325 - UL991 FAAC International

Inc. Headquarter East Coast Operations 5151 Sunbeam Road Suites 9-11

Jacksonville, FL 32257 Tel. 866 925 3222 www.faacusa.com FAAC International Inc.

West Coast Operations 357 South Acacia Avenue Unit 357 Fullerton, CA ...

lang:en score:25 filesize: 4.06 M page_count: 27 document date: 2012-02-21




[\[pdf\]](#) User Manual Instructions Specifications Warranty Diagram

faac s800h enc manual 2016 01 Rev A FAAC S800H SBW Hydraulic Swing Gate Operator gatedepot
amfile file 38625 product 30385 |||

S800H ENC 24V Underground Hydraulic Swing Gate Operator FAAC International
Inc. Headquarter East ... ANT DS 2 OPERATOR SELECTION OPERATOR TYPE SW
1 SW 2 S450H, S800H OFF OFF S418 OFF OFF 415, **390**, 770 ON OFF SW 3 OFF
ON OFF DL 1 DL 2 DL 3 DL 4 DL 5 DS2 DS 2 LOCK OUTPUT MODE OUTPUT
MODE ...

 lang:en **score:25** filesize: 7.72 M page_count: 32 document date: 2017-09-28

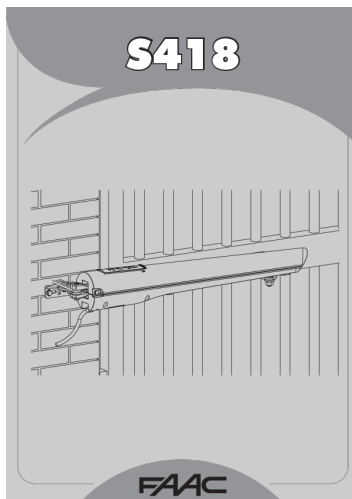


[\[pdf\]](#) User Manual SAR Rating

Manual installare Faac Handy Start S418 KIT ultramaster ro index dispatch attachments getfile
attachment id 1463 |||

S418 ITALIANO DICHIARAZIONE CE DI CONFORMIT Fabbricante: FAAC S.p.A.
Indirizzo: Via Calari, 10 ... si vogliono utilizzare gli arresti meccanici in apertura e
chiusura la corsa dell operatore diventa **390** mm. b Con ante oltre i 2.3 m obbligatorio
installare un elettroserratura per garantire il blocc...

 lang:it **score:25** filesize: 7.66 M page_count: 52 document date: 2011-10-21

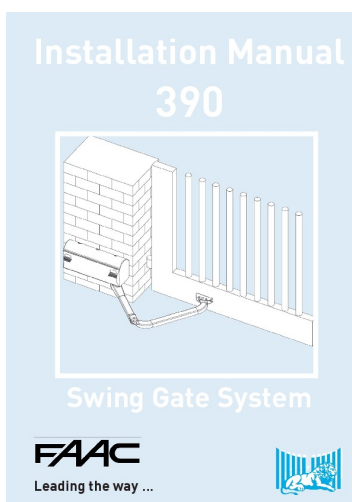


[\[pdf\]](#) User Manual Declaration of Conformity

390 indd sarahd Installation Manual manuals easygates co uk 3 A B C 40 60 α° X Fig 4 6 5 ELECTRICAL
EQUIPMENT standards system INSTALLATION OF AUTOMATION 1 PRELIMINARY CHECKS To
ensure safety and an efficient automation make sure the 2013 02 |||

Installation Manual **390** Swing Gate System Leading the way ... CE DECLARATION
OF MACHINE CONFORMITY DIRECTIVE 89/392/EEC, ANNEX II, PART B
Manufacturer : FAAC S.p.A. Address: Via Benini, 1 - 40069 Zola Predosa BOLOGNA
- ITALY Declares that: Operator mod. **390** is manufactured to be incorporat...

 lang:en **score:25** filesize: 456.02 K page_count: 10 document date: 2007-05-02

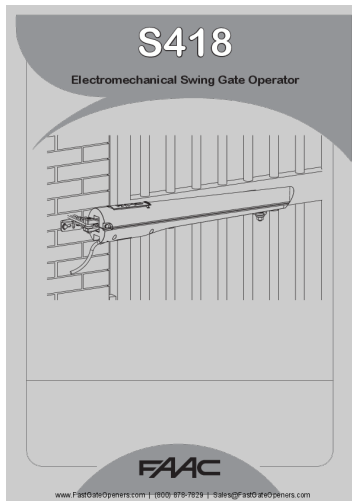


[\[pdf\]](#) User Manual Specifications Dimension Guide Accessories Diagram

FAAC Model S418 Manual 5 24fastgateopeners store media s 24 |||

S418 Electromechanical Swing Gate Operator www.FastGateOpeners.com 800 878-7829 Sales FastGate ... the mechanical stops on opening and closing are not used the operator stroke increases to 15.3 in **390** mm Gate Length 10 ft 3.0 m 12 ft 3.7 m 14 ft 4.3 m 16 ft 4.9 m 1.3 Electrical Setup G...

 lang:en **score:25** filesize: 10.44 M page_count: 36 document date: 2024-05-23

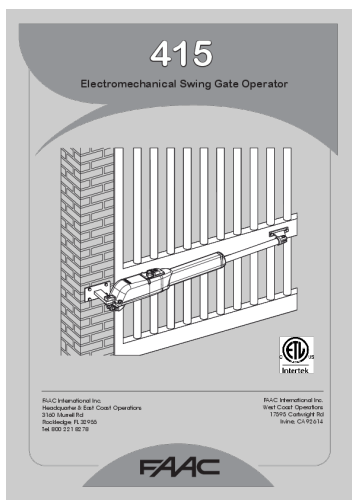

[\[pdf\]](#) User Manual Specifications Dimension Guide Accessories

Download Manual FAAC 415 Single Swing Gate Opener Kit 24V Elitegates net manual v 1731355138 cdn shopify s files 1 0141 9617 8998 |||

415 Electromechanical Swing Gate Operator FAAC International Inc. Headquarter East Coast Operatio ... t Ambient Temperature Operator Weight Protection Class 24 Vdc 70 W 3 A 630 lbf 280 daN 15.35 in **390** mm 0.63 in /sec 1.6 cm/sec 15 ft 4.6 m 700 lb 318 Kg 4F 131F -20 C 55C 17.6 lb 8 Kg ...

lang:en **score:25** filesize: 6.07 M page_count: 32 document date: 2024-10-03



[\[pdf\]](#) User Manual Instructions Specifications Diagram

faac s800h enc manual 2016 09 Rev B FAAC S800H SBW Hydraulic Swing Gate Operator gatedepot
amfile file 38626 product 30385 |||

S800H ENC 24V Underground Hydraulic Swing Gate Operator FAAC International
Inc. Headquarter East ... ANT DS 2 OPERATOR SELECTION OPERATOR TYPE SW
1 SW 2 S450H, S800H OFF OFF S418 OFF OFF 415, **390**, 770 ON OFF SW 3 OFF
ON OFF DL 1 DL 2 DL 3 DL 4 DL 5 DS2 DS 2 LOCK OUTPUT MODE OUTPUT
MODE ...

lang:en score:25 filesize: 8.85 M page_count: 36 document date: 2017-09-28



[\[pdf\]](#) User Manual Specifications

Manual programare centrala Faac E024S ultramaster ro index dispatch attachments getfile attachment id
1462 |||

E024S ENGLISH INDEX 0 BOX LAYOUT.....
F MEDIUM - HIGH FORCE ON ON HIGH FORCE OFF OFF MOTOR 391 OFF ON
MOTOR 418 ON OFF MOTOR 413-415-**390**-770 ON ON HYDRAULIC MOTOR *
S450H / S700H * If DS3-DS4 are set to ON, during the setup pha...

lang:i-klngon score:25 filesize: 1.27 M page_count: 14 document date: 2009-07-14