

## Scheppach 3907801009

# Scheppach 3907801009 Mixer Attachment Instruction Manual

For use with Scheppach PM1600S Hand Mixer

## 1. INTRODUCTION

---

This manual provides essential instructions for the safe and effective use of your Scheppach 3907801009 Mixer Attachment. This accessory is specifically designed for compatibility with the Scheppach PM1600S Hand Mixer and is intended for mixing various materials such as mortar, plaster, and paint. Please read this manual thoroughly before initial use and retain it for future reference.

## 2. SAFETY INSTRUCTIONS

---

Always observe the following safety precautions to prevent injury or damage to the product:

- **Disconnect Power:** Always ensure the hand mixer is unplugged from the power source before attaching, detaching, or cleaning the mixer attachment.
- **Personal Protective Equipment (PPE):** Wear appropriate safety glasses, gloves, and a dust mask when operating the mixer, especially when working with dusty materials.
- **Secure Attachment:** Verify that the mixer attachment is securely fastened to the hand mixer shaft before operation. A loose attachment can cause injury or damage.
- **Material Suitability:** Use the attachment only for mixing materials as specified (mortar, plaster, paint). Do not use for food preparation or other unintended purposes.
- **Maintain Control:** Always maintain a firm grip on the hand mixer during operation. Be prepared for torque reactions, especially when starting or mixing dense materials.
- **Avoid Overloading:** Do not exceed the recommended speed or capacity of your Scheppach PM1600S Hand Mixer.
- **Clear Work Area:** Keep hands, clothing, and other objects clear of the rotating mixer attachment.

## 3. PACKAGE CONTENTS

---

Carefully unpack the product and check for any damage. Ensure all items are present:

- 1 x Scheppach 3907801009 Mixer Attachment

If any parts are missing or damaged, contact your retailer or Scheppach customer service.

## 4. SETUP

---

Follow these steps to attach the mixer to your Scheppach PM1600S Hand Mixer:

1. Ensure your Scheppach PM1600S Hand Mixer is unplugged from the power outlet.
2. Locate the attachment point on the hand mixer shaft.
3. Align the Scheppach 3907801009 Mixer Attachment with the shaft.
4. Push and twist the attachment until it locks securely into place. Refer to your PM1600S manual for specific attachment instructions if needed.
5. Gently pull on the attachment to confirm it is firmly secured and will not detach during operation.



Image 1: Scheppach 3907801009 Mixer Attachment. This image shows the mixer attachment, which connects to the main hand mixer unit.

## 5. OPERATING INSTRUCTIONS

---

Once the mixer attachment is securely installed, you can begin mixing:

1. Prepare your mixing material in a suitable, sturdy container.
2. Plug the Scheppach PM1600S Hand Mixer into a grounded power outlet.
3. Immerse the mixer attachment into the material before starting the mixer. Ensure the attachment is fully submerged to prevent splashing.
4. Start the hand mixer at a low speed setting. Gradually increase the speed as needed for the material being mixed.
5. Move the mixer attachment slowly and steadily through the material to ensure thorough and even mixing. Avoid lifting the attachment out of the material while it is rotating.
6. Once mixing is complete, switch off the hand mixer and wait for the attachment to come to a complete stop before removing it from the material.
7. Unplug the hand mixer from the power outlet.

## 6. MAINTENANCE

---

Proper maintenance ensures the longevity and performance of your mixer attachment:

- **Cleaning:** Immediately after each use, clean the mixer attachment thoroughly. Remove all material residue using a stiff brush and water. For stubborn materials, a suitable solvent may be used, ensuring it does not damage the attachment's finish.
- **Inspection:** Regularly inspect the attachment for signs of wear, bending, or damage. Do not use a damaged attachment.
- **Storage:** Store the clean and dry mixer attachment in a dry place, away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

---

If you encounter issues with your mixer attachment, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Attachment does not fit or is loose.	Incorrect alignment or not fully secured.	Ensure the attachment is correctly aligned with the hand mixer shaft and pushed/twisted until it locks securely. Refer to the PM1600S manual.
Poor mixing results.	Material too thick, insufficient mixing time, or incorrect speed.	Adjust material consistency if possible. Increase mixing time. Experiment with different speed settings on the hand mixer.
Excessive vibration during operation.	Attachment not securely fastened or bent shaft.	Check that the attachment is firmly secured. Inspect the attachment for any visible damage or bending. Replace if damaged.
Mixer attachment gets stuck in material.	Material too dense or mixer speed too low.	Increase mixer speed gradually. If material is too dense, consider adding appropriate liquid to reduce viscosity.

## 8. SPECIFICATIONS

---

Feature	Detail
---------	--------

Feature	Detail
Model Number	3907801009
Manufacturer	Scheppach
Item Weight	1.36 pounds (0.62 kg)
Product Dimensions	4.72 x 4.72 x 8.66 inches (12 x 12 x 22 cm)
Color	Silver
Compatibility	Scheppach PM1600S Hand Mixer
Intended Use	Mixing mortar, plaster, paint, etc.

## 9. WARRANTY AND SUPPORT

---

For warranty information regarding your Scheppach 3907801009 Mixer Attachment, please refer to the documentation provided with your Scheppach PM1600S Hand Mixer or contact Scheppach customer support directly. Keep your purchase receipt as proof of purchase.

For technical assistance or spare parts, please contact:

**Scheppach Customer Service**

*(Contact details typically found on the manufacturer's website or original product packaging)*