

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Mount Plus](#) /

> [Mount Plus MP-APM-06-01 Streaming Media Player Wall Mounting Bracket User Manual](#)

Mount Plus MP-APM-06-01

Mount Plus MP-APM-06-01 Streaming Media Player Wall Mounting Bracket User Manual

Model: MP-APM-06-01 | Brand: Mount Plus

INTRODUCTION

This manual provides instructions for the installation and use of the Mount Plus MP-APM-06-01 Streaming Media Player Wall Mounting Bracket. This adjustable bracket is designed to securely hold small, narrow media devices such as Apple TV, Roku, and Fire TV, weighing up to 11 lbs. It allows for discreet mounting behind a television, contributing to a clean and organized entertainment area.

SAFETY INFORMATION

- Read all instructions carefully before installation.
- Ensure the mounting surface can support the weight of the bracket and the device.
- Use appropriate tools and safety gear during installation.
- Do not exceed the maximum weight capacity of 11 lbs (5 kg).
- Keep small parts away from children.

PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- 1x MP-APM-06-01 Wall Mounting Bracket
- 2x Drywall Screws
- 2x Drywall Anchors
- 1x Elastic Cord (for securing device)



Figure 1: Package Contents - Wall mounting bracket, screws, anchors, and elastic cord.

SETUP AND INSTALLATION

The bracket can be installed on various wall types. Ensure you select the appropriate mounting hardware for your wall material.

Step 1: Choose Mounting Location

Select a location on the wall where you intend to mount the bracket. This is typically behind your television for a concealed setup. Use a level to ensure the bracket is straight.



Figure 2: Example of bracket mounted on a wall next to a television.

Step 2: Mark Drill Holes

Hold the bracket against the wall at the desired height and position. Use a pencil to mark the locations for the two mounting screws through the pre-drilled holes on the bracket.



Video 1: Installation overview showing marking drill holes for wall mounting.

Step 3: Drill Pilot Holes and Install Anchors (if applicable)

- **For Wood Studs:** Drill pilot holes using a suitable drill bit (e.g., 1/8 inch or 3mm). Secure the bracket directly with the provided screws.
- **For Drywall:** Drill pilot holes using a suitable drill bit for the provided drywall anchors. Insert the drywall anchors into the holes until flush with the wall surface.
- **For Masonry/Concrete:** Drill pilot holes using a masonry drill bit. Insert appropriate masonry anchors (not included) into the holes.

Step 4: Secure the Bracket

Align the bracket with the pilot holes/anchors. Insert the screws and tighten them until the bracket is firmly secured to the wall. Do not overtighten.




Figure 3: Detail of the rotary knob for adjustment.

OPERATING INSTRUCTIONS


Adjusting and Securing Your Device

1. **Adjust Width:** The bracket features a rotary knob design (Figure 3) that allows you to adjust the width to fit your device. Turn the knob to expand or contract the bracket's holding arms until it snugly fits your media player. The adjustable depth ranges from 23 mm to 37 mm.
2. **Place Device:** Carefully place your streaming media player into the adjusted bracket.
3. **Secure Device:** For added security, use the provided elastic cord to firmly hold your equipment within the bracket. Wrap the cord around the device and the bracket's securing points.
4. **Connect Cables:** The open construction of the bracket allows for easy access to ports for connecting power, HDMI, and other necessary cables.

Dimension(mm)

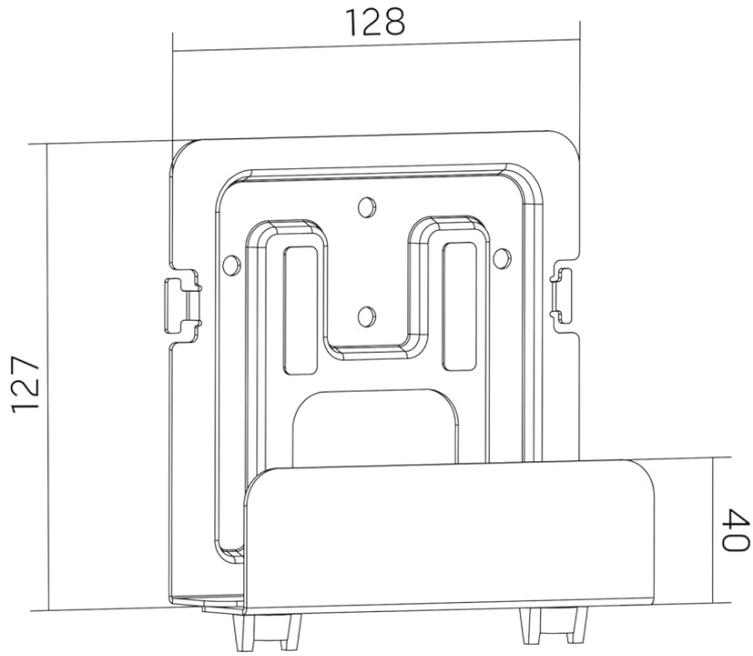

APM-06-01

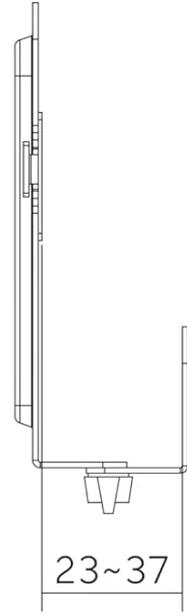

Inside length

23mm < Width of device installed < 37mm

Figure 4: Example of a device (Nintendo Switch) secured in the bracket.



Figure 5: Open construction allows for easy cable management.

The bracket's design ensures that remote control signals (Infrared, Radio Frequency, and Bluetooth) are not blocked when the device is mounted behind a TV.

MAINTENANCE

- Periodically check the tightness of the mounting screws to ensure the bracket remains securely attached to the wall.
- Inspect the elastic cord for any signs of wear or damage. Replace if necessary.
- Clean the bracket with a soft, dry cloth. Avoid abrasive cleaners or solvents.

TROUBLESHOOTING

- **Device does not fit:** Ensure your device's width is within the adjustable range of 23 mm to 37 mm. The bracket's height is a maximum of 10 inches.
- **Bracket feels loose:** Re-tighten the mounting screws. If mounted on drywall, ensure anchors are properly installed and not stripped. Consider relocating to a wood stud if possible for maximum stability.
- **Remote control issues:** The bracket is designed not to interfere with remote signals. Test your remote by holding your device behind the TV before final mounting to confirm functionality.

SPECIFICATIONS

Model Number	MP-APM-06-01
Brand	Mount Plus
Material	Stainless Steel
Color	Black
Mounting Type	Wall Mount
Adjustable Depth	23 mm - 37 mm (0.9 - 1.46 inches)
Maximum Vertical Height	10 inches (254 mm)
Maximum Weight Capacity	11 lbs (5 kg)
Item Weight	12 ounces (0.34 kg)
Package Dimensions	5.7 x 5.1 x 1.3 inches



Figure 6: Dimensional drawing of the MP-APM-06-01 bracket.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt for warranty claims.

