

[Manuals.plus](#) /

› [Betus](#) /

› Betus Digital Travel Alarm Clock User Manual

Betus A.Clock.Animated.Horse

Betus Digital Travel Alarm Clock User Manual

Model: A.Clock.Animated.Horse

1. INTRODUCTION

This manual provides detailed instructions for the Betus Digital Travel Alarm Clock, Model A.Clock.Animated.Horse. It covers setup, operation, maintenance, and troubleshooting to ensure optimal use of your device. This compact, battery-operated clock features a large LCD display with white backlight, showing time, date, day, and temperature. It also includes an alarm with snooze function and a countdown timer.

2. PRODUCT OVERVIEW

2.1 Front Display

The front LCD display shows the current time (AM/PM indicator), month, date, day of the week, and temperature. Alarm and snooze icons will appear when activated.



Figure 2.1: Front display of the Betus Digital Travel Alarm Clock. The display shows time (10:02 AM), date (1/1), day (THU), and temperature (25.0°C). Icons for light, time, alarm, snooze, date, temperature, and countdown are shown on the left.

2.2 Back Controls and Components

The back of the clock houses the control buttons and the battery compartment.



Figure 2.2: Back panel of the clock with labeled buttons: SPEAKER, TIMER, UP/12/24, SET, DOWN/°C/°F, and MODE. The battery compartment for a CR2032 battery is also visible.

- **TIMER:** Used to activate and set the countdown timer.
- **UP/12/24:** Used to increase values during setting and toggle between 12-hour and 24-hour time formats.
- **SET:** Used to enter and confirm settings for time, date, and alarm.
- **DOWN/°C/°F:** Used to decrease values during setting and toggle between Celsius and Fahrenheit temperature units.
- **MODE:** Used to switch between Time mode and Alarm mode.
- **SPEAKER:** Alarm sound output.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the clock (refer to Figure 2.2).
2. Open the battery cover.
3. Insert one CR2032 button cell battery, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery cover securely.

4. OPERATING INSTRUCTIONS

4.1 Setting Time Format (12/24 Hour)

In Time mode (normal display), press the **UP/12/24** button to toggle between 12-hour (with AM/PM indicator) and 24-hour time formats.

4.2 Setting Time and Date

It is crucial to set the correct year first, as the day of the week is automatically calculated based on the year, month, and date.

TIME SETTING

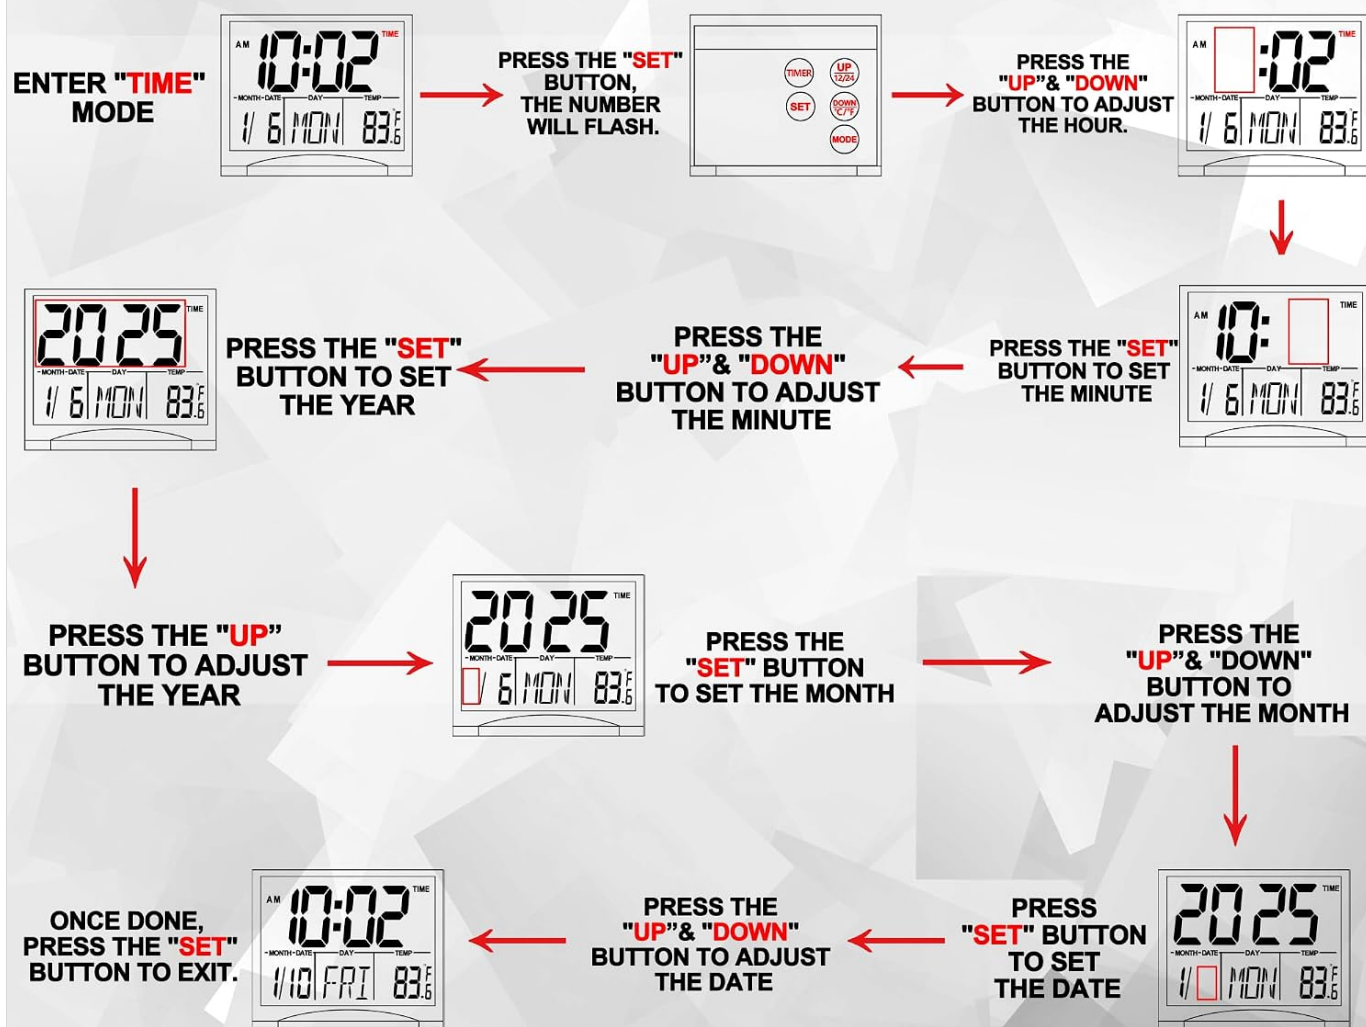


Figure 4.2: Visual guide for setting the time and date.

1. In Time mode, press the **SET** button once. The hour digits will flash.
2. Use the **UP/12/24** or **DOWN/°C/°F** buttons to adjust the hour.
3. Press **SET** again. The minute digits will flash. Adjust minutes using **UP/12/24** or **DOWN/°C/°F**.
4. Press **SET** again. The year digits will flash. Adjust the year using **UP/12/24** or **DOWN/°C/°F**.
5. Press **SET** again. The month digits will flash. Adjust the month using **UP/12/24** or **DOWN/°C/°F**.
6. Press **SET** again. The date digits will flash. Adjust the date using **UP/12/24** or **DOWN/°C/°F**.
7. Press **SET** one last time to exit the setting mode. The day of the week will automatically update.

4.3 Setting Alarm

1. Press the **MODE** button once to enter Alarm mode. The alarm time will be displayed.
2. Press the **SET** button. The alarm hour digits will flash. Use **UP/12/24** or **DOWN/°C/°F** to set the desired alarm hour.
3. Press **SET** again. The alarm minute digits will flash. Use **UP/12/24** or **DOWN/°C/°F** to set the desired alarm minutes.
4. Press **SET** again to cycle through snooze time settings (default is 5 minutes, adjustable). Use **UP/12/24** or

DOWN/°C/°F to adjust.

5. Press **SET** again to cycle through 9 available alarm tones. Use **UP/12/24** or **DOWN/°C/°F** to select your preferred tone.
6. Press **SET** one last time to exit alarm setting mode.

4.4 Turning Alarm On/Off and Snooze Function



How to Turn Off the alarm?

If you turn on the alarm, there will be a "⏰" icon displayed on the clock.

If you want to turn off the alarm mode, you should

1. Press the "MODE" button in TIME mode, and you will see a "🔔" bell icon and "⏰" icon displayed. This means you successfully entered the Alarm mode setting.
2. Press the "UP" or "DOWN" button until there are "- : -" display.
(You can also use this way to close the snooze)
3. Press the "MODE" button until it displays the normal time.

If there is only a "TIME" icon and no "⏰" icon display, this means you successfully turn off the alarm.

Figure 4.4: Instructions for turning off the alarm.

- **To Activate/Deactivate Alarm:** In Alarm mode, press the **UP/12/24** or **DOWN/°C/°F** button to turn the alarm on or off. A bell icon and a speaker icon will appear on the display when the alarm is active. If only the time is displayed without these icons, the alarm is off.
- **Alarm Duration:** When the alarm sounds, it will ring for 1 minute.
- **Snooze Function:** During an active alarm, press any button (except **SET**) to activate the snooze function. The alarm will sound again after the set snooze interval (e.g., 5 minutes). The snooze function can be used twice.
- **To Stop Alarm:** To completely stop the alarm from sounding and disable snooze, press the **SET** button during the alarm or snooze period.

4.5 Using the Countdown Timer



Figure 4.5: The countdown timer display.

1. Press the **TIMER** button to enter countdown timer mode.
2. Press the **SET** button to set the desired countdown time (hours and minutes). Use **UP/12/24** or **DOWN/°C/°F** to adjust values.
3. Press the **TIMER** button again to start the countdown.
4. To pause/resume the timer, press **TIMER**. To reset, press **SET** while paused.

4.6 Backlight Operation

A button located below the digital clock display activates the backlight. Press this button to illuminate the display for approximately 8 seconds.

4.7 Temperature Unit Selection

In Time mode, press the **DOWN/°C/°F** button to toggle the temperature display between Celsius (°C) and Fahrenheit (°F).

5. MAINTENANCE

5.1 Battery Replacement

When the display becomes dim or the clock functions erratically, it is time to replace the CR2032 button cell battery. Follow the steps in Section 3.1 for battery installation.

5.2 Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or immerse the clock in water.

6. TROUBLESHOOTING

- **Incorrect Day of the Week:** Ensure you have set the correct year during the time setting process (refer to Section 4.2). The day of the week is automatically calculated.
- **Alarm Not Sounding/Stopping:** Verify that the alarm is activated (bell and speaker icons visible in Alarm mode). To stop a sounding alarm, press the **SET** button.
- **Display is Dim or Blank:** Replace the CR2032 battery.
- **Backlight Not Working:** Ensure the backlight button is pressed firmly. The backlight is designed to stay on for 8 seconds only.
- **Difficulty Setting Time/Alarm:** Carefully follow the step-by-step instructions in Section 4. If issues persist, please contact customer support.

7. SPECIFICATIONS

Brand	Betus
Model Number	A.Clock.Animated.Horse
Display Type	Digital LCD
Backlight Color	White
Features	Alarm, Snooze, Countdown Timer, Calendar, Temperature Display (C/F), 12/24 Hour Format
Power Source	1 x CR2032 Button Cell Battery
Material	ABS Plastic
Product Dimensions (Folded)	Approx. 3.4" W x 3" H x 0.55" D
Item Weight	2.9 Ounces
Alarm Tones	9 selectable melodies
Snooze Duration	Adjustable, up to two uses per alarm

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Betus provides a one-year warranty for this product. We stand behind the quality of our products.

8.2 Customer Support

If you encounter any difficulties with setting up or operating your Betus Digital Travel Alarm Clock, please do not hesitate to contact Betus customer support. For additional assistance, tutorial videos may be available on the product's detail page on the retailer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question