

## **AVERY 08941**

# **Avery Dennison Standard Tagging Gun Replacement Needles User Manual**

Model: #08941



## **1. INTRODUCTION**

---

This manual provides instructions for the proper use, installation, and maintenance of Avery Dennison Standard Tagging Gun Replacement Needles, Model #08941. These needles are designed to replace worn or damaged needles in compatible tagging guns, ensuring continued efficient operation for attaching tags to various materials.



Image: The Avery Dennison Standard Tagging Gun Replacement Needles, 4-pack, sealed in their clear plastic packaging.

## 2. COMPATIBILITY

These replacement needles are specifically designed for use with **Avery Dennison Standard Tagging Guns** and **Buttoneer tools**. Ensure your tagging gun model is compatible with standard-sized needles before attempting installation.

## 3. PACKAGE CONTENTS

Each package contains:

- Four (4) Avery Dennison Standard Tagging Gun Replacement Needles (Model #08941)



Image: The four replacement needles displayed within their opened clear plastic case.

## 4. INSTALLATION (NEEDLE REPLACEMENT)

Follow these steps to safely replace the needle in your compatible Avery Dennison tagging gun:

1. **Safety First:** Always ensure the tagging gun is unloaded (no fasteners inserted) before attempting to replace the needle. Point the gun away from yourself and others.
2. **Locate the Needle Lock:** On most standard tagging guns, the needle is secured by a locking mechanism, often a small plastic collar or cap at the front of the gun, near the needle base.
3. **Remove the Old Needle:**
  - If your gun has a locking cap, turn it counter-clockwise (usually 90 degrees) to unlock the needle.
  - Carefully pull the old needle straight out from the gun. Dispose of the old needle safely, as it may be sharp.
4. **Insert the New Needle:**





Image: A detailed close-up of a single replacement needle, showing its sharp tip and plastic base.

- Align the new replacement needle (Model #08941) with the needle slot on the tagging gun. The flat side of the needle's base should align with the corresponding slot in the gun.
- Gently push the new needle straight into the gun until it is fully seated.

#### 5. Secure the New Needle:

- If your gun has a locking cap, turn it clockwise (usually 90 degrees) to lock the new needle securely in place. Ensure it clicks or locks firmly.
- Gently tug on the needle to confirm it is securely fastened and does not wobble.

6. **Test:** Load a few fasteners and test the gun on a scrap piece of material to ensure the needle is properly installed and functioning correctly.

## 5. OPERATION

---

Once the replacement needle is correctly installed, your Avery Dennison Standard Tagging Gun will operate as usual. Ensure you use compatible fasteners (barbs) with your tagging gun and follow the specific operating instructions for your tagging gun model.

## 6. MAINTENANCE

---

- **Cleaning:** Periodically inspect the needle for any lint, debris, or adhesive residue. If necessary, gently wipe the needle with a clean, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store unused replacement needles in their original protective packaging in a cool, dry place to prevent damage or corrosion.
- **Replacement:** Replace needles promptly if they become bent, dull, or broken to prevent damage to materials and ensure efficient tagging.

## 7. TROUBLESHOOTING

---

If you encounter issues after replacing the needle, consider the following:

- **Needle Not Seating Properly:** Ensure the needle's flat base is correctly aligned with the slot in the gun and pushed in completely. Verify the locking mechanism is fully engaged.
- **Needle Bending or Breaking Frequently:**
  - Check if you are using the correct type of needle for your tagging gun and the material being tagged.
  - Ensure the material is not excessively thick or dense for a standard needle.
  - Verify the needle is securely locked in place and not loose.
- **Fasteners Not Attaching:**
  - Confirm the needle is fully extended and retracted with each trigger pull.
  - Check if the fasteners (barbs) are loaded correctly and are compatible with your gun and needle.
  - Inspect the needle tip for any damage or burrs that might impede fastener passage.

## 8. SPECIFICATIONS

---

Attribute	Detail
Model Number	#08941
Brand	AVERY Dennison
Item Weight	0.634 ounces (approx. for 4-pack)
Package Dimensions	3.03 x 2.17 x 0.35 inches
Quantity	4 needles per pack
Compatibility	Standard Tagging Guns and Buttoneer Tools

## 9. WARRANTY AND SUPPORT

For specific warranty information or technical support regarding your Avery Dennison Standard Tagging Gun Replacement Needles, please contact Avery Dennison customer service directly. Refer to the packaging or the official Avery Dennison website for contact details.

**Avery Dennison Official Website:** [www.averydennison.com](http://www.averydennison.com)

