

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Westminster](#) /

› [Westminster Bright Switch User Manual](#)

## Westminster 2430

# Westminster Bright Switch User Manual

Model: 2430

## INTRODUCTION

Thank you for purchasing the Westminster Bright Switch. This manual provides essential information for the proper setup, operation, and maintenance of your new light. Please read this manual thoroughly before use and retain it for future reference.

The Westminster Bright Switch is designed to resemble a large classic on/off switch, providing a unique and functional light source. It operates on batteries, making it portable and versatile for various uses, including as a night light.

## PACKAGE CONTENTS

- Westminster Bright Switch unit
- *(Note: Batteries are not included and must be purchased separately.)*

## SETUP

### 1. Battery Installation

1. Locate the battery compartment on the underside or back of the Bright Switch.
2. Open the battery compartment cover. This may require a small screwdriver depending on the design.
3. Insert three (3) AA batteries into the compartment, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.



*Figure 1: Front view of the Bright Switch, indicating ON/OFF positions.*



Figure 2: The Bright Switch unit, demonstrating its size and design.

## OPERATING INSTRUCTIONS

The Westminster Bright Switch is designed for simple operation.

1. To turn the light **ON**, gently flip the switch to the "ON" position. The light will illuminate.
2. To turn the light **OFF**, gently flip the switch to the "OFF" position. The light will turn off.

This device is suitable for use as a night light or a decorative light source in various indoor settings.

## MAINTENANCE

- **Cleaning:** Wipe the surface of the Bright Switch with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Battery Replacement:** When the light dims or fails to illuminate, it is time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Always replace all three batteries at the same time with new ones.
- **Storage:** If the Bright Switch will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the unit. Store in a cool, dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	<ul style="list-style-type: none"><li>• Batteries are dead or low.</li><li>• Batteries are inserted incorrectly.</li><li>• Battery compartment cover is not fully closed.</li></ul>	<ul style="list-style-type: none"><li>• Replace with new AA batteries.</li><li>• Check battery polarity and reinsert correctly.</li><li>• Ensure battery compartment cover is securely fastened.</li></ul>
Light is dim.	Batteries are low.	Replace all three AA batteries with new ones.

Problem	Possible Cause	Solution
Switch feels loose or stuck.	Foreign object obstructing movement or internal damage.	Do not force the switch. Inspect for visible obstructions. If damaged, discontinue use.

## SPECIFICATIONS

---

**Model:** 2430

**Brand:** Westminster

**Dimensions (Approx.):** 7.5" (D) x 3.75" (W) x 2.75" (H)

**Weight (Approx.):** 0.5 Pounds (8 ounces)

**Power Source:** 3 x AA Batteries (not included)

**Light Source:** LED

**Base Material:** Plastic

**Mounting Type:** Tabletop

**Water Resistance:** Not Water Resistant

**UPC:** 035594024309

## WARRANTY AND SUPPORT

---

Specific warranty information for the Westminster Bright Switch is not provided within this manual. For details regarding warranty coverage, returns, or technical support, please refer to the retailer where the product was purchased or contact Westminster directly through their official website or customer service channels.

Always retain your proof of purchase for any warranty claims.

