

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› Instruction Manual for ECONTROLLY AA59-00442A Replacement Remote Control

ECONTROLLY Remote-AA59-00442A

Instruction Manual for ECONTROLLY AA59-00442A Replacement Remote Control

Model: Remote-AA59-00442A

INTRODUCTION

This manual provides instructions for the ECONTROLLY AA59-00442A Replacement Remote Control, designed for various Samsung TV models including UN40D6400, UN40D6450, UN46D6400, UN46D6450, UN55D6400, UN55D6450, and others listed in the compatibility section. This remote serves as a direct replacement and requires no programming.



Figure 1: Front view of the AA59-00442A Replacement Remote Control.

This image displays the front of the ECONTROLLY AA59-00442A remote control, showing all its buttons and their labels. The remote is black with a brushed texture, featuring a standard layout for Samsung TVs, including power, source, number pad, volume, channel, menu, smart hub, and navigation buttons.

1. Battery Installation

The ECONTROLLY AA59-00442A remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 2: Battery compartment with batteries installed.

This image shows the rear of the remote control with the battery cover removed, revealing the two AAA battery slots. Two AAA batteries are shown correctly inserted into the compartment, demonstrating the proper orientation for installation.

2. Initial Use

This replacement remote control is pre-programmed and does not require any additional setup or pairing. Once batteries are installed, it is ready for immediate use with compatible Samsung TV models.

OPERATING INSTRUCTIONS

The remote control features a standard layout for intuitive operation of your Samsung TV. Below are the primary functions of key buttons:

- **POWER (Red Button):** Turns the TV on or off.
- **ON/OFF (Orange Button):** May function as an alternative power button or for specific power modes depending on the TV model.
- **SOURCE:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **Number Pad (0-9):** Directly enters channel numbers.
- **VOL (+/-):** Adjusts the volume level.
- **CH (Up/Down Arrows):** Changes TV channels.
- **MUTE:** Mutes or unmutes the TV audio.
- **MENU:** Opens the TV's main menu.
- **SMART HUB:** Accesses the Samsung Smart Hub for apps and streaming services.
- **TOOLS:** Opens a quick menu with common TV functions.
- **INFO:** Displays information about the current program or input.
- **Navigation Pad (Up/Down/Left/Right/Enter):** Navigates through menus and selects options.
- **RETURN:** Goes back to the previous screen or menu.
- **EXIT:** Exits the current menu or function.
- **Color Buttons (A, B, C, D):** Used for specific functions within certain applications or menus, as indicated on the TV screen.
- **E-MANUAL:** Accesses the TV's electronic user manual.
- **Playback Controls (Rewind, Play, Fast Forward, Pause, Stop):** Controls media playback.

MAINTENANCE

Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Always replace both batteries at the same time with new AAA alkaline batteries.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as these can damage the remote's electronics.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity.

Problem	Possible Cause	Solution
Remote works intermittently.	Weak batteries or obstruction between remote and TV.	Replace batteries. Ensure a clear line of sight between the remote's IR emitter and the TV's IR receiver.
Certain buttons do not work.	Button malfunction or specific TV model incompatibility for that function.	Ensure the remote is pointed directly at the TV. If the issue persists for a specific button, it might indicate a defect or a function not supported by your specific TV model.

If troubleshooting steps do not resolve the issue, please refer to the "Warranty and Support" section for further assistance.

SPECIFICATIONS

- **Model:** Remote-AA59-00442A
- **Brand:** ECONTROLLY
- **Compatible Devices:** Samsung Televisions (Specific models include UN40D6400, UN40D6450, UN46D6400, UN46D6450, UN55D6400, UN55D6450, UN40D6500VF, UN46D6500VF, UN32D6500VF, UN32D6500, UN40D6500, UN46D6500, UN55D6500, PN59D6500DF, PN51D6500DF, UN40D6400UF, UN40D6420UF, UN46D6400UF, UN46D6420UF, etc.)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 7 x 2 x 0.65 inches
- **Item Weight:** 1 ounce
- **Color:** Black
- **Special Feature:** IR remote

WARRANTY AND SUPPORT

Specific warranty information for the ECONTROLLY AA59-00442A Replacement Remote Control is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please refer to the product listing on the retailer's website or contact ECONTROLLY customer service directly.

For common issues, please consult the "Troubleshooting" section of this manual.

