

[Manuals.plus](#) /

› [ADESSO](#) /

› Adesso WKB-1330CB Wireless Keyboard and Mouse Combo User Manual

ADESSO WKB-1330CB

Adesso WKB-1330CB Wireless Keyboard and Mouse Combo User Manual

MODEL: WKB-1330CB

1. Introduction

This manual provides instructions for the setup, operation, and maintenance of your Adesso WKB-1330CB Wireless Desktop Multimedia Keyboard and Mouse Combo. This combo offers a reliable 2.4GHz wireless connection, multimedia hotkeys, and an ambidextrous mouse design for enhanced productivity.

2. Package Contents

- Wireless Keyboard
- Wireless Mouse
- USB Nano Receiver
- 2 AAA Batteries

3. System Requirements

- Operating System: Windows 10, Windows 8, Windows 7, Windows Vista, Windows XP
- Hardware Platform: PC
- Available USB Port

4. Setup Instructions

Follow these steps to set up your wireless keyboard and mouse combo:



Image: Adesso WKB-1330CB Wireless Keyboard and Mouse Combo, showing the full-size black keyboard and the matching black wireless mouse.

1. **Install Batteries:** Open the battery compartments on the underside of both the keyboard and the mouse. Insert the included AAA batteries, ensuring correct polarity (+/-). Close the battery compartments securely.
2. **Connect USB Nano Receiver:** Plug the USB Nano Receiver into an available USB port on your computer. The system should automatically detect and install the necessary drivers.
3. **Power On Devices:** Locate the power switch on the underside of the mouse and slide it to the "ON" position. The keyboard typically does not have a separate power switch and will activate once batteries are installed and the receiver is connected.
4. **Test Connection:** Once the receiver is connected and devices are powered on, the keyboard and mouse should be ready for use. Test by typing and moving the mouse to ensure functionality.

5. Operating Instructions

5.1 Keyboard Features

- **Full-Size Layout:** Provides a complete set of keys for comfortable and efficient typing.
- **Multimedia Hotkeys:** Dedicated keys for quick access to media player controls (e.g., Play/Pause, Volume Up/Down, Mute) and email functions. These are typically located above the function keys (F1-F12).
- **Spill-Resistant Design:** Features drain holes to help protect against accidental liquid spills, minimizing damage.
- **Membrane Switch:** Designed for a quiet and responsive typing experience with a 5 million keystroke lifecycle.

5.2 Mouse Features

- **3-Button Design:** Standard left-click, right-click, and scroll wheel with click function.
- **1200 DPI Optical Sensor:** Provides precise tracking and smooth cursor movement.
- **Ambidextrous Design:** Suitable for both left-handed and right-handed users.

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the keyboard and mouse. For stubborn dirt, a slightly damp cloth can be used, ensuring no liquid enters the device.
- **Battery Replacement:** Replace batteries when performance degrades. For the keyboard, replace with two new AAA batteries. For the mouse, replace with the appropriate battery type (typically AAA). Dispose of old batteries

responsibly.

- **Storage:** When not in use for extended periods, turn off the mouse to conserve battery life. Store in a cool, dry place.

7. Troubleshooting

- **No Response from Keyboard/Mouse:**
 - Ensure batteries are correctly installed and not depleted. Replace if necessary.
 - Verify the mouse power switch is in the "ON" position.
 - Confirm the USB Nano Receiver is securely plugged into a working USB port on your computer. Try a different USB port.
 - Move the keyboard and mouse closer to the USB receiver to rule out range issues (maximum 30 ft).
 - Restart your computer.
- **Intermittent Connection:**
 - Check for interference from other wireless devices (e.g., Wi-Fi routers, cordless phones).
 - Ensure there are no large metal objects between the devices and the receiver.
- **Mouse Cursor Jumps or is Inaccurate:**
 - Clean the optical sensor on the underside of the mouse.
 - Use the mouse on a clean, non-reflective surface.

8. Specifications

Brand	ADESSO
Model Number	WKB-1330CB
Wireless Type	2.4 GHz Radio Frequency
Wireless Range	Up to 30 feet (10 meters)
Operating System Compatibility	Windows 10, Windows 8, Windows 7, Windows Vista, Windows XP
Mouse DPI	1200 DPI
Keyboard Keystroke Lifecycle	5 Million Keystrokes
Item Weight	1.55 pounds (approx. 0.7 kg)
Product Dimensions (LxWxH)	20.3 x 6.8 x 1.7 inches (approx. 51.6 x 17.3 x 4.3 cm)
Battery Type	AAA (2 included)

9. Warranty and Support

For warranty information and technical support, please refer to the official Adesso website or contact their customer service directly. Details regarding specific warranty periods and support procedures are typically provided with your product purchase documentation or on the manufacturer's website.

Manufacturer: Adesso, Inc.

10. Legal Disclaimer

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B074G1RYJ9>

More documents and user manuals: <https://manuals.plus/>