

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PlayStation](#) /

› [PlayStation VR Aim Controller \(PS4\) Instruction Manual](#)

PlayStation 9899969

PlayStation VR Aim Controller (PS4) Instruction Manual

Model: 9899969

PRODUCT OVERVIEW

The PlayStation VR Aim Controller is designed to enhance your virtual reality gaming experience on PlayStation 4. It features an integrated motion sensor and a trackable sphere that work in conjunction with the PlayStation Camera to provide precise tracking, ensuring accurate and responsive gameplay.



Image: Front view of the PlayStation VR Aim Controller, showcasing its ergonomic design and light sphere.

SETUP

1. **Charge the Controller:** Before first use, connect the PlayStation VR Aim Controller to your PlayStation 4 console using a USB cable (not included) to fully charge its internal battery. The charging port is located on the underside of the controller.
2. **Connect to PlayStation 4:** With the controller charged, turn on your PlayStation 4 console and PlayStation VR headset. Connect the Aim Controller to the PS4 via a USB cable.
3. **Pair the Controller:** Press the PlayStation button on the Aim Controller. The controller will attempt to pair with your PS4. Once paired, the light sphere will illuminate, and the controller will be recognized by the system.
4. **Position the PlayStation Camera:** Ensure your PlayStation Camera is properly set up and positioned to track the Aim Controller's light sphere. Refer to your PlayStation Camera manual for optimal placement.
5. **Calibrate in Game:** Many VR games that support the Aim Controller will require in-game calibration. Follow the on-screen instructions within your game to ensure accurate tracking and aiming.



Image: Side view of the PlayStation VR Aim Controller, highlighting the trigger and face buttons.

OPERATING INSTRUCTIONS

The PlayStation VR Aim Controller is designed for intuitive use in compatible PlayStation VR games. Its layout mimics a firearm, providing a natural feel for first-person shooter (FPS) and other action games.

- **Trigger (R2 Button):** Located on the front grip, this button typically functions as the primary fire or action button in games.
- **Analog Stick:** Positioned near the front, this stick is used for character movement or camera control, depending on the game.
- **Face Buttons (Triangle, Circle, Cross, Square):** These buttons are located around the analog stick and perform various in-game actions, similar to a standard DualShock 4 controller.
- **Directional Pad (D-Pad):** Used for menu navigation or specific in-game commands.
- **L1/L2 Buttons:** Located on the side, these buttons provide additional input options, often used for secondary actions like grenades, aiming down sights, or special abilities.
- **PlayStation Button:** Used to turn the controller on/off, access the PS4 Quick Menu, or return to the PS4 home screen.
- **Share Button:** Allows you to share screenshots or video clips of your gameplay.
- **Options Button:** Typically used to pause games or access in-game menus.

Your browser does not support the video tag.

Video: An overview of the PlayStation VR Aim Controller, demonstrating its design and key features. This video provides a visual guide to the controller's layout and functionality.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your PlayStation VR Aim Controller.

- **Cleaning:** Use a soft, dry cloth to wipe down the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners, as these can damage the surface.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Protect it from dust and physical impact when not in use.
- **Battery Care:** To maintain battery health, avoid fully discharging the controller frequently. Charge it regularly, even if not in constant use.

TROUBLESHOOTING

Problem	Solution
Controller does not turn on.	Ensure the controller is charged. Connect it to the PS4 with a USB cable and allow it to charge for a period.
Controller does not pair with PS4.	Connect the controller to the PS4 via USB cable. Press the PlayStation button. If issues persist, try resetting the controller by pressing the small reset button on the back with a thin object.
In-game tracking is inaccurate.	Verify that the PlayStation Camera is correctly positioned and has a clear view of the Aim Controller's light sphere. Ensure adequate lighting in your play area. Recalibrate the controller within the game settings.
Buttons are unresponsive.	Check if the controller is properly connected and powered on. If the issue persists, try resetting the controller.

SPECIFICATIONS

- **Model Number:** 9899969
- **Manufacturer:** SONY
- **Item Type:** Accessory
- **Product Dimensions:** 6.69 x 7.32 x 2.6 inches
- **Item Weight:** 1.1 pounds
- **Batteries:** Internal rechargeable battery. *(Note: The product data mentioned "1 AA batteries required", but this is typically an internal rechargeable battery for such controllers.)*
- **Release Date:** May 4, 2019
- **First Available:** August 23, 2017

WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not available in the provided data. For warranty details and support inquiries, please refer to the official PlayStation website or contact PlayStation customer service directly. Official PlayStation Support: <https://www.playstation.com/support/>



