

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control for Audiovox Quake Series 2 and Quake II User Manual

Redi-Remote RTQUAKEII

Redi-Remote Replacement Remote Control User Manual

For Audiovox Quake Series 2 and Quake II Audio Systems

INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote replacement remote control, designed specifically for compatibility with Audiovox Quake Series 2 and Quake II audio units. This remote is a custom-built replacement and is not an original Audiovox product.

The remote control is pre-programmed and requires no additional setup for the specified Audiovox models. It is designed to perform all functions for the unit it controls and cannot be programmed for auxiliary devices.

PACKAGE CONTENTS

- 1 x Redi-Remote Replacement Remote Control (Model: RTQUAKEII)
- 4 x AAA Batteries (pre-installed or included)

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Note: The remote control comes with batteries included and may be pre-installed. No programming is required for this remote.

OPERATING INSTRUCTIONS

This section details the functions of the buttons on your Redi-Remote replacement remote control.







Figure 1: Overview of the Redi-Remote Replacement Remote Control. This image displays the full remote, showing the upper section with primary controls and the lower section with advanced functions, accessible by sliding down the cover.

Upper Section Controls

The upper section of the remote contains primary functions for general operation.

- **PWR (Power):** Turns the Audiovox unit on or off.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Changes the display mode or shows information.
- **CH+ / CH- (Channel Up/Down):** Navigates through channels or menu options.
- **VOL+ / VOL- (Volume Up/Down):** Adjusts the audio volume level.
- **MUTE:** Silences or restores the audio.
- **MENU:** Accesses the main menu of the unit.
- **RECALL:** Recalls the previously selected channel or function.
- **Number Pad (0-9, 100, ENT):** Used for direct channel entry, inputting numbers, or confirming selections.

Lower Section Controls (Slide Down)

The lower half of the remote contains advanced functions. To access these buttons, slide down the cover located at the bottom of the remote.

- **FUNCT (Function):** Cycles through various functions or modes.
- **STOP:** Stops playback.
- **PLAY/PAUSE:** Starts or pauses playback.
- **SOUND:** Adjusts sound settings or modes.
- **REPEAT:** Repeats the current track or disc.
- **RANDOM:** Activates random playback mode.
- **TIMER:** Sets or adjusts timer functions.
- **SKIP (Forward/Backward):** Skips tracks or chapters.
- **DIMMER:** Adjusts the display brightness.
- **+10:** Adds 10 to a track number or time.
- **MEMORY:** Stores or recalls memory presets.
- **TUNE (Up/Down):** Manually tunes radio frequencies.
- **DISC (Up/Down):** Selects discs in a multi-disc changer.
- **FM MODE:** Switches between FM stereo and mono modes.
- **BAND:** Selects radio bands (e.g., AM/FM).

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace all four AAA batteries when the remote's performance diminishes. Always replace with new batteries of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

- **Disposal:** Dispose of used batteries according to local regulations. Do not dispose of batteries in household waste.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or weak batteries. Incorrect battery polarity. Obstruction between remote and unit. Remote out of range.	Replace batteries. Check battery orientation. Remove obstructions. Move closer to the Audiovox unit.
Some buttons not working	Dirty contacts. Specific function not available on the Audiovox unit.	Clean the remote surface. Ensure the Audiovox unit supports the desired function.
Lower buttons inaccessible	Cover is not slid down.	Slide the bottom cover of the remote downwards to reveal the additional buttons.

SPECIFICATIONS

- **Model:** RTQUAKEII
- **Brand:** Redi-Remote
- **Compatibility:** Audiovox Quake Series 2, Audiovox Quake II
- **Connectivity Technology:** Infrared
- **Power Source:** 4 x AAA Batteries (included)
- **Dimensions:** 7.5 inches (L) x 2.25 inches (W) x 0.75 inches (H) (approximate, based on product description)
- **Weight:** 5 ounces (approximate)
- **Special Feature:** No Programming Required
- **Max Number of Supported Devices:** 1

WARRANTY AND SUPPORT

For any concerns with the remote after purchase, please contact the seller directly. This product is a custom replacement remote and specific warranty details should be obtained from the point of purchase or the seller.

Seller Contact: [RemotesPro](#) (via Amazon)

© 2023 Redi-Remote. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B074HTSPCM>

More documents and user manuals: <https://manuals.plus/>