

Manuals.plus /

- › BISSELL /
- › BISSELL Refresh Manual Sweeper Model 2199 User Manual

## BISSELL 2199

# BISSELL Refresh Manual Sweeper Model 2199 User Manual

Model: 2199

## INTRODUCTION

---

Thank you for choosing the BISSELL Refresh Manual Sweeper, Model 2199. This lightweight and cordless sweeper is designed for quick and efficient cleaning of various floor surfaces. It features a 7-brush cleaning system and dual easy-to-empty dirt bins, making it a convenient tool for everyday messes. This manual provides detailed instructions to help you get the most out of your sweeper.

## PRODUCT OVERVIEW

---

The BISSELL Refresh Manual Sweeper is engineered for ease of use and effective cleaning without the need for cords or batteries.

## QUICK AND QUIET CLEANING



**Quick and Quiet Cleaning:** The sweeper operates silently, making it ideal for use at any time without disturbance.

# CORDLESS CLEANING, NO CORDS OR BATTERIES



**Cordless and Battery-Free:** Always ready to use, this manual sweeper requires no power source.

## 7-BRUSH CLEANING SYSTEM



**Multi-Surface Cleaning:** Safe and effective on area rugs, carpets, and sealed hard floors.

## SAFE AND EFFECTIVE ON A VARIETY OF SURFACES



**7-Brush Cleaning System:** Features 4 rubber corner brushes, 2 dirt agitating brushes, and 1 large center brush roll for thorough cleaning.

## SETUP

---

Your BISSELL Refresh Manual Sweeper comes with a multi-piece handle that needs to be assembled before first use. Follow these steps:

1. Carefully unbox all components: the sweeper base and the multi-section handle.
2. Connect the handle sections by screwing them together clockwise until secure.
3. Attach the assembled handle to the designated slot on the sweeper base. Ensure it clicks firmly into place.

Video demonstrating the assembly process of the BISSELL Refresh Manual Sweeper, showing how to connect the handle to the sweeper body.

## OPERATING INSTRUCTIONS

---

The BISSELL Refresh Manual Sweeper is designed for effortless cleaning. Simply push the sweeper across the desired surface. The 7-brush system works to pick up dirt, crumbs, hair, and other debris on both forward and return motions.

- **For Carpets and Area Rugs:** Push the sweeper in a back-and-forth motion over the carpeted area. The brushes are designed to agitate and lift debris from carpet fibers.
- **For Hard Floors:** Use the same back-and-forth motion on sealed hard floors. The rubber corner brushes help capture debris along edges and in corners.
- **Quick Spills:** For small, localized messes, the sweeper provides a fast and convenient solution without needing to plug in a vacuum.

Video showcasing the BISSELL Refresh Manual Sweeper effectively picking up pet hair and debris from a carpeted surface.

## MAINTENANCE

---

Regular maintenance ensures optimal performance of your sweeper.

### Emptying the Dirt Bins

The BISSELL Refresh Manual Sweeper features dual easy-to-empty dirt bins. To empty:

1. Locate the two push buttons on the underside of the sweeper base.
2. Press the buttons to release the dirt bins.
3. Carefully remove the bins and empty their contents into a trash receptacle.
4. Replace the dirt bins by aligning them with their slots and pushing until they click securely into place.

# EASY-TO-EMPTY DUST BINS



Image illustrating the process of emptying the dirt bins.

Video demonstrating how to easily empty the dual dirt bins of the BISSELL Refresh Manual Sweeper.

## Cleaning the Brushes

Periodically check the brushes for tangled hair or debris. Use scissors to carefully cut away any wrapped hair from the brush rolls. Ensure all brushes spin freely for effective cleaning.

## TROUBLESHOOTING

---

If you encounter issues with your BISSELL Refresh Manual Sweeper, refer to the common problems and solutions below:

- **Sweeper not picking up debris:** Check if the dirt bins are full and empty them if necessary. Inspect the brushes for any obstructions or excessive tangles and clean them as described in the Maintenance section.
- **Brush roll detaches:** If a brush roll comes loose, ensure it is properly reinserted. For the main brush roll, align the ends with their respective slots and push firmly until secured. Some users have noted that the handle connection point can also help secure the brush roll by pushing it back into the body.
- **Handle feels loose:** Ensure all handle sections are tightly screwed together and that the handle is securely attached to the sweeper base.

## SPECIFICATIONS

---

Feature	Detail
Brand	Bissell
Model Name	Refresh Manual Sweeper
Model Number	2199
Color	Pirouette (Blue)
Recommended Uses	Floor Cleaning, Carpet Cleaning
Bristle Material	Rubber
Handle Material	Plastic
Special Feature	Compact, Lightweight
Surface Recommendation	Area Rugs; Bare Floors; Carpet; Sealed Hard Floors; Low Pile Carpet
Product Dimensions	11"W x 42"H
UPC	011120241471

## WARRANTY AND SUPPORT

---

The BISSELL Refresh Manual Sweeper Model 2199 comes with a Limited 1-Year Manufacturer's Warranty. For warranty claims, technical assistance, or to purchase replacement parts, please contact BISSELL Customer Support through their official website or the contact information provided with your product packaging.