

Demeyere 309598

Demeyere Shoe Cabinet Model 309598 User Manual

Comprehensive instructions for assembly, use, and maintenance.

1. PRODUCT OVERVIEW

The Demeyere Shoe Cabinet Model 309598 is a functional storage solution designed for organizing footwear. This cabinet features two opening doors and six removable shelves, capable of accommodating up to 21 pairs of shoes. Its design allows for integration into various home environments, such as an entryway or living room.

The shelves are adjustable, providing flexibility to store shoes of different sizes. The cabinet is finished in a brushed oak color, complementing a range of interior decors. It is constructed from engineered wood and manufactured in France.



2. SAFETY INFORMATION

Please read and understand all safety warnings before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Wall Anchoring:** Always ensure the cabinet is securely fixed to a wall to prevent tipping. Wall anchoring hardware may be required and is typically included or recommended for purchase separately.
- **Door Safety:** Keep the cabinet doors closed when not in use to prevent accidental injury, especially in households with children or pets.
- **Weight Capacity:** Do not overload the shelves. Exceeding the maximum weight capacity can compromise the structural integrity of the cabinet and lead to collapse. The maximum weight capacity is 63 pounds (approximately 28.5 kg).
- **Assembly:** Assemble the product on a soft, clean surface to prevent scratches. Ensure all components are correctly aligned and tightened according to the assembly instructions.
- **Children:** Do not allow children to climb on or play with the cabinet.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts are present and undamaged. If any parts are missing or damaged, contact customer support immediately. This product may be shipped in multiple packages.

- Cabinet panels (top, bottom, sides, back)
- 2 Cabinet doors
- 6 Adjustable shelves
- 2 Door handles
- Assembly hardware (screws, dowels, cam locks, shelf pins, wall anchoring kit)

Dieses Produkt wird in mehreren Paketen verschickt.
Sie können zu unterschiedlichen Zeitpunkten
geliefert werden.



(Beispiel-Grafik: Die tatsächliche Anzahl und Form der Pakete können abweichen.)


Figure 2: The product may arrive in multiple packages, which might be delivered at different times.

4. ASSEMBLY INSTRUCTIONS

Assembly typically requires two people. Use appropriate tools (e.g., screwdriver, hammer) as indicated in the detailed assembly guide provided with the product. Follow the numbered steps carefully.

1. **Prepare Workspace:** Clear a spacious area and lay out all components on a soft, clean surface to prevent damage.
2. **Assemble Frame:** Attach the side panels to the bottom panel using the provided hardware (dowels, screws, cam locks). Ensure proper alignment.
3. **Install Back Panel:** Slide or nail the back panel into the grooves or attach it to the rear of the frame. This adds stability.
4. **Attach Top Panel:** Secure the top panel to the assembled frame.
5. **Install Shelf Pins:** Insert the shelf pins into the desired holes on the side panels for your preferred shelf height.
6. **Place Shelves:** Carefully place the six adjustable shelves onto the installed pins.
7. **Attach Doors:** Mount the two cabinet doors to the side panels using the hinges. Adjust hinges as necessary for proper door alignment.
8. **Install Handles:** Attach the two door handles to the cabinet doors.

9. **Secure to Wall:** Position the cabinet in its final location. Using the provided wall anchoring kit, securely fasten the cabinet to a wall stud or use appropriate wall anchors for your wall type. This step is critical for safety.

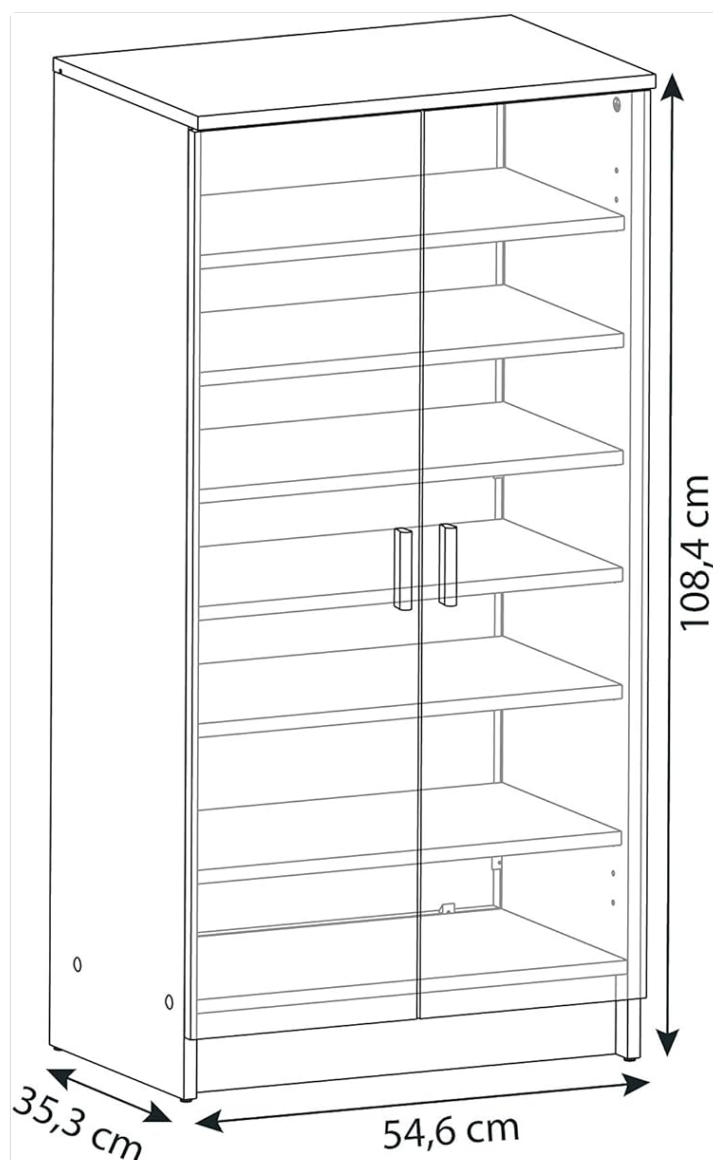

❶ Dimensions utiles des rayons amovibles : 51 x 29 cm

Figure 3: Cabinet dimensions and useful shelf dimensions for assembly planning.

5. OPERATING INSTRUCTIONS (USAGE)

The Demeyere Shoe Cabinet is designed for straightforward use.

- **Opening/Closing Doors:** Use the handles to gently open and close the two cabinet doors. Ensure they close completely to keep shoes dust-free and out of sight.
- **Adjusting Shelves:** To adjust shelf height, remove all items from the shelf. Lift the shelf, remove the shelf pins, reposition the pins into the desired holes, and then place the shelf back onto the pins. This allows customization for different shoe types (e.g., boots, heels, flats).

- **Shoe Placement:** Place shoes neatly on the shelves. To maximize space, consider alternating the direction of shoes (toe-in, toe-out).



Figure 4: Cabinet with one door open, demonstrating shoe storage on adjustable shelves.

6. MAINTENANCE

Regular maintenance will help preserve the appearance and longevity of your shoe cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the finish. Dry immediately with a clean cloth.
- **Dusting:** Dust regularly with a dry, soft cloth.
- **Hardware Check:** Periodically check all screws and fittings to ensure they remain tight. Retighten if necessary.
- **Avoid Moisture:** Protect the cabinet from excessive moisture and direct sunlight, which can cause warping or fading.

7. TROUBLESHOOTING

If you encounter issues with your Demeyere Shoe Cabinet, refer to the following common solutions:

Problem	Possible Cause	Solution
Doors do not align or close properly.	Hinges are loose or misaligned.	Adjust the screws on the hinges to align the doors. Ensure the cabinet is on a level surface.
Cabinet feels unstable or wobbly.	Not securely anchored to the wall; loose assembly hardware.	Ensure the cabinet is securely anchored to the wall. Check and tighten all assembly screws and fittings.
Shelves sag or collapse.	Overloaded shelves; incorrect shelf pin installation.	Reduce the weight on the shelves. Ensure shelf pins are fully inserted and shelves are properly seated. Do not exceed 63 pounds total weight.

If the problem persists, contact Demeyere customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Demeyere
Model Number	309598
Color	Brushed Oak
Material	Engineered Wood
Product Dimensions (L x W x H)	35.3 cm x 54.6 cm x 108.4 cm (13.9 x 21.5 x 42.7 inches)
Item Weight	24.9 Kilograms (54.9 pounds)
Maximum Weight Capacity	63 Pounds (approximately 28.5 kg)

Feature	Detail
Number of Shelves	6 (removable and adjustable)
Useful Shelf Dimensions	51 cm x 29 cm (20.1 x 11.4 inches)
Country of Origin	France

9. WARRANTY AND SUPPORT




This Demeyere product comes with a **2-year warranty**. This warranty covers manufacturing defects and ensures the product meets quality standards. Please retain your proof of purchase for warranty claims.




For technical assistance, missing parts, or warranty claims, please contact Demeyere customer support through their official website or the retailer where the product was purchased.

Contact Information: Refer to the packaging or the official Demeyere website for the most current customer support contact details.

© 2023 Demeyere. All rights reserved.

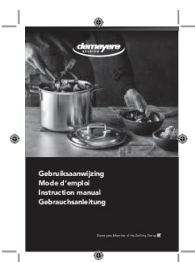Related Documents - 309598

	<p>Demeyere Cookware Instruction Manual and Care Guide</p> <p>Comprehensive instruction manual for Demeyere cookware, covering safety, usage, cleaning, and warranty information in multiple languages, with a focus on English.</p>
	<p>Demeyere Cookware User Manual and Care Instructions</p> <p>Comprehensive guide for Demeyere cookware, covering usage, care, cleaning, and warranty information to ensure optimal performance and longevity.</p>
	<p>Demeyere Cookware: Instruction Manual, Care, and Warranty Guide</p> <p>Comprehensive guide for Demeyere cookware, covering usage instructions, cleaning tips, maintenance for non-stick surfaces, cooking precautions, and warranty information.</p>

 The image shows the cover of a Demeyere instruction manual. It features a black and white photograph of a person's hands using a Demeyere pot on a stovetop. The Demeyere logo is at the top. Below the photo, the text reads: 'Gebruiksaanwijzing', 'Mode d'emploi', 'Instruccíon manual', and 'Gebruiksaanwijzing'.	<p>Demeyere Cookware: User Manual, Care, and Warranty</p> <p>Comprehensive guide for Demeyere cookware, covering safe usage, cleaning instructions, maintenance tips, and warranty information.</p>
 The image shows the cover of a Demeyere instruction manual. It features a black and white photograph of a person's hands using a Demeyere pot on a stovetop. The Demeyere logo is at the top. Below the photo, the text reads: 'Gebruiksaanwijzing', 'Mode d'emploi', 'Instruccíon manual', and 'Gebruiksaanwijzing'.	<p>Demeyere Cookware: Instruction Manual and Care Guide</p> <p>Comprehensive guide to using, caring for, and maintaining Demeyere cookware, including safety precautions, cooking tips for different stovetops, and warranty information.</p>
 The image shows the cover of a Demeyere instruction manual. It features a black and white photograph of a person's hands using a Demeyere pot on a stovetop. The Demeyere logo is at the top. Below the photo, the text reads: 'Gebruiksaanwijzing', 'Mode d'emploi', 'Instruccíon manual', and 'Gebruiksaanwijzing'.	<p>Demeyere Cookware: Instruction Manual and Care Guide</p> <p>Comprehensive guide for Demeyere cookware, covering usage, care, safety precautions, and warranty information. Learn how to maintain your high-quality cookware for years to come.</p>