

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Citizen](#) /
- › [Citizen 'AS YOU PLEASE' Audio CD User Manual](#)

Citizen B074KLRG8D

Citizen 'AS YOU PLEASE' Audio CD User Manual

Model: B074KLRG8D

INTRODUCTION

This user manual provides essential information for the proper use and care of your Citizen 'AS YOU PLEASE' Audio CD. Please read these instructions carefully to ensure the best possible listening experience and to maintain the longevity of your product.

PRODUCT OVERVIEW

The 'AS YOU PLEASE' Audio CD is a music album by the artist Citizen. This album features twelve tracks, showcasing the band's evolving musical style. It is designed for playback on standard audio CD players.



Image: Front cover of the Citizen 'AS YOU PLEASE' Audio CD. It features the album title and artist name prominently.

SETUP

To begin listening to your 'AS YOU PLEASE' Audio CD, follow these steps:

1. **Unpack the CD:** Carefully remove the Audio CD from its packaging. Avoid touching the playing surface of the disc.
2. **Prepare your CD Player:** Ensure your audio CD player is powered on and ready to accept a disc. Open the disc tray or slot.
3. **Insert the CD:** Hold the CD by its edges and gently place it into the CD player's tray or slot with the label side facing up.
4. **Close the Tray:** Close the disc tray or allow the player to draw the disc in. The player should then begin to read the disc.

OPERATING INSTRUCTIONS

Once the CD is loaded, you can control playback using your CD player's functions:

- **Play:** Press the **PLAY** button to start playback from the beginning of the first track or the current paused position.
- **Pause:** Press the **PAUSE** button to temporarily stop playback. Press **PLAY** again to resume.
- **Stop:** Press the **STOP** button to end playback and reset the disc to the beginning.
- **Skip Tracks:** Use the **NEXT** or **PREVIOUS** track buttons to navigate between songs.
- **Fast Forward/Rewind:** Hold down the **FAST FORWARD** or **REWIND** buttons to scan through a track.
- **Eject:** Press the **EJECT** button to remove the disc from the player.

MAINTENANCE AND CARE

Proper care will extend the life of your Audio CD and ensure optimal sound quality:

- **Handling:** Always hold the CD by its edges or by placing a finger through the center hole. Avoid touching the shiny playing surface.
- **Cleaning:** If the CD becomes dirty, gently wipe it with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Do not place the CD on rough surfaces or allow it to come into contact with sharp objects.

TROUBLESHOOTING

Problem	Possible Cause	Solution
CD does not play or is not recognized.	Disc is dirty or scratched; inserted incorrectly; player malfunction.	Clean the disc carefully. Ensure the disc is inserted label-side up. Try the disc in another player to rule out player issues.
Audio skips or stutters.	Disc is dirty or scratched; player is vibrating; player lens is dirty.	Clean the disc. Place the player on a stable surface. Consult your CD player's manual for lens cleaning instructions.
No sound.	Volume is too low; audio cables are disconnected; player output settings.	Increase volume on player and amplifier. Check all audio cable connections. Verify player output settings.

SPECIFICATIONS

- **Artist:** Citizen
- **Album Title:** AS YOU PLEASE
- **Format:** Audio CD
- **ASIN:** B074KLRG8D
- **Number of Discs:** 1
- **Language:** English
- **Manufacturer:** Run for Cover

- **Original Release Date:** 2017
- **Product Dimensions:** 5.51 x 4.96 x 0.28 inches
- **Item Weight:** 1.76 ounces

WARRANTY AND SUPPORT

For information regarding warranty coverage or product support for your 'AS YOU PLEASE' Audio CD, please refer to the terms provided by your retailer at the time of purchase or contact the manufacturer, Run for Cover Records, directly. Keep your proof of purchase for any warranty claims.

Manufacturer Contact: For general inquiries, please visit the official website of Run for Cover Records or refer to the contact information provided on the CD packaging.