

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Anmytek](#) /

> [Anmytek W0018 Rustic Wood Farmhouse Wall Sconce Instruction Manual](#)

Anmytek W0018

Anmytek W0018 Rustic Wood Farmhouse Wall Sconce Instruction Manual

Model: W0018 | Brand: Anmytek

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Anmytek W0018 Rustic Wood Farmhouse Wall Sconce. Please read all instructions carefully before beginning installation and retain this manual for future reference.

The Anmytek W0018 is a single-light wall sconce designed for indoor use, featuring a rustic wood accent, a metal base, and a clear bubble glass shade. It is suitable for various indoor settings such as bathrooms, bedrooms, living rooms, kitchens, and hallways.

SAFETY INFORMATION

- **WARNING:** Always turn off the electrical supply at the main circuit breaker or fuse box before beginning installation or performing any maintenance. Failure to do so may result in electrical shock, injury, or death.
- Consult a qualified electrician if you are unsure about the installation process or have any electrical questions.
- Ensure all electrical connections are secure and comply with local electrical codes.
- Do not exceed the maximum wattage specified for the light bulb (60 Watts).
- This fixture is designed for indoor use only. Do not expose to moisture or use in wet locations.
- Handle glass components with care to prevent breakage.

PACKAGE CONTENTS

Carefully unpack your fixture and check that all parts are included. If any parts are missing or damaged, do not attempt to assemble or install the fixture. Contact customer support for assistance.

- Wall Sconce Fixture Body (with wood accent and metal base)
- Bubble Glass Shade
- Mounting Hardware (mounting plate, screws, wire nuts)
- Instruction Manual

Note: Light bulb is not included. An E26 base bulb (max 60W) is required.

SPECIFICATIONS

Feature	Specification
Brand	Anmytek
Model Number	W0018
Material	Glass, Metal, Wood
Style	Antique, Rustic, Farmhouse
Light Fixture Form	Sconce
Room Type	Attic, Kitchen, Bathroom, Bedroom, Living Room, Hallway, Dining Room
Specific Uses	Indoor use only
Power Source	Corded Electric
Installation Type	Wall Mount
Light Source Type	LED/Incandescent
Finish Type	Painted
Shade Material	Glass
Number of Light Sources	1
Voltage	110 Volts
Maximum Wattage	60 Watts
Bulb Base	E26
Certification	UL Listed
Assembly Required	Yes
Item Weight	2.31 pounds (1.05 Kilograms)
Package Dimensions	12.01 x 9.06 x 7.91 inches

Product Dimensions

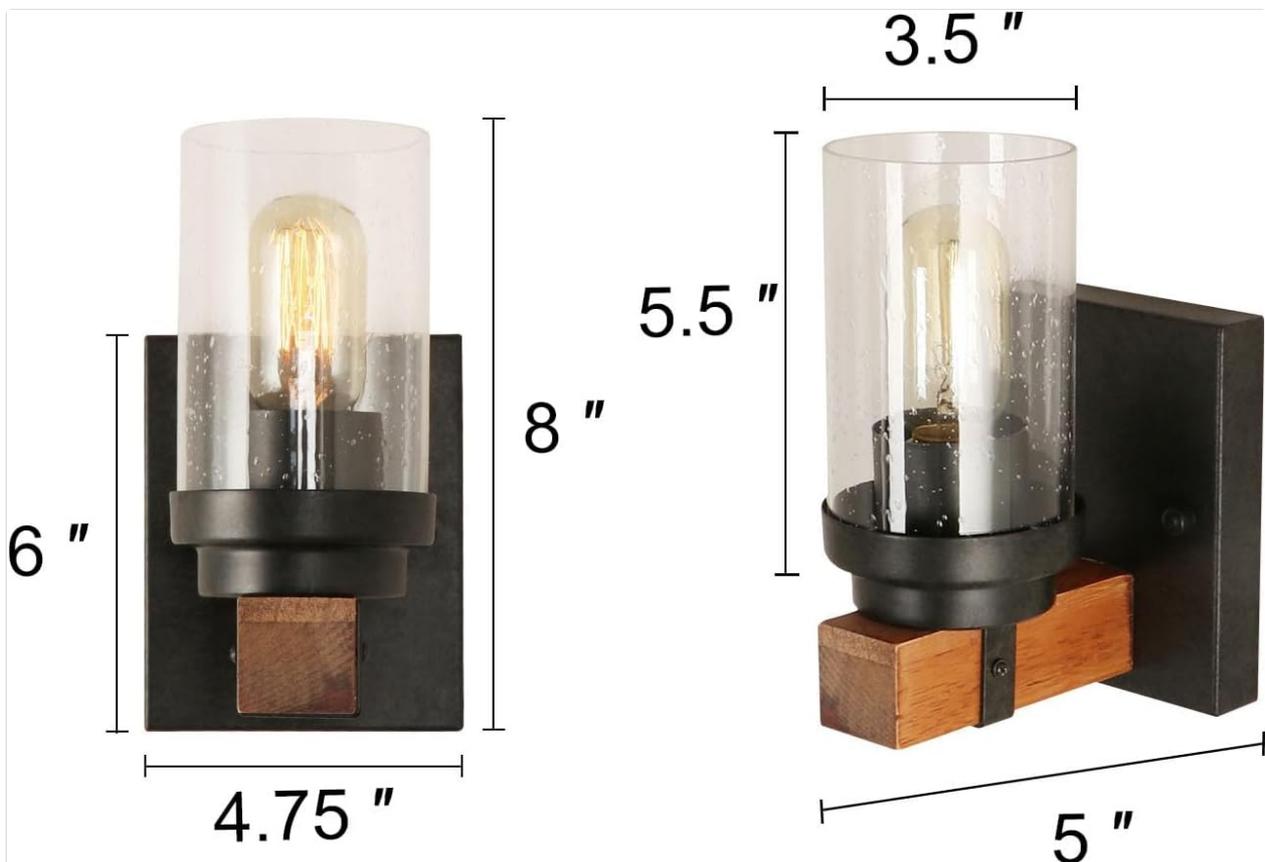


Figure 1: Product Dimensions. The fixture measures approximately 8 inches in height, 4.75 inches in width, and extends 5 inches from the wall. The glass shade is 5.5 inches high and 3.5 inches in diameter.

SETUP AND INSTALLATION

Before you begin, ensure you have the necessary tools: screwdriver, wire strippers, electrical tape, and safety glasses.

1. **Turn Off Power:** Locate the circuit breaker that supplies power to the light fixture location and turn it OFF. Verify power is off using a voltage tester.
2. **Prepare Mounting Plate:** Attach the mounting plate to the junction box in the wall using the provided screws. Ensure it is securely fastened.
3. **Wire Connections:** Carefully connect the electrical wires.
 - Connect the **green or bare copper ground wire** from the fixture to the **ground wire** from the junction box (usually bare copper or green) using a wire nut.
 - Connect the **white (neutral) wire** from the fixture to the **white (neutral) wire** from the junction box using a wire nut.
 - Connect the **black (live) wire** from the fixture to the **black (live) wire** from the junction box using a wire nut.

Ensure all connections are tight and secure. Wrap electrical tape around wire nuts for added security.

4. **Mount the Fixture:** Carefully tuck the wires into the junction box. Align the fixture body with the mounting plate and secure it with the provided screws. The fixture can be mounted with the glass shade facing up or down, depending on your preference and location.
5. **Install Bulb:** Screw an E26 base light bulb (maximum 60 Watts) into the socket. Do not overtighten.
6. **Attach Glass Shade:** Carefully place the bubble glass shade over the bulb and secure it according to the fixture design (typically by screwing a retaining ring onto the socket).

7. **Restore Power:** Turn the electrical supply back ON at the circuit breaker. Test the light fixture.

Figure 2: E26 Bulb Socket Detail. This image shows the E26 bulb socket and the mechanism for securing the glass shade.



Figure 3: Assembled Fixture Detail. This image provides a detailed view of the assembled wall sconce, showcasing its design elements.

OPERATING INSTRUCTIONS

The Anmytek W0018 wall sconce operates via a standard wall switch (push button type, as per specifications) connected to your home's electrical system. Once installed and powered, simply use the wall switch to turn the light on or off.

- Ensure the correct E26 bulb (max 60W) is installed.
- The fixture is designed for general illumination in indoor spaces.



Figure 4: Illuminated Fixture. This image shows the wall sconce in operation, providing light.

MAINTENANCE

- **Cleaning:** To clean the fixture, ensure the power is off and the fixture is cool. Wipe the metal and wood surfaces with a soft, dry cloth. For the glass shade, a slightly damp cloth can be used, followed by a dry cloth to prevent water spots. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Bulb Replacement:** Before replacing a bulb, turn off the power at the circuit breaker and allow the bulb to cool completely. Unscrew the old E26 bulb and screw in a new E26 bulb (maximum 60 Watts). Ensure the new bulb is securely seated before restoring power.
- **Inspection:** Periodically inspect the fixture for any signs of wear, loose connections, or damage. If any issues are found, turn off power and consult a qualified electrician or contact customer support.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Light does not turn on	No power to the fixture Bulb is faulty or loose Incorrect wiring	Check circuit breaker and wall switch. Replace bulb or ensure it is screwed in tightly. Turn off power and check wiring connections. Consult an electrician if needed.
Light flickers	Loose bulb Loose wiring connection Incompatible dimmer switch (if applicable)	Tighten bulb. Turn off power and check wiring connections. Ensure dimmer switch is compatible with the bulb type.
Glass shade is broken	Accidental damage Shipping damage	Contact Anmytek customer support for a replacement.

WARRANTY AND SUPPORT

The Anmytek W0018 wall sconce comes with a manufacturer-and-seller-combination warranty. For specific details regarding warranty coverage, duration, and claims, please refer to the documentation provided at the time of purchase or contact Anmytek customer support directly.

If you encounter any issues not covered in this manual or require further assistance, please contact Anmytek customer support. You can often find contact information on the product packaging or by visiting the official Anmytek store page online.

For more information, visit the [Anmytek Store](#).