

Manuals.plus /

› PHILIPS /

› Philips CA6705/10 Saeco Milk Circuit Cleaner Powder User Manual

PHILIPS CA6705/10

Philips CA6705/10 Saeco Milk Circuit Cleaner Powder User Manual

Model: CA6705/10

INTRODUCTION

The Philips CA6705/10 Saeco Milk Circuit Cleaner Powder is designed to effectively clean the milk circuit of your espresso machine or milk frother. Regular use ensures optimal hygiene, prevents blockages caused by milk residues, and extends the lifespan of all milk frothing components. This product helps maintain the superior taste of your coffee specialties.

This package contains 6 sachets of milk circuit cleaner powder.





Image: The Philips Saeco Milk Circuit Cleaner Powder product box, showing the Philips and Saeco branding.

SAFETY INFORMATION

Please read and understand all safety instructions before using this product. Keep out of reach of children. Avoid contact with eyes and skin. In case of contact, rinse thoroughly with water. If irritation persists, seek medical attention. Do not ingest. Store in a cool, dry place.

Always follow the specific cleaning instructions provided by your espresso machine or milk frother manufacturer when using this cleaner.



Image: Several individual sachets of the cleaner powder, one with a warning symbol, and a small pile of the white powder next to them on a dark surface.

SETUP AND PREPARATION

Before starting the cleaning process, ensure your espresso machine or milk frother is turned off and cooled down. Refer to your appliance's user manual for specific instructions on preparing it for milk circuit cleaning.

Preparing the Cleaning Solution:

1. Take one sachet of Philips Saeco Milk Circuit Cleaner Powder.



Image: A hand holding a single sachet of the Philips Saeco Milk Circuit Cleaner Powder.

2. Pour the entire contents of the sachet into a suitable container, such as a pitcher or jug.



Image: Hands pouring the white powder from a sachet into a clear glass pitcher.

3. Add approximately 500ml (0.5 liters) of warm water to the container with the powder.



Image: Hands holding the glass pitcher under a running faucet, filling it with water to mix with the cleaner powder.

4. Stir the solution until the powder is fully dissolved.

OPERATING INSTRUCTIONS (CLEANING PROCESS)

The cleaning process will vary slightly depending on your specific coffee machine model. Always consult your machine's user manual for detailed, model-specific cleaning instructions. The following steps provide a general guideline:

1. Once the cleaning solution is prepared, connect the milk frothing system's intake tube to the container with the solution.



Image: A Saeco Incanto coffee machine with its milk frothing tube submerged in a glass pitcher containing the cleaning solution.

2. Initiate the milk circuit cleaning cycle on your espresso machine. This is typically done through the machine's menu or a dedicated cleaning button.
3. Allow the machine to run the full cleaning cycle, which will draw the solution through the milk circuit.
4. After the cleaning cycle is complete, rinse the container and fill it with fresh, clean water.
5. Run a rinsing cycle (or several, if recommended by your machine's manual) using fresh water to flush out any remaining cleaning solution from the milk circuit.
6. Once rinsing is complete, disconnect the milk frothing system and clean any removable parts according to your machine's manual.

MAINTENANCE

For optimal performance and hygiene, it is recommended to clean your espresso machine's milk circuit using the Philips CA6705/10 cleaner at least **once a month**. More frequent cleaning may be necessary if you use the milk frothing function daily or multiple times a day.

- Regular cleaning prevents the buildup of milk residues, which can lead to blockages and affect the taste of your beverages.
- Proper maintenance extends the life of your machine's milk frothing components.
- Always ensure all milk circuit components are thoroughly rinsed after cleaning to remove any cleaner residue.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--|---|---|
| Milk circuit still blocked after cleaning. | Severe milk residue buildup; incomplete cleaning cycle. | Repeat the cleaning process. If issues persist, manually clean removable milk frothing parts or consult your machine's manual for deep cleaning procedures. |
| Cleaner not dissolving properly. | Water too cold; insufficient stirring. | Ensure warm water is used. Stir thoroughly until completely dissolved. |
| Machine displays cleaning error. | Machine-specific error; incorrect procedure. | Refer to your espresso machine's user manual for specific error codes and troubleshooting steps. Ensure all steps are followed correctly. |

SPECIFICATIONS

- **Product Name:** Philips CA6705/10 Saeco Milk Circuit Cleaner Powder
- **Model Number:** CA6705/10
- **Brand:** PHILIPS
- **Item Form:** Powder
- **Unit Count:** 6 Sachets per pack
- **Product Dimensions:** 2.72 x 0.39 x 4.69 inches (packaging)
- **Item Weight:** 0.352 ounces (per pack)
- **Manufacturer:** Philips
- **Recommended Use:** Monthly, or as needed based on usage.

WARRANTY AND SUPPORT

This product is a consumable cleaning agent. For specific warranty information regarding your Philips or Saeco coffee machine, please refer to the documentation provided with your appliance.

For product support or inquiries regarding the Philips CA6705/10 Saeco Milk Circuit Cleaner Powder, please visit the official Philips support website or contact their customer service. You can often find support information on the Philips website: www.philips.com/support.

