

Manuals.plus /

› SAMSUNG /

› SAMSUNG Sound+ SWA-W700 Wireless Subwoofer User Manual

SAMSUNG SAMSWAW700ZAOB

SAMSUNG Sound+ SWA-W700 Wireless Subwoofer User Manual

Model: SAMSWAW700ZAOB

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your SAMSUNG Sound+ SWA-W700 Wireless Subwoofer. Please read this manual thoroughly before operating the device and retain it for future reference. The Samsung Sound+ SWA-W700 Wireless Subwoofer is designed to enhance your audio experience by adding ultra-deep bass to your compatible Samsung Sound+ soundbar. Featuring a front-firing design with a 10-inch driver, it delivers a powerful frequency range of 27Hz to 120Hz. Its wireless connectivity allows for flexible placement, and it automatically tunes itself for optimal bass levels when paired with a Sound+ soundbar. The unibody design ensures it blends seamlessly with your home decor.



Image: Front view of the SAMSUNG Sound+ SWA-W700 Wireless Subwoofer, showcasing its sleek black unibody design and prominent 10-inch front-firing driver.

2. IMPORTANT SAFETY INFORMATION

Always follow these basic safety precautions when using your subwoofer to reduce the risk of fire, electric shock, and injury.

- Do not expose this apparatus to rain or moisture.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in

any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Sound+ Subwoofer (SWA-W700)
- Power Cord
- User Manual (this document)

4. SETUP AND CONNECTION

4.1 Placement

The SWA-W700 Wireless Subwoofer features a unibody design and can be placed virtually anywhere in the room. For optimal bass performance, consider placing it in a corner or near a wall, but experiment with different locations to find the best sound for your listening environment.



Image: Top-down angled view of the SWA-W700 Subwoofer, highlighting its compact, cubic form factor suitable for various placements.

4.2 Wireless Connection

The SWA-W700 subwoofer connects wirelessly to compatible Samsung Sound+ soundbars. Ensure your Sound+ soundbar is powered on and in pairing mode (refer to your soundbar's manual for specific instructions).

1. Connect the power cord to the subwoofer and plug it into a wall outlet.
2. The subwoofer will automatically attempt to connect to a compatible Sound+ soundbar. The blue LED indicator on the subwoofer will blink during the pairing process and turn solid blue once connected.
3. If the connection is not established automatically, press the "ID SET" button on the back of the subwoofer (usually located near the power input) using a pointed object (like a pen tip) for 5 seconds. The blue indicator will blink rapidly.
4. While the subwoofer's indicator is blinking, put your Sound+ soundbar into pairing mode. Once successfully paired, the blue indicator on the subwoofer will glow solid blue.



Image: Rear view of the SWA-W700 Subwoofer, displaying the power input and the recessed "ID SET" button for manual pairing.

4.3 Compatibility

This subwoofer is compatible with the following Samsung Sound+ soundbar models:

- HW-NW700/ZA
- HW-MS750/ZA
- HW-MS650/ZA
- HW-MS6500/ZA
- HW-MS550/ZA

5. OPERATING THE SUBWOOFER

Once connected to a compatible Sound+ soundbar, the SWA-W700 operates seamlessly. It automatically tunes itself to the connected soundbar for the optimal level of bass, ensuring a balanced and powerful audio experience.

 


Image: The SWA-W700 Subwoofer accompanied by a visual representation of its distortion cancelling technology, showing how unwanted sound waves are neutralized for clearer bass.

There are no manual controls on the subwoofer itself for volume or frequency adjustment; these settings are managed through your connected Sound+ soundbar.

6. MAINTENANCE

To ensure the longevity and optimal performance of your subwoofer, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the subwoofer. Do not use liquid cleaners, aerosols, or abrasive chemicals, as they may damage the finish.
- **Ventilation:** Ensure that the subwoofer's ventilation openings are not blocked. Adequate airflow is crucial to prevent overheating.
- **Storage:** If storing the subwoofer for an extended period, disconnect it from power and store it in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your SWA-W700 Wireless Subwoofer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound from subwoofer.	Subwoofer not powered on or not connected to soundbar.	Ensure power cord is securely plugged in. Check the blue LED indicator on the subwoofer; if it's not solid blue, re-establish the wireless connection (refer to Section 4.2).
Bass is weak or distorted.	Incorrect placement or interference.	Try repositioning the subwoofer. Ensure no large objects are blocking the signal between the subwoofer and soundbar. Check soundbar settings for bass levels.
Subwoofer disconnects intermittently.	Wireless interference or distance.	Move the subwoofer closer to the soundbar. Avoid placing it near other wireless devices (e.g., Wi-Fi routers, cordless phones) that might cause interference.
Subwoofer LED is blinking blue.	Searching for connection or failed connection.	Ensure your soundbar is on and in pairing mode. If it continues to blink, perform a manual ID SET as described in Section 4.2.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	SWA-W700
Speaker Type	Subwoofer
Subwoofer Diameter	10 Inches
Frequency Response	27Hz ~ 120Hz
Connectivity Technology	Wireless (Bluetooth, Wi-Fi)
Special Features	Distortion Cancelling, Unibody Design
Color	Black
Material	Wood
Product Dimensions (D x W x H)	12.6"D x 13.5"W x 12.6"H
Item Weight	32.2 pounds
Power Source	AC
Speaker Maximum Output Power	25 Watts

 


Image: Diagram showing the dimensions of the SWA-W700 Subwoofer: 12.6 inches deep, 13.5 inches wide, and 12.6 inches high.

9. WARRANTY AND SUPPORT

Your SAMSUNG Sound+ SWA-W700 Wireless Subwoofer comes with a Limited Warranty. For specific terms and conditions, please refer to the warranty card included with your product or visit the official Samsung support website. For further assistance, technical support, or to view the full user manual in PDF format, please visit the official Samsung support page or refer to the document link provided with your purchase:

[Download Full User Manual \(PDF\)](#)

[Visit the Samsung Store](#)