

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [STAR WARS](#) /

› [Star Wars 2-Slice Toaster User Manual](#)

STAR WARS LSW-21CN

Star Wars 2-Slice Toaster User Manual

Model: LSW-21CN | Brand: STAR WARS

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

PRODUCT OVERVIEW

The Star Wars 2-Slice Toaster is designed to provide efficient toasting with a unique aesthetic. This appliance features two wide, self-centering slots to accommodate various bread types and sizes, ensuring even toasting. It includes an adjustable browning control with 5 settings, allowing users to customize their toast's crispness. A high-rise toast lift facilitates easy retrieval of toasted items. The toaster also incorporates a hinged crumb tray for convenient cleaning and a cord wrap for tidy storage.



Image: The Star Wars 2-Slice Toaster, black in color, with two slices of bread partially inserted into its slots. The side features a detailed graphic of a Star Wars ship and logo.

SETUP

- 1. Unpacking:** Carefully remove the toaster from its packaging. Remove any protective materials or stickers.
- 2. Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the appliance.
- 3. First Use:** Before toasting bread for consumption, operate the toaster empty for one or two cycles at the highest browning setting. This will burn off any manufacturing residues and eliminate initial odors. It is normal for a slight smoke or odor to be present during this initial operation.

4. **Cord Management:** Unwind the power cord and plug it into a standard 120V electrical outlet. The toaster features a convenient cord wrap for storage when not in use.

OPERATING INSTRUCTIONS

1. **Insert Bread:** Place one or two slices of bread into the toaster slots. The self-centering guides will automatically adjust to hold the bread evenly.
2. **Select Browning Level:** Turn the browning control knob to your desired setting. Settings range from 1 (lightest) to 5 (darkest). Experiment to find your preferred level.
3. **Start Toasting:** Press the toast lever down until it locks into place. The toaster will begin the toasting cycle.
4. **Cancel Function:** To stop the toasting cycle at any time, press the 'CANCEL' button. The toast will automatically pop up.
5. **Retrieve Toast:** Once the toasting cycle is complete, the toast will automatically pop up. Use the high-rise toast lift feature by gently lifting the toast lever further upwards to raise smaller items for easier and safer retrieval.



Image: Two slices of golden-brown toast on a white plate. One slice displays the Rebel Alliance symbol, and the other shows the Galactic Empire symbol, both clearly imprinted.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:** Locate the hinged crumb tray at the bottom of the toaster. Open the tray and slide it

out to remove accumulated crumbs. Discard crumbs and wipe the tray clean with a damp cloth. Ensure the tray is completely dry before reinserting and closing it.

3. **Exterior Cleaning:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish.
4. **Interior Cleaning:** Never insert any objects into the toaster slots to clean them. If food becomes lodged, unplug the toaster and carefully invert it to dislodge the item.
5. **Storage:** When not in use, the power cord can be wrapped around the cord storage area on the bottom of the toaster. Store the toaster in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure plug is securely in outlet; check circuit breaker; try a different outlet.
Toast is too light or too dark.	Browning control setting is incorrect.	Adjust the browning control knob to a higher setting for darker toast or a lower setting for lighter toast.
Toast does not pop up.	Mechanism jammed; internal malfunction.	Press the 'CANCEL' button. If toast remains stuck, unplug the toaster and carefully remove the toast. Do not force the lever. If problem persists, discontinue use.
Symbols are not clearly imprinted on toast.	Browning setting too low; bread type/thickness.	Increase the browning setting. Use standard sliced bread for best results, as very thick or oversized bread may not allow for full symbol transfer.
Smoke or burning smell during operation.	Crumbs in tray; food lodged in slots; first use residue.	Press 'CANCEL', unplug, and allow to cool. Clean crumb tray. If food is lodged, carefully remove it. Initial smoke/odor is normal for first use. If persistent, discontinue use.

SPECIFICATIONS

Feature	Detail
Brand	STAR WARS
Model Number	LSW-21CN
Color	Black

Feature	Detail
Material	Plastic
Product Dimensions (D x W x H)	5.54" x 9.84" x 6.11"
Wattage	750 Watts
Voltage	120 Volts
Number of Slices	2
Number of Browning Settings	5
Item Weight	1.54 Pounds
Special Feature	Manual controls, Self-Centering Slots, High-Rise Toast Lift, Hinged Crumb Tray



Image: A diagram illustrating the dimensions of the Star Wars 2-Slice Toaster, indicating a height of 6.11 inches, a width of 9.84 inches, and a depth of 5.54 inches.

WARRANTY AND SUPPORT

This product is covered by a manufacturer's limited warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. For technical support, replacement parts, or warranty claims, please contact the manufacturer, Select Brands Inc., directly through their official customer service channels. Keep your proof of purchase for warranty validation.

Manufacturer: Select Brands Inc.