

[Manuals.plus](#) /

› [Sector No Limits](#) /

› Sector No Limits R3251510003 Digital Quartz Watch User Manual

Sector No Limits R3251510003

Sector No Limits R3251510003 Digital Quartz Watch User Manual

Model: R3251510003

1. PRODUCT OVERVIEW

The Sector No Limits R3251510003 is a digital quartz watch designed for everyday use. It features a durable plastic and polyurethane construction, a digital display for time and date, and a comfortable silicone strap. This manual provides essential information for setting up, operating, and maintaining your watch.



Image 1.1: Front view of the Sector No Limits R3251510003 Digital Quartz Watch, showing the digital display and blue strap.

2. SETUP

2.1 Battery Installation

The watch requires 1 AAA battery, which is typically included and pre-installed. If the display is dim or blank, the battery may need replacement. It is recommended to have battery replacement performed by a qualified technician to ensure water resistance integrity.

2.2 Setting Time and Date

To set the time and date on your digital watch, follow these general steps. Button functions may vary slightly, but typically involve a 'MODE' button to cycle through settings and 'SET' or 'ADJUST' buttons to change values.

1. Press the **MODE** button repeatedly until the time setting (e.g., hours flashing) is displayed.
2. Use the **SET** or **ADJUST** button (often located on the right side) to increase or decrease the flashing value (hours, then minutes).
3. Press **MODE** again to move to the next setting (e.g., minutes, then date, month, year).
4. Repeat step 2 to adjust each value.
5. Once all settings are correct, press **MODE** or another designated button to exit the setting mode and save

changes.



Image 2.1: The watch worn on a wrist, illustrating the digital display for time and date.

3. OPERATING INSTRUCTIONS

Your Sector No Limits R3251510003 watch offers several functions accessible via its side buttons.

3.1 Basic Time and Date Display

- In normal time mode, the watch displays the current time (hours, minutes, seconds) and date (day).

3.2 Stopwatch Function

1. Press the **MODE** button until the stopwatch function is displayed (often indicated by 'ST' or a stopwatch icon).
2. Press the **START/STOP** button (usually a dedicated button or one of the setting buttons) to begin timing.
3. Press **START/STOP** again to pause or stop the timer.
4. Press the **RESET** button (another dedicated button or a long press of START/STOP) to clear the stopwatch.

3.3 Alarm Function

1. Press the **MODE** button until the alarm setting mode is displayed (often indicated by 'AL' or an alarm clock icon).

2. Use the **SET** or **ADJUST** button to set the desired alarm time.
3. Activate or deactivate the alarm using a specific button (refer to on-screen indicators).
4. Press **MODE** to exit the alarm setting.

3.4 Backlight

- To illuminate the display in low-light conditions, press the button located on the bottom right side of the watch. This will activate a green backlight.

4. MAINTENANCE

4.1 Cleaning Your Watch

To keep your watch in good condition, regularly wipe the case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the plastic case and strap.

4.2 Water Resistance

This watch is water resistant up to 3 ATM (30 meters). This rating means the watch is suitable for daily use and can withstand splashes or brief immersion in water, such as rain or hand washing. **It is not suitable for swimming, showering, or diving.** Avoid operating buttons while the watch is wet to prevent water ingress.





Image 4.1: Rear view of the watch, showing the case back and water resistance markings.

4.3 Storage

When not in use, store your watch in a cool, dry place away from direct sunlight and extreme temperatures to prolong its lifespan.

5. TROUBLESHOOTING

If you encounter issues with your watch, refer to the following common troubleshooting steps.

- **Watch Not Responding:** If the display is blank or buttons are unresponsive, the battery may be depleted. Replace the AAA battery. If the issue persists, a soft reset (if applicable, by holding all buttons for a few seconds) might resolve minor glitches.
- **Incorrect Time/Date:** Refer to Section 2.2 for instructions on how to correctly set the time and date. Ensure you are in the correct setting mode for each adjustment.
- **Dim Display:** A dim display often indicates a low battery. Replace the AAA battery.
- **Water Inside Display:** If condensation or water appears inside the display, immediately stop using the watch and seek professional service. This indicates a breach in the water resistance seal.

6. SPECIFICATIONS

Feature	Specification
Model Number	R3251510003
Brand	Sector No Limits
Display Type	Digital
Movement Type	Quartz (MVT.LCD Module)
Case Material	Resin
Strap Material	Plastic / Polyurethane
Case Diameter	36 mm (35.77 x 48.38 mm overall)
Case Thickness	15.9 mm
Strap Width	18 mm
Water Resistance	3 ATM (30 Meters) - Not for swimming
Power Source	1 AAA Battery (included)
Functions	Time, Date, Stopwatch, Alarm, Digital Calendar, Backlight
Clasp Type	Pin Buckle
Weight	23 grams

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This Sector No Limits watch comes with a **2-year manufacturer's warranty**. The warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage resulting from misuse, accidents, unauthorized repairs, or normal wear and tear.

7.2 Customer Support

For further assistance, technical support, or warranty service, please contact the retailer where you purchased the watch or visit the official Sector No Limits website for contact information. When contacting support, please have your watch model number (R3251510003) and proof of purchase readily available.



Image 7.1: The original packaging box for the Sector No Limits watch.