

[Manuals.plus](#) /

› [HONEYSEW](#) /

› HONEYSEW Electronic Foot Control with Cord (Models 979314-031, 362095001) Instruction Manual

HONEYSEW 979314-031, 362095001

HONEYSEW Electronic Foot Control with Cord (Models 979314-031, 362095001) Instruction Manual

INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your HONEYSEW Electronic Foot Control with Cord. This foot control is designed as a replacement part for various Singer and other compatible sewing machine models, ensuring precise speed regulation for your sewing projects. Please read these instructions carefully before use to ensure safe and efficient operation.

PRODUCT OVERVIEW

The HONEYSEW Electronic Foot Control is a durable replacement pedal designed to provide reliable speed control for your sewing machine. Key features include:

- **Model Numbers:** 979314-031, 362095001
- **Material:** Durable Plastic construction
- **Power System:** Compatible with 110V-240V, 50/60Hz, 0.45A electrical systems
- **Function:** Provides variable speed control for sewing machines



Figure 1: The HONEYSEW Electronic Foot Control with its attached power cord and machine connector. This image shows the overall design and components of the foot pedal.

COMPATIBILITY

This electronic foot control is compatible with a wide range of sewing machines. It is crucial to verify the shape of your machine's receptacle to ensure a proper plug-in match before purchase and installation. This pedal is known to fit many models, including but not limited to:

Singer Models:

- 240, 247, 248, 250, 252, 257, 288
- 353/354 Genie, 360, 368
- 407, 413, 416, 418, 413K13, 417
- (714, 717, 719, 774, 935, non grounded)
- 500/800 Stylist series, some 600's (except 600E, and those requiring 4 hole cord #790)
- 700, 724, 734, 737, 755, 775, 774, 756, 776, 758, 778 Touch & Sew (except 750 & 770)

- 1000G, 1280, 1362, 1482, 1485, 1486, 1488, 1490
- 1800 series, 1802, 2102, 2105, 2106, 2108, 2112
- 2300 series, 2500 series, 2950, 3102, 3270, 3314, 3317, 3343
- Merritt 4006, 4016, 4019 and other Merritt 4000 series
- 4522, 4525, 4526, 4528, 4530, 4538, 4622N403
- 5017, 5028, 5040, 5050, 5417, 5430, 5502, 5504, 5505, 5508, 5522, 5524, 5525, 5528, 57820, 57825
- 5808, 5825, 5830, 5838
- 6011, 6012, 6021, 6038, 6100/7100 series, 6211, 6212, 6215, 6217, 6221, 6500
- Sonata 6606, 6700, 6800 series
- 8500, 8734, 8834, 9500, 8600, 9500 series, 9600 series, 9800 series, 9936
- CG500, CG550, CG590, CM17, DX-14C, FM17, FM22, HD102, HD105, HD110, SM14
- Stylist 457, 466, 476, 477, 478 (replacing cord #102808; some of these models use cord #797, so verify your machine receptacle)

Other Compatible Models:

- Brother: Bicor VX1005 and others
- Penny's X868-4532A Bernette 320

Important: Always compare the plug shape of this foot control with the receptacle on your sewing machine to ensure proper fitment. Refer to Figure 2 for a close-up view of the plug.



Figure 2: Close-up view of the foot control's plug, showing its specific three-pin configuration. This image helps users verify compatibility

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the foot control from its packaging.
2. **Power Off:** Ensure your sewing machine is turned off and unplugged from the wall outlet before connecting the foot control.
3. **Connect to Machine:** Locate the foot control receptacle on your sewing machine. Align the plug of the HONEYSEW foot control with the receptacle and firmly insert it. Ensure a secure connection. *Do not force the plug if it does not fit easily. Re-check compatibility.*
4. **Connect to Power:** Plug the power cord of the foot control into a standard 110V-240V wall outlet.
5. **Power On:** Turn on your sewing machine.

Your HONEYSEW Electronic Foot Control is now ready for use.

OPERATING INSTRUCTIONS

The foot control allows you to regulate the sewing machine's speed. Follow these steps for operation:

1. **Position:** Place the foot control on the floor in a comfortable position where you can easily reach it with your foot.
2. **Start Sewing:** Gently press down on the foot pedal with your foot. The machine will begin to sew.
3. **Adjust Speed:** The harder you press down on the pedal, the faster the sewing machine will operate. Release pressure to slow down, and fully release to stop the machine.
4. **Practice:** If you are new to using a foot control, practice varying the pressure to achieve smooth and consistent speed control before starting a project.

MAINTENANCE

To ensure the longevity and optimal performance of your HONEYSEW Electronic Foot Control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the exterior of the foot control with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the unit is unplugged before cleaning.
- **Storage:** When not in use, store the foot control in a clean, dry place, away from direct sunlight and extreme temperatures. Avoid coiling the cord too tightly to prevent damage.
- **Inspection:** Periodically inspect the cord and plug for any signs of wear, cuts, or damage. If any damage is observed, discontinue use immediately and replace the unit.

TROUBLESHOOTING

If you encounter issues with your foot control, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Foot control does not respond.	Not properly plugged into the machine or power outlet.	Ensure both the machine plug and the power plug are securely inserted. Check if the sewing machine is powered on.
Intermittent operation or inconsistent speed.	Loose connection; internal wiring issue; pedal wear.	Check all connections. If the problem persists, the unit may be faulty and require replacement.

Problem	Possible Cause	Solution
Plug does not fit into the machine receptacle.	Incorrect compatibility; plug shape mismatch.	Verify your sewing machine model against the compatibility list and compare the plug shape (refer to Figure 2). Do not force the plug.
Machine runs too fast or too slow without proper control.	Faulty foot control.	The foot control may be defective. Consider replacing the unit.

SPECIFICATIONS

Brand	HONEYSEW
Model Numbers	979314-031, 362095001
Material	Plastic
Power System	110V-240V, 50/60Hz, 0.45A
Item Weight	0.66 Pounds (approximately 0.3 kg)
Manufacturer Part Number	232518

WARRANTY AND SUPPORT

For specific warranty information or technical support regarding your HONEYSEW Electronic Foot Control, please refer to the documentation provided with your purchase or contact HONEYSEW customer service directly. Contact details are typically available on the manufacturer's website or product packaging.

Always ensure you have your product model numbers (979314-031, 362095001) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B074MP29MM>

More documents and user manuals: <https://manuals.plus/>