

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [TIMEX](#) /
- › [TIMEX Analog Black Dial Men's Watch - TW2P84300 User Manual](#)

TIMEX TW2P84300

TIMEX Analog Black Dial Men's Watch - TW2P84300 User Manual

Model: TW2P84300

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your TIMEX Analog Black Dial Men's Watch, model TW2P84300. This timepiece features an analog display, quartz movement, and a chronograph function, housed in a stainless steel case with a leather strap.



Image: Front view of the TIMEX Analog Black Dial Men's Watch, model TW2P84300, showcasing its black dial, chronograph sub-dials, and brown leather strap.

SETUP

Setting the Time

1. Pull the crown (located on the right side of the watch case) out to position 2.
2. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
3. Push the crown back into position 1 to start the watch.

Setting the Date

1. Pull the crown out to position 1.5 (halfway between position 1 and 2).
2. Rotate the crown clockwise or counter-clockwise to adjust the date.
3. Once the correct date is displayed, push the crown back into position 1.

Chronograph Hand Reset

If the chronograph hands are not aligned to the 12 o'clock position when reset, they may need calibration.

1. Pull the crown out to position 2.
2. Press the upper pusher (A) repeatedly to advance the chronograph second hand to the 12 o'clock position.
3. Press the lower pusher (B) repeatedly to advance the chronograph minute hand to the 12 o'clock

position.

4. Once all chronograph hands are aligned, push the crown back into position 1.



Image: The TIMEX watch displayed alongside its instruction manual and product tags, illustrating the complete product package.

OPERATING THE WATCH

Timekeeping

Your TIMEX watch is powered by a precise quartz movement, ensuring accurate timekeeping once set correctly.

Chronograph Function

The chronograph function allows for measuring elapsed time.

1. To start the chronograph, press the upper pusher (A). The chronograph second hand will begin to move.
2. To stop the chronograph, press the upper pusher (A) again. The elapsed time will be indicated by the chronograph hands.
3. To reset the chronograph, press the lower pusher (B). The chronograph hands will return to their 12 o'clock starting positions.

Indiglo Night-Light

To activate the Indiglo night-light, press and hold the crown. The entire dial will illuminate for easy reading in low-light conditions.

Water Resistance

This watch is water resistant to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers when the watch is wet to prevent water ingress.



Image: The reverse side of the TIMEX watch, showing the stainless steel case back and water resistance markings, presented with the manual and tags.

MAINTENANCE

Cleaning Your Watch

- Wipe the watch case and crystal with a soft, dry cloth.
- For the leather strap, avoid prolonged exposure to water, direct sunlight, and harsh chemicals. Clean with a slightly damp cloth and allow to air dry.

Battery Replacement

The watch is powered by a quartz battery. When the watch stops running, it indicates the battery needs replacement. It is recommended to have the battery replaced by an authorized TIMEX service center to ensure proper sealing and water resistance.

Strap Care

The watch features a genuine leather strap. Leather is a natural material and can be affected by moisture, sweat, and chemicals. Regular cleaning and conditioning can prolong its life. Avoid bending the strap excessively to prevent cracking.



Image: A close-up of the 'Red Wing Shoe Leather' tag, indicating the quality and origin of the watch strap material.



Image: A detailed view of the watch's tang buckle, showing its polished finish and the stitching on the leather strap.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Depleted battery	Replace battery at an authorized service center.
Time/Date not setting	Crown not pulled out to correct position	Ensure crown is fully pulled out to position 2 for time, or position 1.5 for date.
Chronograph hands misaligned	Requires calibration	Follow the 'Chronograph Hand Reset' instructions in the Setup section.
Water inside watch	Crown/pushers operated underwater or seal compromised	Immediately take the watch to an authorized service center. Do not attempt to dry it yourself.

SPECIFICATIONS

Model Number: TW2P84300

Brand: TIMEX

Display Type: Analog

Movement Type: Quartz

Special Features: Chronograph

Case Material: Stainless Steel

Case Diameter: 42 Millimetres

Case Thickness: 12 Millimetres

Crystal Material: Crystal

Band Material: Leather

Band Colour: Brown

Band Width: 22 Millimetres

Clasp Type: Tang Buckle

Water Resistance Depth: 50 Metres (5 ATM)

Item Weight: 150 Grams

WARRANTY

Your TIMEX watch comes with a 1-year manufacturer warranty from the date of purchase. To claim your warranty, you must produce either the original bill copy/invoice or the warranty card at any authorized Timex service center.



Image: The TIMEX Guarantee card, indicating warranty information and brand authenticity.

SUPPORT

For any service-related inquiries or feedback, please contact Timex India using the following details:

Toll-Free Number: 1800 419 2727 (Monday to Sunday, 10:00 am to 7:00 pm, except government holidays)

Email for Customer Service: custservice@timexindia.com

Email for Feedback: feedback@timexindia.com