

Midea WHD-663FWEW1

Midea 18.0-Cu. Ft. Top-Mount Refrigerator User Manual

Model: WHD-663FWEW1

1. SAFETY INFORMATION

Before operating your new refrigerator, please read all instructions carefully. This manual contains important safety information, installation guidelines, and operating procedures. Keep this manual for future reference.

- **Electrical Safety:** Ensure the refrigerator is connected to a properly grounded 115V, 60Hz, 15 Amp dedicated electrical outlet. Do not use extension cords or adapter plugs.
- **Ventilation:** Maintain adequate clearance around the refrigerator for proper ventilation. Refer to the installation section for specific distances.
- **Flammable Materials:** Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **Child Safety:** Supervise children when they are near the appliance. Old refrigerators can be dangerous if children play inside. Remove doors before disposal.
- **Service:** Do not attempt to repair or replace any part of your refrigerator unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.

2. PRODUCT OVERVIEW

The Midea 18.0-Cu. Ft. Top-Mount Refrigerator (Model WHD-663FWEW1) is designed for efficient food storage. It features a freezer-on-top configuration, automatic defrost, and adjustable shelving.



Image 2.1: Front view of the Midea Top-Mount Refrigerator with both doors open, revealing the empty freezer and fresh food compartments. The interior features shelves and door bins.



Image 2.2: Interior view of the Midea Top-Mount Refrigerator with various food items stored on shelves and in door bins. This illustrates typical usage and storage capacity.

3. SETUP AND INSTALLATION

3.1 Unpacking

Remove all packaging materials, including foam and adhesive tape. Inspect the refrigerator for any shipping damage. Report any damage to your retailer immediately.

3.2 Location Requirements

Place the refrigerator on a strong, level floor. Ensure the following clearances for proper operation and ventilation:

- **Sides:** 2 inches (5 cm)
- **Back:** 4 inches (10 cm)
- **Top:** 12 inches (30 cm)

Avoid placing the refrigerator in direct sunlight or near heat sources like stoves or heaters, as this will increase energy consumption.

3.3 Leveling the Refrigerator

The refrigerator must be level for proper door alignment and efficient operation. Adjust the leveling legs located at the front bottom corners of the unit. Turn clockwise to raise and counter-clockwise to lower.

3.4 Electrical Connection

Plug the refrigerator into a dedicated, grounded 115V, 60Hz, 15 Amp electrical outlet. Do not use a two-prong adapter or an extension cord. Allow the refrigerator to stand for at least 2-4 hours before plugging it in to allow refrigerants to settle.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The refrigerator features an adjustable thermostat. The temperature control dial is typically located inside the fresh food compartment. Turn the dial to adjust the cooling intensity. A higher number usually indicates a colder setting. Allow several hours for the temperature to stabilize after adjustment.

4.2 Food Storage Guidelines

- **Fresh Food Compartment:** Ideal for fruits, vegetables, dairy products, and cooked foods. Store raw meats on the lowest shelf to prevent dripping onto other foods.
- **Freezer Compartment:** Suitable for long-term storage of frozen foods. Ensure packages are sealed to prevent freezer burn.
- **Door Bins:** Use for beverages, condiments, and items that tolerate slight temperature fluctuations.

4.3 Automatic Defrost

This refrigerator is equipped with an automatic defrost system. Frost buildup in the freezer compartment will periodically melt and drain into an evaporation pan, eliminating the need for manual defrosting.

5. MAINTENANCE

5.1 Cleaning the Interior

Unplug the refrigerator before cleaning. Wash the interior surfaces, shelves, and door bins with a solution of mild

soap and warm water. Rinse thoroughly and dry with a soft cloth. Do not use abrasive cleaners, scouring pads, or harsh chemicals.

5.2 Cleaning the Exterior

Clean the exterior surfaces with a soft cloth dampened with mild soap and water. For the door gaskets, wipe with a damp cloth and dry thoroughly to maintain a good seal.

5.3 Condenser Coils

Periodically clean the condenser coils located at the back or bottom of the refrigerator. Dust and debris buildup can reduce efficiency. Use a vacuum cleaner with a brush attachment to gently remove dust.

5.4 Power Outage

In case of a power outage, keep the refrigerator doors closed to maintain internal temperatures for as long as possible. Avoid opening the doors unnecessarily.

6. TROUBLESHOOTING

Before contacting service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; reset circuit breaker; check household power.
Temperature is too warm	Door left open; thermostat set too high; excessive food load; poor ventilation.	Check door seal; adjust thermostat to a colder setting; allow space for air circulation; ensure proper clearances.
Unusual noises	Refrigerator not level; items vibrating against each other; normal operating sounds.	Level the refrigerator; rearrange items; gurgling/hissing sounds are normal refrigerant flow.
Excessive frost buildup in freezer	Door not sealed properly; frequent door opening.	Check door gasket for damage or obstruction; minimize door openings. (Note: This model has automatic defrost, but severe issues can still cause frost.)

If the problem persists after checking these solutions, contact qualified service personnel.

7. SPECIFICATIONS

Feature	Specification
Brand	Midea
Model Number	WHD-663FWEW1
Capacity	18.0 Cubic Feet
Configuration	Freezer-on-Top

Feature	Specification
Color	White
Installation Type	Freestanding
Number of Doors	2
Defrost Type	Automatic Defrost
Shelf Type	Slide-out
Door Orientation	Right
UPC	813084023564

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Midea website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you require technical assistance or have questions not covered in this manual, please contact Midea customer service.

9. PRODUCT VIDEOS

No relevant official product videos from the seller were found for this model at this time.
