

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [eKids](#) /

> [eKids LI-B67DV Darth Vader Bluetooth Speaker User Manual](#)

eKids LI-B67DV

# eKids LI-B67DV Darth Vader Bluetooth Speaker User Manual

Model: LI-B67DV

## PRODUCT OVERVIEW

---

The eKids LI-B67DV is a portable Bluetooth speaker designed in the likeness of Darth Vader. It offers wireless audio streaming, a hands-free speakerphone function, and includes the iconic Star Wars theme sound. This speaker is powered by a rechargeable lithium-ion battery, providing approximately 4 hours of playback.



Figure 1: Front view of the eKids LI-B67DV Darth Vader Bluetooth Speaker, showcasing its design.

## Features:

- Bluetooth wireless audio streaming.
- Integrated hands-free speakerphone for calls.
- Rechargeable lithium-ion battery with up to 4 hours of playback.
- Plays the Star Wars theme sound.
- Compact and portable design.

## CONTROLS AND INDICATORS

Familiarize yourself with the speaker's controls and indicators for optimal use.



Figure 2: Side view of the speaker, highlighting the control buttons and microphone.

- **Power Button:** Located on the base, typically used to turn the speaker on or off.
- **Bluetooth Pairing Button:** Activates Bluetooth pairing mode.
- **Microphone Button:** Used for hands-free calling functions (answer/end calls).
- **Charging Port:** For connecting the charging cable.
- **LED Indicator:** Displays power status, charging status, and Bluetooth pairing status.

## SETUP

### 1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided charging cable to the speaker's charging

port and to a standard USB power source (e.g., computer USB port, USB wall adapter). The LED indicator will show charging status and turn off or change color when fully charged. A full charge provides approximately 4 hours of playback.

## 2. Powering On/Off

- **To Power On:** Press and hold the Power Button until the LED indicator lights up and you hear an audible prompt (e.g., the Star Wars theme sound).
- **To Power Off:** Press and hold the Power Button again until the LED indicator turns off.

## 3. Bluetooth Pairing

1. Ensure the speaker is powered on and within 30 feet (approximately 9 meters) of your Bluetooth device.
2. Press the Bluetooth Pairing Button on the speaker. The LED indicator will flash rapidly, indicating it is in pairing mode.
3. On your Bluetooth-enabled device (smartphone, tablet, computer), go to the Bluetooth settings menu.
4. Search for available devices. Select "eKids LI-B67DV" (or similar name) from the list.
5. Once paired, the LED indicator will stop flashing and remain solid, and you will hear a confirmation tone.
6. If prompted for a password, enter "0000".

The speaker will automatically attempt to reconnect to the last paired device when powered on, if that device is within range and has Bluetooth enabled.

## OPERATING INSTRUCTIONS

---

### 1. Playing Audio

After successful Bluetooth pairing, open your preferred music or audio application on your connected device. Audio will stream wirelessly to the eKids LI-B67DV speaker. Control playback (play/pause, skip tracks) directly from your connected device.

### 2. Adjusting Volume

Volume can be adjusted directly from your connected Bluetooth device. Ensure the device's volume is set to an appropriate level.

### 3. Hands-Free Speakerphone

When a call comes in while your device is connected to the speaker:

- **To Answer a Call:** Press the Microphone Button once.
- **To End a Call:** Press the Microphone Button once during a call.
- **To Reject a Call:** Press and hold the Microphone Button for approximately 2 seconds.

The integrated microphone allows for clear communication during calls.

## MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use liquid cleaners or abrasive materials.

- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the speaker regularly, even if not in constant use.
- **Water Exposure:** This speaker is not waterproof. Avoid exposure to water or excessive moisture.

## TROUBLESHOOTING

| Problem                            | Possible Cause  | Solution  |
|------------------------------------|---|---|
| Speaker does not power on.         | Battery is discharged.  | Connect the speaker to a power source using the charging cable and allow it to charge.  |
| Cannot pair with Bluetooth device. | Speaker is not in pairing mode; device is out of range; Bluetooth is off on device. | Ensure speaker is in pairing mode (flashing LED). Move device closer to speaker (within 30 feet). Enable Bluetooth on your device. Forget previous pairings on your device and try again. |
| No sound or low volume.            | Volume on speaker or device is too low; device not properly connected.              | Increase volume on both the connected device and the speaker. Ensure the speaker is successfully paired and connected to your device.   |
| Hands-free function not working.   | Microphone blocked; device settings.  | Ensure the microphone is not obstructed. Check your device's call audio routing settings to ensure audio is directed to the Bluetooth speaker.  |

## SPECIFICATIONS



Figure 3: Dimensions of the eKids LI-B67DV Darth Vader Bluetooth Speaker.

- **Model:** LI-B67DV
- **Brand:** eKids
- **Connectivity:** Bluetooth
- **Power Source:** Rechargeable Lithium-ion Battery
- **Battery Life:** Up to 4 hours
- **Speaker Output:** 25 Watts (Maximum)
- **Bluetooth Range:** Up to 30 feet (approx. 9 meters)
- **Dimensions (L x W x H):** 10.16 cm x 5.08 cm x 15.24 cm (4 x 2 x 6 inches)
- **Weight:** 300 grams (approx. 0.66 lbs)
- **UPC:** 092298937205

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your

purchase or visit the official eKids website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact eKids customer service through their official channels. Contact details are typically available on the product packaging or their website.