

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Razor](#) /
- › [Razor Pocket Mod Electric Scooter User Manual](#)

Razor 15130608

Razor Pocket Mod Electric Scooter User Manual

Model: 15130608

Brand: Razor

IMPORTANT SAFETY INFORMATION

Before operating the Razor Pocket Mod Electric Scooter, please read and understand all safety warnings and instructions. Failure to follow the instructions may result in serious injury.

- **Age Recommendation:** This scooter is recommended for ages 13 years and up.
- **Weight Limit:** Do not exceed the maximum rider weight of 170 pounds (77.11 kg).
- **Protective Gear:** Always wear a helmet, knee pads, and elbow pads when riding.
- **Supervision:** Adult supervision is required for riders under the recommended age.
- **Riding Environment:** Ride in safe, open areas away from traffic, pedestrians, and obstacles. Avoid riding on wet or uneven surfaces.
- **Braking:** Learn to use the hand brake effectively before riding at higher speeds.
- **Battery Safety:** Only use the UL-approved charger provided. Do not modify the electrical system.

SETUP AND ASSEMBLY

The Razor Pocket Mod Electric Scooter requires some assembly before first use. Please follow these steps carefully.

Unboxing and Initial Inspection

- Carefully remove all components from the packaging.
- Check for any visible damage or missing parts. Contact customer support if any issues are found.

Handlebar Installation

Attach the handlebar assembly to the scooter's steering column. Ensure all bolts are securely tightened.



Image: Side view of the Razor Pocket Mod Electric Scooter, illustrating the overall structure including the handlebar.

Initial Battery Charge

Before first use, fully charge the scooter's battery. The initial charge may take up to 12 hours. Refer to the charging section for detailed instructions.

OPERATING INSTRUCTIONS

Familiarize yourself with the controls before riding.

Power On/Off

- Locate the power switch, typically near the battery compartment or foot deck.
- Flip the switch to the "ON" position to power on the scooter.
- Flip the switch to the "OFF" position when not in use to conserve battery.

Throttle Control

The scooter features a variable-speed twist-grip throttle on the right handlebar.

- To accelerate, gently twist the throttle towards you.
- To slow down, release the throttle.
- The scooter can reach speeds of up to 15 mph (24 km/h).



Image: Detail of the twist-grip throttle, used to control the scooter's speed.

Braking

The hand brake lever is located on the left handlebar.

- To apply the brake, squeeze the lever gently.
- Apply the brake smoothly to avoid sudden stops.



Image: Close-up of the hand brake lever, located on the left side of the handlebar.

Kickstand

The scooter is equipped with a retractable center mount kickstand for parking.

- To deploy, push the kickstand down with your foot until it locks into place.
- To retract, push the scooter slightly forward and lift the kickstand with your foot.



Image: The Razor Pocket Mod Electric Scooter with its kickstand extended for stable parking.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your scooter.

Battery Care and Charging

- Charge the battery fully after each use, even if only for a short period.
- Do not store the scooter with a completely discharged battery. Charge it periodically if not used for extended periods.
- Use only the UL-approved 24-volt battery charger provided by Razor.
- Charging time is approximately 12 hours for a full charge, but can vary.
- The scooter provides up to 40 minutes of continuous use on high speed on a full charge.

Tire Maintenance

The scooter is equipped with 12-inch pneumatic tires.

- Regularly check tire pressure and inflate to the recommended PSI (usually found on the tire sidewall).
- Inspect tires for wear, cuts, or punctures. Replace if necessary.

General Cleaning and Storage

- Clean the scooter with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Store the scooter in a dry, cool place away from direct sunlight and moisture.
- Avoid storing in temperatures below freezing.

Chain Maintenance

The scooter uses a single-speed chain-driven electric motor.

- Periodically check the chain for proper tension and lubrication.
- Apply a light chain lubricant if the chain appears dry or noisy.

TROUBLESHOOTING

If you encounter issues with your Razor Pocket Mod Electric Scooter, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Scooter does not turn on.	Battery is discharged; Power switch is off; Loose connection.	Charge the battery; Ensure power switch is ON; Check all connections.
Scooter loses power or runs slowly.	Low battery charge; Overloaded; Uneven terrain.	Recharge battery fully; Ensure rider weight is within limits; Ride on smooth, flat surfaces.
Charger indicator light does not change.	Charger not properly connected; Faulty charger or battery.	Ensure charger is securely plugged into scooter and wall outlet; Contact customer support if issue persists.
Brake is not effective.	Brake cable needs adjustment; Worn brake pads.	Adjust brake cable tension; Inspect and replace brake pads if worn.

If the problem persists after attempting these solutions, please contact Razor customer support.

SPECIFICATIONS

Feature	Detail
Model Number	15130608
Motor	250W, high-torque, single-speed chain-driven electric motor
Battery	24-volt sealed lead acid battery system (Li-ion 24V 1Ah)
Max Speed	Up to 15 mph (24 km/h)
Run Time	Up to 40 minutes of continuous use (high speed)
Max Rider Weight	170 lbs (77.11 kg)
Tires	12-inch pneumatic tires

Feature	Detail
Dimensions (Product)	45.7W x 48.3H Centimetres
Material	Alloy Steel
Recommended Age	13 years and up
UPC	845423019396

WARRANTY AND SUPPORT

Warranty Information

Razor products are manufactured to high-quality standards. For detailed warranty information, including terms, conditions, and duration, please refer to the official Razor website or the warranty card included with your product.

Customer Support

If you have any questions, require technical assistance, or need to order replacement parts, please contact Razor customer support.

- **Online Support:** Visit the official Razor website for FAQs, troubleshooting guides, and contact forms.
- **Razor Store:** [Visit the Razor Store on Amazon.ca](#)