

[manuals.plus](#) /› [Andoer](#) /› [Andoer Mini 49-LED Camera Video Light User Manual](#)**Andoer W49**

Andoer Mini 49-LED Camera Video Light User Manual

Model: W49

1. INTRODUCTION

Thank you for choosing the Andoer Mini 49-LED Camera Video Light. This compact and versatile lighting solution is designed to enhance your photography and videography with bright, dimmable illumination. Featuring 49 high-quality LED beads, a 6000K color temperature, and a CRI of ≥ 90 , it provides natural and soft white light. Its design includes multiple hot shoe bases for interlocking with other lights and a standard hot shoe mount with a 1/4-inch thread for broad compatibility with cameras and light stands.



Figure 1.1: Front view of the Andoer Mini 49-LED Camera Video Light.

2. SAFETY INFORMATION

Please read and understand all safety precautions before using this product to prevent damage or injury.

- Do not expose the device to water or excessive humidity.
- Avoid direct eye exposure to the LED light, as it can be very bright.
- Do not attempt to disassemble or modify the light. Repairs should only be performed by qualified personnel.
- Use only specified AA batteries. Ensure correct polarity when inserting batteries.
- Remove batteries if the light will not be used for an extended period.
- Keep out of reach of children.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the light.
2. Slide the cover open.
3. Insert two (2) AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.



Figure 3.1: Open battery compartment for AA battery installation.

3.2 Mounting the Light

The Andoer Mini 49-LED Camera Video Light offers versatile mounting options:

- **On-Camera Hot Shoe:** The light features a standard hot shoe mount at its base. Slide this mount into your camera's hot shoe slot and tighten the locking ring for a secure fit.
- **1/4-inch Thread:** The hot shoe mount also includes a 1/4-inch thread, allowing it to be attached to light stands, tripods, or other accessories with a compatible screw.



Figure 3.2: The video light mounted on a DSLR camera's hot shoe.

3.3 Interlocking Multiple Lights

For enhanced lighting effects, multiple Andoer Mini 49-LED lights can be interlocked. The light is equipped with hot shoe bases on three sides (top, left, right).

1. Mount the first light onto your camera or stand.
2. Take a second light and slide its hot shoe mount into one of the hot shoe bases on the first light.
3. Repeat for additional lights as needed.

INTERLOCK SEVERAL LIGHTS

Andoer W49 LED light has 3 hot shoe adapters on 3 side and a hot shoe mount. You can interlock several lights together for different lighting effect. Brightness 0-100% dimmable.



* Only 1pcs is included.

Figure 3.3: Multiple lights interlocked for broader illumination.



Figure 3.4: Detail of the hot shoe adapter and mount for interlocking.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Brightness Adjustment

The light features a single rotary knob for both power control and brightness adjustment.

1. **Power On:** Rotate the knob clockwise from the 'OFF' position. The light will turn on at its lowest brightness setting.
2. **Adjust Brightness:** Continue rotating the knob clockwise to increase brightness from 0% to 100%. Rotate counter-clockwise to decrease brightness.
3. **Power Off:** Rotate the knob counter-clockwise until it clicks into the 'OFF' position.



Figure 4.1: The ON/Dimmer rotary knob on the back of the light.

5.5W OUTPUT, 0-100% DIMMABLE BRIGHTNESS

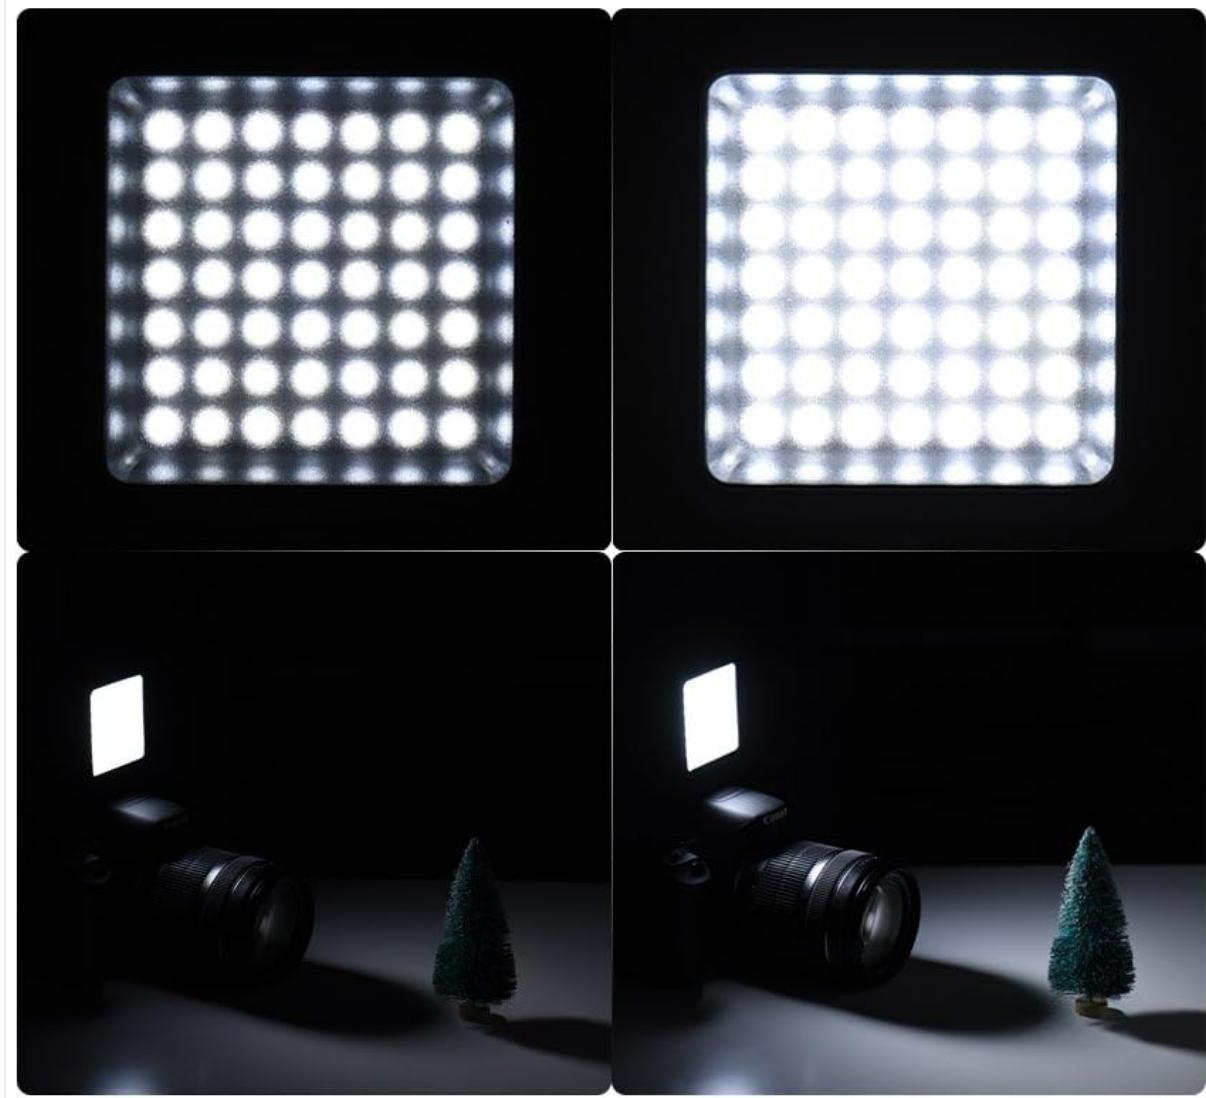


Figure 4.2: Visual representation of 0-100% dimmable brightness.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the light. Do not use abrasive cleaners or solvents.
- **Storage:** Store the light in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.
- **Battery Care:** Replace batteries when the light output becomes dim or inconsistent. Dispose of used batteries responsibly according to local regulations.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	Batteries are dead or incorrectly inserted.	Check battery polarity. Replace with fresh AA batteries.

Problem	Possible Cause	Solution
Light dims quickly or is inconsistent.	Low battery power.	Replace with fresh AA batteries.
Light is not securely mounted.	Mounting knob/ring is loose.	Ensure the hot shoe locking ring is tightened.

7. SPECIFICATIONS

Feature	Specification
Model	W49
LED Quantity	49 pieces
Power Output	5.5W
Color Temperature	6000K
CRI (Color Rendering Index)	≥90
Dimming Range	0% - 100%
Power Source	2 x AA batteries (not included)
Lifetime	Up to 50,000 hours
Mounting	Hot Shoe Mount, 1/4-inch Thread
Product Dimensions	3.15 x 1.22 x 2.56 inches (8 x 3.1 x 6.5 cm)
Item Weight	3.36 ounces (95.25 grams)



Figure 7.1: Product dimensions.

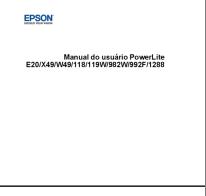
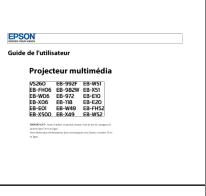
8. WARRANTY INFORMATION

Specific warranty details for the Andoer Mini 49-LED Camera Video Light are typically provided at the point of purchase or within the product packaging. Please retain your proof of purchase for any warranty claims. For detailed warranty terms and conditions, please refer to the documentation included with your product or contact the seller/manufacturer directly.

9. SUPPORT

If you encounter any issues or have questions regarding your Andoer Mini 49-LED Camera Video Light that are not covered in this manual, please contact the retailer from whom you purchased the product. Alternatively, you may visit the official Andoer website for further support and contact information.

Related Documents - W49

	<p><u>Manual do Usuário Epson PowerLite E20/X49/W49/118/119W/982W/992F/1288: Guia Completo</u></p> <p>Explore o Manual do Usuário completo para os projetores Epson PowerLite E20, X49, W49, 118, 119W, 982W, 992F e 1288. Encontre informações detalhadas sobre configuração, operação, manutenção e solução de problemas.</p>
	<p><u>LOGIC LIFE 40 Smart Watch: Specifications, Features & Guide</u></p> <p>Discover the LOGIC LIFE 40 Smart Watch. This document provides detailed specifications, watch face customization, function key definitions, app download information, and regulatory compliance details.</p>
	<p><u>Guide de l'Utilisateur : Projecteurs Multimédia Epson</u></p> <p>Manuel complet pour les projecteurs multimédia Epson, couvrant l'installation, la configuration, l'utilisation des fonctions, la maintenance et le dépannage pour les modèles tels que VS260, EB-992F, EB-W51 et plus encore.</p>
	<p><u>EPSON Brugerhåndbog: Multimedia Projektører (EB-992F, EB-W52 og modeller)</u></p> <p>Find detaljerede instruktioner, opsætningsstips og fejlfindingsvejledninger i denne officielle brugerhåndbog for EPSON Multimedia Projektører, herunder modeller som EB-992F, EB-W52, EB-982W og mange flere.</p>
	<p><u>Epson Multimedia Projector Quick Start Guide: EB-992F and other models</u></p> <p>Concise guide to setting up and operating Epson Multimedia Projectors, including models EB-992F, EB-982W, EB-972, EB-118, EB-W49, EB-X49, EB-E20, EB-FH52, EB-W52, EB-W51, EB-X51, EB-FH06, EB-W06, EB-X06, EB-E10, EB-E01, EB-X500, EB-E500. Covers connections, basic functions, and adjustments.</p>
	<p><u>Epson EB-992F Multimedia Projector Quick Start Guide</u></p> <p>Concise guide for setting up and operating Epson EB-992F, EB-982W, EB-972, EB-118, EB-W49, EB-X49, EB-X600, EB-E20, EB-E600, EB-FH52, EB-W52, EB-W51, EB-X51, EB-FH06, EB-W06, EB-X06, EB-E10, EB-E01, EB-X500, EB-E500 multimedia projectors. Learn about connections, placement, image adjustments, and basic functions.</p>