

[manuals.plus](#) /

› [TOUCHBeauty](#) /

› [TOUCHBeauty Professional Heated Eyelash Curler TB-2003B Instruction Manual](#)

TOUCHBeauty TB-2003B

TOUCHBeauty Professional Heated Eyelash Curler TB-2003B Instruction Manual

MODEL: TB-2003B

Brand: TOUCHBeauty

Introduction

This manual provides detailed instructions for the safe and effective use of your TOUCHBeauty Professional Heated Eyelash Curler, model TB-2003B. Please read this manual thoroughly before first use and retain it for future reference.



Image: The TOUCHBeauty Professional Heated Eyelash Curler TB-2003B, a white device with a pink silicone pad and an 'ON' indicator light.

Safety Information

- Do not use this device while wearing contact lenses.
- Keep the device out of reach of children.
- Do not immerse the device in water or any other liquid.
- Do not use the device if it appears damaged.
- Avoid direct contact of the heated parts with skin other than eyelashes.
- Ensure the device is turned off and cooled before cleaning or storing.

Product Overview and Features

The TOUCHBeauty TB-2003B is a heated eyelash curler designed to provide a lasting curl to your eyelashes. It features a silicone pad that changes color to indicate readiness and operates on AAA batteries for portability.

- **Lasting Natural Eyelashes:** Designed for an instant lift and lasting curl. Use with mascara for enhanced effect.
- **No Pain or Pinching:** The heating silicone pad curls the entire length of your eyelashes without discomfort.
- **Safe to Use:** Features a suitable temperature design to prevent damage to lashes. The innovative temperature sensing pad changes color automatically when warmed up, indicating readiness.
- **Ergonomic & Portable:** Designed to fit every eye shape and curl every lash. Its mini-sized body fits easily in a purse or cosmetic bag.
- **Battery Powered:** Operates on 2 AAA batteries (not included). Alkaline batteries are recommended for quick warm-up.

A more natural curvature



Image: The curler's 70°C design, engineered for a natural curvature without damaging eyelashes.

Instant natural curling

15s

Fast Heating

30s

Get Perfect Curling

24h

Long Lasting



Image: Visual representation of the curler's fast heating (15s), perfect curling (30s), and long-lasting results (24h).

Setup

Battery Installation

1. The device requires 2 AAA batteries (not included).
2. To install, gently slide open the battery compartment cover located on the back of the device.
3. Insert the batteries according to the polarity indicators (+/-) inside the compartment.
4. Close the battery compartment cover securely.

Install the batteries



Image: A hand demonstrating the correct installation of AAA batteries into the device's battery compartment.

Operating Instructions

- Power On:** Slide the 'ON' switch upwards. The green indicator light will illuminate.
- Preheating:** Allow the device to preheat for approximately 15 seconds. The red silicone pad will change to a translucent white color, indicating it has reached the optimal curling temperature (around 70°C).
- Curling:** Place your eyelashes between the silicone pads, close to the lash line. Gently press the curler for 5-8 seconds. Repeat the process along the length of your lashes for a desired curl.
- Mascara Application:** For best results and long-lasting curl, apply mascara after curling.
- Power Off:** Slide the 'ON' switch downwards to turn off the device. The green indicator light will extinguish.

HOW TO USE



Step 1:Install teh battery correctly and switch on



Step 2:Preheating the curler for 15s



Step 3:Flip up the eyelashes several times and hold on 5-8s per times



Step 4:Apply the mascara by "z"forms

Image: A visual guide illustrating the four steps for using the heated eyelash curler, from battery installation to mascara application.

Smart Temperature Sensor

The silicone pad will get transparent when the temperature is right



Image: The smart temperature sensor, showing the silicone pad transitioning from red to translucent white when ready for use.

Maintenance

Cleaning

- After each use, ensure the device is turned off and has cooled completely.
- Gently wipe the silicone pads and the body of the curler with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or immerse the device in water.

Storage

- Store the curler in a cool, dry place, away from direct sunlight and moisture.
- Remove batteries if the device will not be used for an extended period to prevent leakage.

Troubleshooting

- **Device not heating:** Ensure batteries are correctly installed and are not depleted. Replace with fresh AAA alkaline batteries if necessary.
- **Inconsistent curl:** Ensure the device is fully preheated (silicone pad is translucent white). Apply gentle, even pressure for the recommended duration.
- **Lashes not curling:** Ensure lashes are clean and dry before use. Apply mascara after curling for best results.

Specifications

Feature	Detail
Model Number	TB-2003B
Dimensions	4.92 x 1.4 x 0.9 inches
Weight	0.95 ounces
Power Source	2 AAA batteries (not included)
Material	Acrylonitrile Butadiene Styrene (ABS)
Manufacturer	TOUCHBEAUTY BEAUTY & HEALTH SHENZHEN CO.,LTD
Included Components	Silicone Pad

Warranty and Support

For warranty information and customer support, please refer to the product packaging or contact TOUCHBeauty customer service directly. Keep your purchase receipt for warranty claims.

You can visit the official TOUCHBeauty store for more information:[TOUCHBeauty Store](#)