

[Manuals.plus](#) /

> [STIGA](#) /

> STIGA Combi 36 Electric Lawn Mower 1400W User Manual

STIGA 294340068/S15

STIGA Combi 36 Electric Lawn Mower

USER INSTRUCTION MANUAL

1. Introduction

Thank you for choosing the STIGA Combi 36 Electric Lawn Mower. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new lawn mower. Please read these instructions carefully before assembly, operation, or maintenance.

The STIGA Combi 36 is an electric lawn mower equipped with a 1400W motor and a 34 cm cutting blade. It offers 6 different cutting height adjustments, ranging from 25 mm to 75 mm. The mower features a spacious 35-liter grass collector and supports three cutting systems: collecting, mulching, and rear discharge. It is designed for small to medium-sized gardens, offering a lightweight and practical solution for lawn care.

2. Safety Instructions

General Safety:

- Always wear appropriate personal protective equipment (PPE), including safety glasses, sturdy footwear, and hearing protection.
- Keep children, pets, and bystanders away from the operating area.
- Never operate the mower in wet conditions or rain.
- Inspect the power cord for damage before each use. Do not use if damaged.
- Disconnect the power supply before cleaning, maintenance, or if the cord becomes entangled.

Mower-Specific Safety:

- Ensure the cutting area is clear of stones, sticks, and other debris that could be thrown by the blade.
- Do not operate the mower on excessively steep slopes.
- Always push the mower forward; do not pull it towards you.
- Never lift or carry the mower while the motor is running.
- Be aware of the rotating blade even after the motor is switched off.

3. Assembly and Setup

Your STIGA Combi 36 lawn mower requires minimal assembly before first use.

3.1 Handle Assembly

1. Unfold the lower handle section and secure it to the mower body using the provided knobs.
2. Attach the upper handle section to the lower section, ensuring all cables are routed correctly and not pinched. Secure with the remaining knobs.
3. Ensure the handle is firmly locked in place for safe operation.



This image shows the STIGA Combi 36 electric lawn mower from the side, with its handle in the operating position. The yellow and grey body, wheels, and grass collector are visible, illustrating the fully assembled unit.

3.2 Grass Collector Attachment

1. Lift the rear discharge flap.
2. Hook the grass collector onto the mower body, ensuring it sits securely under the flap.
3. Lower the flap to hold the collector in place.



A view of the STIGA Combi 36 electric lawn mower from the rear, highlighting the large grass collector attached to the back. The handle is folded down for storage or transport, demonstrating the mower ready for use with the collector.

3.3 Cutting Height Adjustment

The cutting height can be adjusted to 6 positions, from 25 mm to 75 mm. Locate the height adjustment lever on the side of the mower. Pull the lever outwards and move it to the desired position, then release to lock it in place. Ensure all wheels are set to the same height for an even cut.

4. Operating Instructions

4.1 Pre-Operation Checks

- Ensure the power cord is in good condition and properly connected.
- Check that the grass collector is correctly attached or the mulching plug is inserted.
- Verify that the cutting height is set as desired.
- Clear the lawn of any objects that could damage the blade or be ejected.

4.2 Starting and Stopping the Mower

1. Connect the mower to a suitable power outlet.
2. Press and hold the safety button, then pull the bail lever towards the handle. The motor will start.
3. To stop the mower, release the bail lever. The motor will switch off.

4.3 Mowing Techniques

- Mow in overlapping strips to ensure an even cut.
- For best results, mow when the grass is dry.
- Avoid cutting more than one-third of the grass height at a time.
- When mowing slopes, always mow across the face of the slope, not up and down.

4.4 Cutting Systems

The STIGA Combi 36 offers three cutting options:

- **Collecting:** Attach the grass collector to gather clippings.
- **Mulching:** Insert the mulching plug (if included) into the rear discharge opening. This finely chops grass clippings and returns them to the lawn as natural fertilizer.
- **Rear Discharge:** Remove the grass collector and mulching plug. Clippings will be discharged from the rear of the mower.

4.5 Emptying the Grass Collector

When the grass collector is full, the airflow will decrease, and grass will no longer be effectively collected. Stop the mower, disconnect the power, lift the rear discharge flap, and remove the collector. Empty the clippings into a suitable receptacle and reattach the collector securely.

5. Maintenance

Regular maintenance ensures the longevity and optimal performance of your lawn mower.

5.1 Cleaning the Mower

- Always disconnect the power supply before cleaning.
- After each use, clean the underside of the mower deck and the grass collector to prevent grass buildup. Use a brush or scraper; avoid using water directly on electrical components.
- Wipe down the exterior with a damp cloth.



A detailed view of one of the wheels of the STIGA Combi 36 lawn mower, showing the tread pattern and the grey hub design. This image can be used to illustrate areas requiring cleaning or inspection, such as around the wheels and chassis.

5.2 Blade Inspection and Replacement

- Regularly inspect the cutting blade for sharpness and damage. A dull or damaged blade can lead to poor cutting performance and increased motor strain.
- If the blade is dull, it can be sharpened by a qualified service technician. If it is bent, cracked, or severely damaged, it must be replaced with a genuine STIGA replacement blade.
- Always wear heavy-duty gloves when handling the blade.

5.3 Storage

Store the mower in a dry, well-ventilated area, away from direct sunlight and extreme temperatures. The handle can be folded for compact storage. Ensure the mower is clean before storing for extended periods.

6. Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Mower does not start	No power supply Safety button/bail lever not engaged	Check power cord and outlet Ensure both controls are correctly engaged
Poor cutting performance	Dull or damaged blade Cutting height too low for grass conditions Grass collector full	Inspect/replace blade Adjust cutting height Empty grass collector
Excessive vibration	Damaged or unbalanced blade Loose components	Inspect/replace blade Check for loose screws or parts
Motor stops during operation	Overload (e.g., very thick grass) Power interruption	Raise cutting height, mow slower Check power connection

7. Specifications

- **Model:** STIGA Combi 36
- **Model Number:** 294340068/S15
- **Power:** 1400 W
- **Power Source:** Mains-powered
- **Cutting Width:** 34 cm
- **Cutting Heights:** 6 positions, 25 - 75 mm
- **Grass Collector Capacity:** 35 liters
- **Cutting Systems:** Collecting, Mulching, Rear Discharge
- **Material:** Plastic
- **Item Weight:** 13.5 kg
- **Manufacturer:** Stiga

8. Warranty and Support

Your STIGA Combi 36 Electric Lawn Mower is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including warranty period and coverage details. Keep your proof of purchase for any warranty claims.

For technical support, spare parts, or service inquiries, please contact your authorized STIGA dealer or visit the official STIGA website for contact information in your region. When contacting support, please have your model number (294340068/S15) and serial number ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B074PWQX5J>

More documents and user manuals: <https://manuals.plus/>