

[Manuals.plus](#) /

› [Billboard](#) /

› Billboard BB496 Pill-Shaped Bluetooth Speaker User Manual

Billboard BB496

Billboard BB496 Pill-Shaped Bluetooth Speaker User Manual

Model: BB496

INTRODUCTION

Thank you for purchasing the Billboard BB496 Pill-Shaped Bluetooth Speaker. This portable speaker is designed to deliver high-quality audio with versatile connectivity options. It features wireless audio streaming via Bluetooth, multiple input options including AUX, USB, and Micro SD, and an integrated FM radio. Additionally, it includes a built-in microphone for hands-free calls and offers up to 3 hours of playback on a single charge. This manual provides essential information for setting up, operating, and maintaining your speaker.

SAFETY INFORMATION

- Do not expose the speaker to water, moisture, or extreme temperatures.
- Keep the speaker away from heat sources, direct sunlight, and flammable materials.
- Do not attempt to disassemble, repair, or modify the speaker. This will void the warranty.
- Use only the provided or certified charging cables.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.
- Dispose of the product and battery responsibly according to local regulations.

PACKAGE CONTENTS

Please check the package for the following items:

- Billboard BB496 Pill-Shaped Bluetooth Speaker
- USB Charging Cable
- AUX Audio Cable
- User Manual



Figure 1: The Billboard BB496 speaker packaging box, illustrating the product and its key features.

PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Figure 2: Front view of the Billboard BB496 speaker, showing the speaker grilles on both sides and the central control panel with buttons and an indicator light.



Figure 3: Rear view of the Billboard BB496 speaker, highlighting the various input ports: USB, Micro SD card slot, AUX input, and Micro USB charging port.

Controls and Ports

- **Power Button:** Long press to turn on/off. Short press to change mode.
- **Play/Pause Button:** Play or pause audio. Answer/end calls.
- **Volume Up/Next Track:** Short press for volume up, long press for next track.
- **Volume Down/Previous Track:** Short press for volume down, long press for previous track.
- **Micro USB Port:** For charging the speaker.
- **USB Port:** For playing audio from a USB flash drive.
- **Micro SD Card Slot:** For playing audio from a Micro SD card.
- **AUX Input:** For connecting external audio devices via a 3.5mm audio cable.
- **LED Indicator:** Shows power, charging, and Bluetooth status.
- **Microphone:** For hands-free calling.

SETUP

Charging the Speaker

1. Connect the Micro USB end of the charging cable to the Micro USB port on the speaker.
2. Connect the USB-A end of the charging cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate during charging and turn off once fully charged.

Powering On/Off

- **To Power On:** Long press the Power button until the LED indicator lights up.
- **To Power Off:** Long press the Power button again until the LED indicator turns off.

OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (the LED indicator will blink rapidly). If not, short press the Power button to cycle through modes until Bluetooth mode is activated.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for available devices and select "BB496" from the list.
4. Once successfully paired, the LED indicator will glow solid blue, and you will hear a confirmation tone.
5. You can now play audio wirelessly from your device.

AUX Connection

1. Connect one end of the 3.5mm AUX audio cable to the AUX input port on the speaker.
2. Connect the other end of the cable to the headphone jack of your audio device.
3. The speaker will automatically switch to AUX mode, or you may need to short press the Power button to select AUX mode.
4. Control playback and volume from your connected device.

USB / Micro SD Playback

1. Insert a USB flash drive into the USB port or a Micro SD card into the Micro SD card slot.
2. The speaker will automatically detect the media and begin playing audio files, or you may need to short press the Power button to select USB/SD mode.
3. Use the speaker's control buttons to play/pause, skip tracks, and adjust volume.

FM Radio Function

1. Short press the Power button to switch to FM radio mode.
2. Long press the Play/Pause button to automatically scan and save available FM stations.
3. Use the Volume Up/Down buttons (short press) to navigate through saved stations.

Hands-Free Calling

- When connected via Bluetooth to your smartphone, the speaker can be used for hands-free calls.
- **To Answer a Call:** Short press the Play/Pause button.
- **To End a Call:** Short press the Play/Pause button again.
- **To Reject a Call:** Long press the Play/Pause button.

MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the speaker to dust, dirt, or sand.
- When not in use for extended periods, store the speaker in a cool, dry place.
- Charge the speaker periodically if not used for a long time to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully using the provided USB cable.
No sound from the speaker.	Volume is too low or muted. Incorrect input mode.	Increase volume on both the speaker and the connected device. Ensure the correct input mode (Bluetooth, AUX, USB, SD) is selected.
Bluetooth device cannot pair.	Speaker not in pairing mode. Device too far. Interference.	Ensure the speaker is in Bluetooth pairing mode (blinking LED). Move the device closer to the speaker (within 10m). Turn off other Bluetooth devices to reduce interference.
Poor FM radio reception.	Weak signal.	Move the speaker to a location with better signal reception.

SPECIFICATIONS

- **Brand:** Billboard
- **Model:** BB496
- **Maximum Speaker Output Power:** 100 Watt
- **Connectivity Technology:** AUX, Bluetooth, USB
- **Bluetooth Range:** Up to 10 meters (33 feet)
- **Mounting Type:** Surface
- **Recommended Uses:** For music players
- **Compatible Devices:** Smartphones, Tablets
- **Power Source:** Rechargeable Battery, Wired (for charging)
- **Battery Life:** Up to 3 hours (playback time)
- **Inputs:** AUX, USB, Micro SD
- **Built-in Microphone:** Yes (for hands-free calls)
- **FM Radio:** Yes

WARRANTY AND SUPPORT

For detailed warranty information, product registration, or technical support, please refer to the documentation included with your product packaging or visit the official Billboard website. Do not attempt to service this product yourself.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B074PYW4C6>

More documents and user manuals: **<https://manuals.plus/>**