

Rowenta RH8133

Rowenta Powerline Extreme RH8133WA Corded Bagless Vacuum Cleaner User Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always ensure the voltage indicated on the appliance corresponds to your mains voltage before connecting.
- Do not use the appliance if the power cord or plug is damaged. Contact an authorized service center for repair.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug the appliance from the power outlet before cleaning or performing any maintenance.
- Do not vacuum water, wet substances, hot ashes, large sharp objects, or flammable liquids.
- Use only genuine Rowenta accessories and spare parts.

2. PRODUCT OVERVIEW

The Rowenta Powerline Extreme RH8133WA is a corded, bagless electric vacuum cleaner designed for efficient cleaning of hard and flat surfaces. It features cyclonic technology for optimal dust separation and a powerful 750W motor.



Figure 1: Rowenta Powerline Extreme RH8133WA vacuum cleaner. This image shows the red vacuum cleaner standing upright, highlighting its sleek design and compact form factor suitable for storage.

Included Components:

- Main vacuum unit
- Floor nozzle (brushes)
- Filter system
- User manual

3. SETUP

3.1 Assembly

1. Unpack all components from the packaging.
2. Insert the handle into the main vacuum unit until it clicks securely into place.
3. Attach the desired floor nozzle (brush) to the bottom of the main unit. Ensure it is firmly connected.

3.2 Power Connection

Extend the power cord fully and plug it into a suitable electrical outlet. Ensure the cord is not tangled or obstructed during use.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- To turn on the vacuum cleaner, press the ON/OFF button located on the handle.
- To turn off the vacuum cleaner, press the ON/OFF button again.

4.2 Using the Vacuum Cleaner

This vacuum cleaner is recommended for use on hard floors. The included brushes are designed for effective cleaning on various hard surfaces.

- Move the vacuum cleaner slowly and steadily over the surface to be cleaned.
- For optimal performance, ensure the dust container is not full.
- Avoid vacuuming large debris that could block the nozzle or hose.

5. MAINTENANCE

5.1 Emptying the Dust Container

Empty the dust container regularly to maintain optimal suction power. The container has a capacity of 0.9 liters.

1. Ensure the vacuum cleaner is unplugged from the power outlet.
2. Locate the dust container release button/latch.
3. Remove the dust container from the main unit.
4. Open the container and empty its contents into a waste bin.
5. Close the container securely and reattach it to the vacuum cleaner.

5.2 Cleaning the Filters

The cyclonic filter system requires periodic cleaning to prevent clogging and maintain performance.

1. With the dust container removed, access the filter components.
2. Gently tap the filters to dislodge dust. For thorough cleaning, rinse the washable filter components under cold running water.
3. Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use a dryer or heat source.
4. Reassemble the filters and dust container.

5.3 General Cleaning

Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply; power cord not properly plugged in.	Check if the plug is securely inserted into the outlet. Verify the outlet is functional.

Problem	Possible Cause	Solution
Loss of suction power.	Dust container full; filters clogged; nozzle/hose blocked.	Empty the dust container. Clean or replace the filters. Check for and remove any blockages in the nozzle or hose.
Unusual noise during operation.	Foreign object in the brush or nozzle; motor issue.	Turn off and unplug the vacuum. Inspect the brush and nozzle for obstructions and remove them. If the noise persists, contact customer support.

7. SPECIFICATIONS

Brand	Rowenta
Model Number	RH8133
Power	750 Watts
Dust Container Capacity	0.9 Liters
Noise Level	77 dB(A)
Dimensions (L x W x H)	20.3 x 28.5 x 125.6 cm
Item Weight	5.9 Kilograms
Filter Type	Cyclonic
Power Source	Corded Electric
Recommended Surface	Hard floor
Country of Origin	China

8. WARRANTY AND SUPPORT

For warranty information, service, or to inquire about spare parts, please contact Rowenta customer support directly. Information regarding the availability of specific spare parts is not provided in this manual.

You can often find contact details on the official Rowenta website or through your local retailer.