

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KWANWA](#) /

› [KWANWA 5x7 Voice Recordable Picture Frame User Manual](#)

KWANWA 43237-2

KWANWA 5x7 Voice Recordable Picture Frame User Manual

MODEL: 43237-2

Introduction

This manual provides instructions for the proper setup, operation, and maintenance of your KWANWA 5x7 Voice Recordable Picture Frame. Please read these instructions carefully before use to ensure optimal performance and longevity of your product.


Setup

1. Inserting Batteries

Locate the battery compartment on the back of the frame. Unscrew and remove the cover. Insert 3 AAA alkaline batteries (not included), ensuring correct polarity. Replace the cover and tighten the screws securely.




Put 3 x AAA fresh batteries (NOT INCLUDED) into the battery tank.

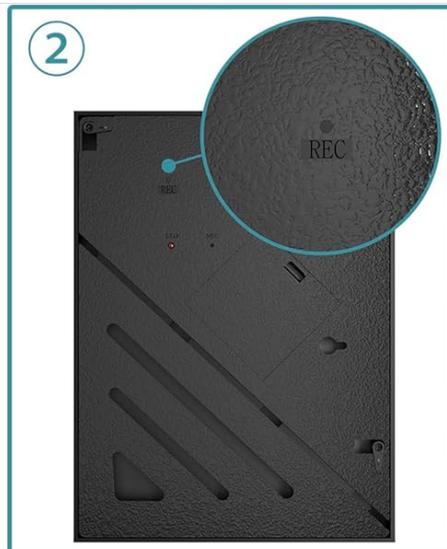

Press and hold REC button.



When the led indicator light up, speak clearly and directly into the microphone.

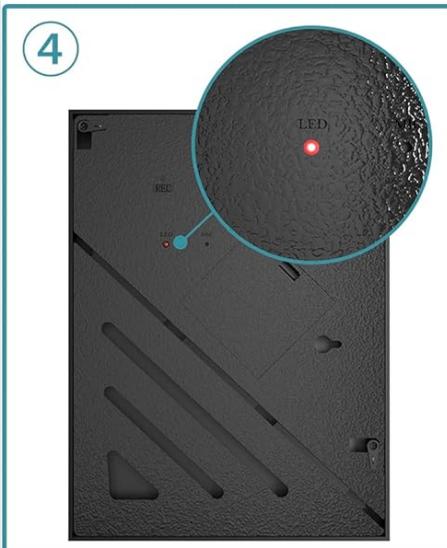

Recording time up to 20 seconds. The red LED light will automatically turn off when up to 20 seconds.



If you make a mistake, repeat the above steps and the voice message can be cleared and re-recorded.



Press the front center area of the picture frame, the record will play.

Image: Back of the frame illustrating battery insertion and recording controls.

2. Inserting a Photo

Unlock the frame by turning all latches on the back to the open position. Gently lift the back panel upward. Insert a 5x7 inch photo into the frame window. Securely reattach the back panel and lock all latches.

(Please peel off the protective film on the both sides of the Plexiglass)

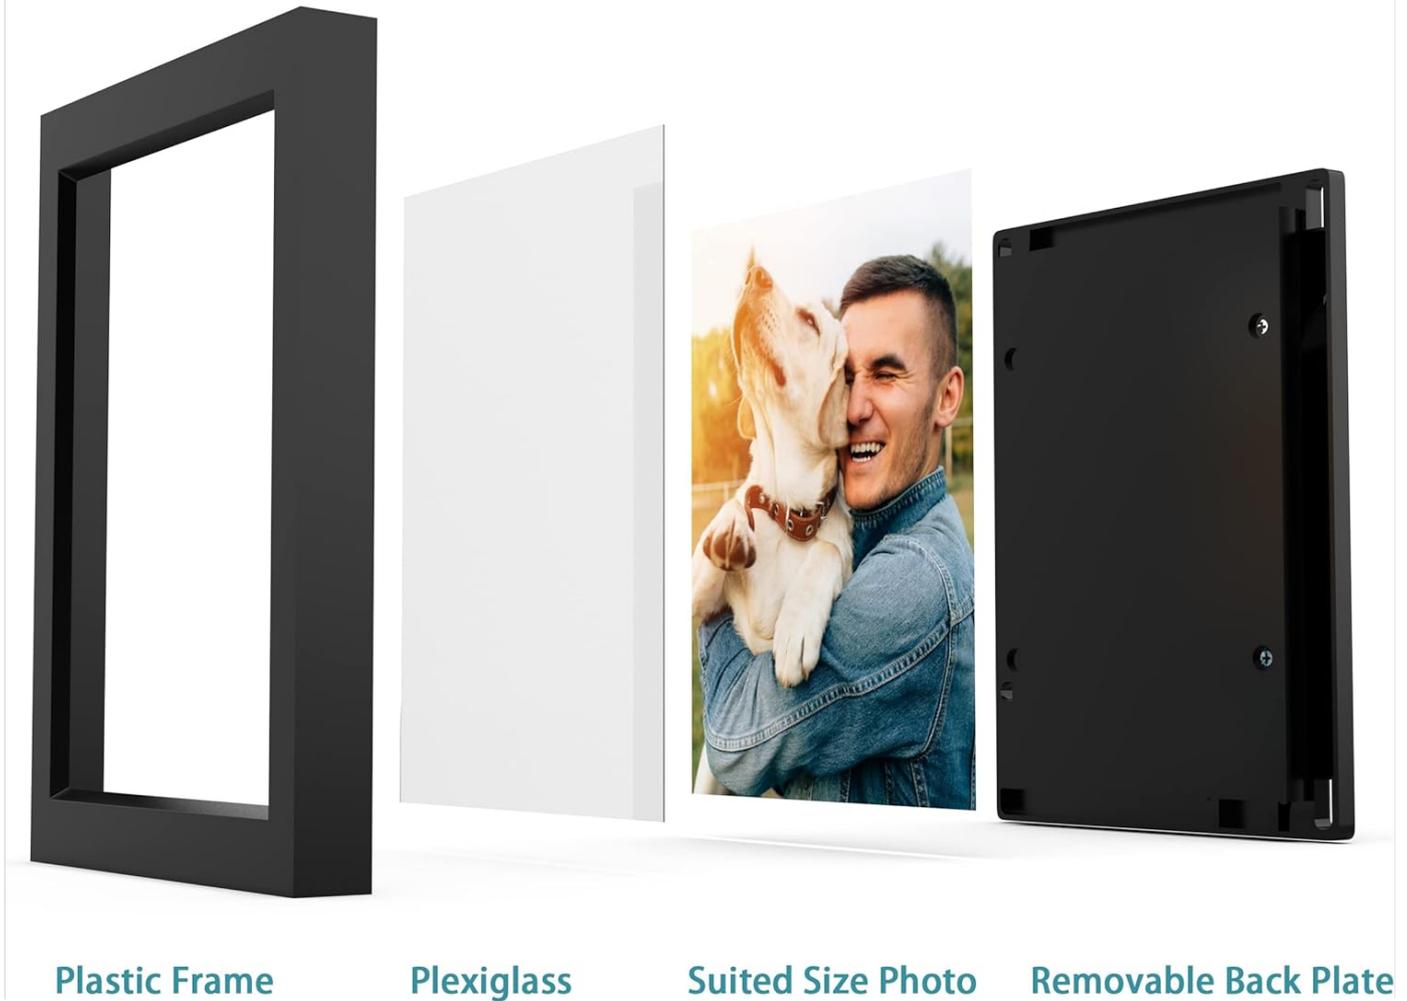


Image: Exploded view showing the frame components and the order of assembly.

3. Removing Protective Film

Before inserting your photo, ensure you peel off the protective film from both sides of the Plexiglass cover. This prevents a hazy appearance and ensures clear display of your picture.

4. Display Options

The frame can be displayed vertically or horizontally. Use the built-in easel for tabletop placement or the wall hook for hanging.

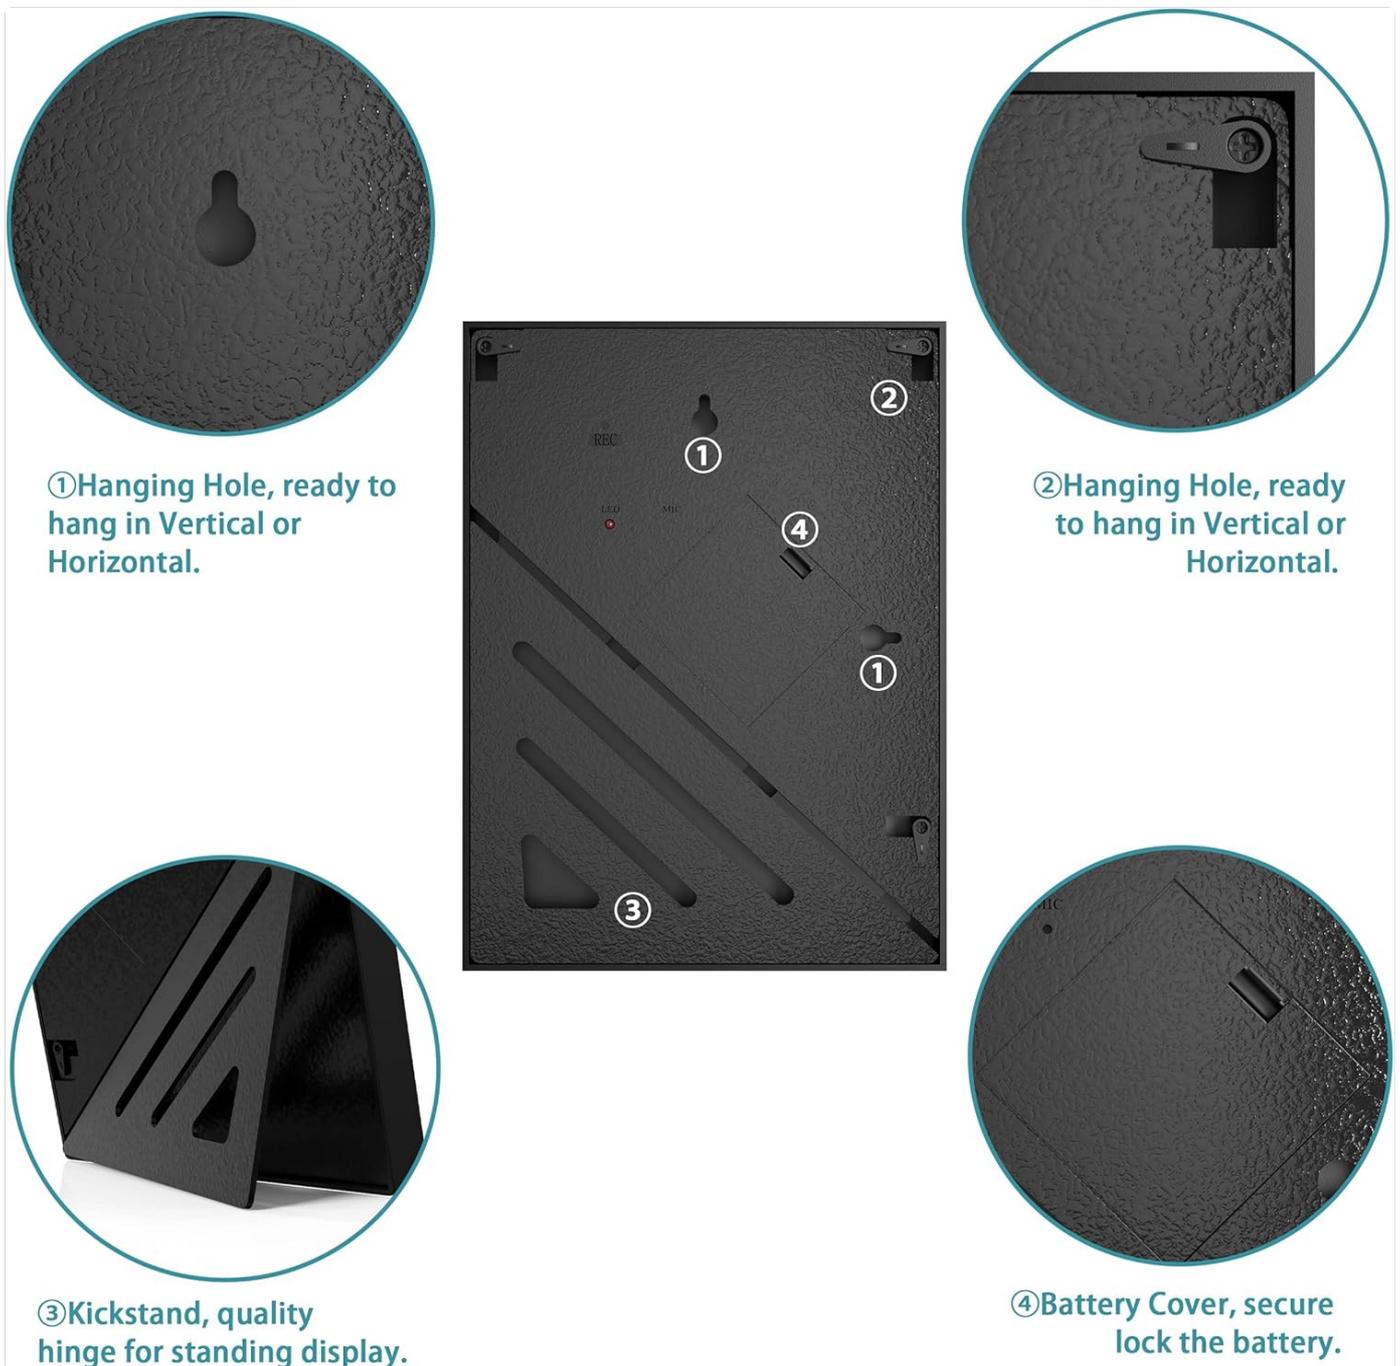


Image: Rear view of the frame highlighting the hanging holes and kickstand for versatile display.

Operating Instructions

1. Recording a Message

1. Locate the REC button on the back of the frame.
2. Press and hold the REC button using a pointed tool (e.g., pen tip).
3. When the LED indicator light illuminates, speak clearly into the microphone from 4-8 inches (10-20cm) away.
4. Release the REC button after your message. The LED light will automatically turn off after up to 20 seconds.

Your recording will be saved. To re-record, simply repeat steps 1-3. Existing recordings are retained after battery replacement.

Your browser does not support the video tag.

Video: A demonstration of how to record a voice message on the KWANWA picture frame.

2. Playing Back a Message

To listen to your recorded message, press the front center area of the picture frame. The recording will play.

Your browser does not support the video tag.

Video: A user demonstrating the playback function of the KWANWA picture frame.

Your browser does not support the video tag.

Video: Another example of the KWANWA picture frame playing a recorded message.

Maintenance

1. Cleaning

To clean the frame, gently wipe it with a soft, dry cloth. For the Plexiglass cover, use a soft, lint-free cloth and a mild, non-abrasive cleaner if necessary. Avoid harsh chemicals that may scratch or damage the surface.

2. Battery Care

Use only AAA alkaline batteries. Do not mix new and used batteries or different brands. Replace batteries immediately if audio playback becomes distorted to ensure proper function.

Troubleshooting

- **No Sound or Distorted Playback:** Ensure batteries are correctly installed and are fresh AAA alkaline batteries. Replace batteries if the sound is unclear or distorted.
- **Cloudy or Scratched Display:** Verify that the protective film has been removed from both sides of the Plexiglass cover.
- **Recording Issues:** Ensure the REC button is pressed and held firmly during recording and that you speak clearly into the microphone within the recommended distance (4-8 inches).
- **Back Panel Latch/Button Issues:** When changing photos or batteries, handle the back panel and buttons carefully to prevent dislodging any components.

Specifications

Feature	Detail
Brand	KWANWA
Model Number	43237-2
Color	Black
Product Dimensions	8"L x 6"W
Photo Size	5x7 inches
Shape	Rectangular
Mounting Type	Wall/Tabletop
Frame Material	Plastic
Cover Material	Plastic (Plexiglass)
Back Material Type	Cardboard

Special Feature	Voice recorder (20 seconds)
Power Source	3 x AAA Batteries (not included)
Item Weight	9.9 ounces (0.62 Pounds)

Support

For any questions or assistance, please contact KWANWA customer support:

Email: kwanwa@shenzhenkwanwa.com