

[Manuals.plus](#) /

› [iLive Electronics](#) /

› iLive Electronics Waterproof Wireless Speaker User Manual

iLive Electronics iSBW157BU

iLive Electronics Waterproof Wireless Speaker

MODEL: iSBW157BU

User Instruction Manual

1. Introduction and Overview

The iLive Waterproof Wireless Speaker (Model: iSBW157BU) is designed for robust outdoor use, providing audio entertainment in various environments. This speaker is built to withstand sand and mud, and it floats if dropped in water, making it suitable for adventurous activities. It features a built-in microphone for hands-free communication and offers a wireless range of up to 60 feet. The integrated rechargeable battery provides approximately 8 hours of playback at 50% volume.



Image 1.1: The iLive Waterproof Wireless Speaker, showcasing its compact, circular design with a black body, blue trim, and a prominent speaker grille. A carabiner clip attachment point is visible at the top.

2. What's in the Box

Please ensure all items are present upon unboxing:

- Wireless Speaker (iSBW157BU)
- Micro-USB to USB Cable
- Detachable Carabiner Clip
- User's Guide (this manual)

- Limited Warranty Information

3. Product Features

- Bluetooth wireless connectivity for audio streaming.
- Waterproof, sand-proof, and mud-proof design with a rubberized coating.
- Floats if dropped in water.
- Built-in microphone for hands-free speakerphone functionality.
- Wireless range of up to 60 feet (18.2 meters).
- Integrated rechargeable battery providing approximately 8 hours of battery life at 50% volume.
- Intuitive controls: Volume Up/Next Track, Volume Down/Previous Track, Play/Pause/Pairing/Answer Phone.
- Shock-proof construction for enhanced durability.

4. Setup

4.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied Micro-USB to USB cable to the speaker's charging port and the other end to a standard USB power source (e.g., computer USB port, USB wall adapter). The LED indicator will show charging status and turn off when fully charged.

4.2 Attaching the Carabiner Clip

The detachable carabiner clip can be attached to the designated loop on the speaker for easy portability, allowing you to clip it to bags, belts, or other gear.

5. Operating Instructions

5.1 Power On/Off

- To power on: Press and hold the **Power button** (●) located at the top of the speaker until the LED indicator illuminates.
- To power off: Press and hold the **Power button** until the LED indicator turns off.

5.2 Bluetooth Pairing

1. Ensure the speaker is powered on. The LED indicator will flash, indicating it is in pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, laptop), navigate to the Bluetooth settings.
3. Search for available devices. The speaker will appear as "iSBW157BU" or similar.
4. Select the speaker from the list to initiate pairing.
5. Once successfully paired, the LED indicator on the speaker will stop flashing and remain solid.

5.3 Controlling Playback and Volume

- **Play/Pause:** Press the **Play/Pause button** (often combined with the pairing button, labeled "PAIR/II") once to play or pause audio.
- **Volume Up:** Press the **Volume Up button (+)** to increase volume.
- **Next Track:** Press and hold the **Volume Up button (+)** to skip to the next track.
- **Volume Down:** Press the **Volume Down button (-)** to decrease volume.
- **Previous Track:** Press and hold the **Volume Down button (-)** to go to the previous track.

5.4 Hands-Free Calling

When connected via Bluetooth, the speaker can be used for hands-free calls:

- **Answer/End Call:** Press the **Play/Pause/Answer Phone button** once to answer an incoming call or end an active call.
- **Reject Call:** Press and hold the **Play/Pause/Answer Phone button** to reject an incoming call.

6. Maintenance

6.1 Cleaning

Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the charging port cover is securely closed when cleaning or when the speaker is exposed to water.

6.2 Storage

Store the speaker in a cool, dry place away from extreme temperatures and direct sunlight. If storing for an extended period, charge the battery periodically to maintain its lifespan.

6.3 Battery Care

To maximize battery life, avoid fully discharging the battery frequently. Recharge the speaker when the low battery indicator appears.

7. Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the supplied Micro-USB cable.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode; device Bluetooth is off; speaker is too far from device.	Ensure speaker is on and LED is flashing; enable Bluetooth on your device; move device closer to speaker (within 60 ft).
No sound or low sound.	Volume is too low on speaker or device; speaker is not connected.	Increase volume on both speaker and connected device; ensure speaker is successfully paired.

Problem	Possible Cause	Solution
Sound distortion.	Volume is too high; device is too far from speaker.	Reduce volume on speaker or device; move device closer to speaker.

8. Specifications



Image 8.1: Dimensions of the iLive Waterproof Wireless Speaker, showing its approximate width of 3.7 inches, height of 4.07 inches, and depth of 1.6 inches.

Feature	Detail
Model Name	iSBW157BU
Material	Plastic
Speaker Type	Outdoor
Connectivity Technology	Bluetooth, USB
Wireless Communication Technology	Bluetooth
Bluetooth Range	60 Feet (18.2 meters)
Power Source	Battery Powered (1 Lithium Ion battery, included)
Battery Life	Approx. 8 Hours (at 50% volume)
Speaker Maximum Output Power	3 Watts
Audio Output Mode	Stereo
Number of Microphones	1
Water Resistance Level	Waterproof
Product Dimensions (L x W x H)	3.8 x 1.2 x 4 inches (approx.)
Item Weight	5.6 ounces (0.35 Pounds)
Color	Black/Blue
UPC	047323715709



Image 8.2: The iLive Waterproof Wireless Speaker positioned on a wooden surface outdoors, highlighting its rugged and portable design suitable for various environments.

9. Warranty and Support

This iLive Electronics product comes with a Limited Warranty. Please refer to the separate warranty information included in your product packaging for details regarding coverage, terms, and conditions.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact iLive Electronics customer service. Contact information can typically be found on the manufacturer's official website or on the warranty card.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question