

FDW FDW 10'x20'

FDW 10'x20' Outdoor Canopy Tent Instruction Manual

Brand: FDW | Model: FDW 10'x20'

INTRODUCTION

Thank you for choosing the FDW 10'x20' Outdoor Canopy Tent. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your canopy tent. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

This canopy tent is designed for temporary outdoor use, such as parties, backyard events, camping, and other outdoor activities. It provides shade and light protection from mild weather conditions.

SAFETY INFORMATION

- **Fire Hazard:** The polyethylene fabric of this tent is not fireproof. Keep all sources of fire, including open flames, heaters, and cooking equipment, away from the tent fabric.
- **Weather Conditions:** This tent is intended for regular use with no rain and very light wind. Do not leave the tent erected overnight or during adverse weather conditions. It cannot withstand winds exceeding 5 MPH or moderate to heavy rain. Severe weather can cause damage to the tent and potential injury.
- **Anchoring:** Always secure the tent firmly to the ground using the provided ropes and stakes to ensure stability.
- **Assembly:** Assembly requires at least two adults. Ensure all connections are secure before use.
- **Inspection:** Regularly inspect the tent for any signs of wear, damage, or loose connections. Do not use if damaged.

COMPONENTS LIST

Before assembly, ensure all parts are present. Refer to the assembly video below for a visual guide to the components and their connections.

Your browser does not support the video tag.

Video: FDW 10'x20' Outdoor Canopy Tent Assembly Guide. This video demonstrates the connection of various poles and connectors, and the overall assembly process.

The tent includes various poles, connectors, the roof fabric, and sidewalls. The assembly video provides a detailed diagram of all accessories at the beginning (0:00-0:03).

SETUP INSTRUCTIONS

Assembly is straightforward and requires no additional tools. It is recommended to have at least two people for efficient setup.

- 1. Assemble the Base Frame:** Connect the poles using the appropriate connectors to form the rectangular base of the tent. The video demonstrates connecting accessories 3-4-3 (0:04-0:11) and 3-7-3 (0:14-0:22) to form the side lengths. Connect the four sides using the middle connectors and plastic angle connectors (0:23-0:45).
- 2. Assemble the Roof Frame:** Connect the roof support poles and top connectors. The video shows connecting the top middle connectors (0:46-1:10) and top connectors (1:11-1:36) to create the peaked roof structure.
- 3. Attach Legs:** Connect the leg poles (accessory 5) to the base frame using the plastic angle connectors (1:37-1:58).
- 4. Drape the Roof Fabric:** Carefully drape the roof fabric over the assembled frame (1:59-2:06). Ensure it is centered and covers the entire frame.
- 5. Secure the Roof Fabric:** Use the integrated Velcro straps to secure the roof fabric to the frame poles (2:48-2:49).
- 6. Install Sidewalls:** Attach the sidewalls to the tent frame. The video shows installing the cloth and fixing it with Velcro (2:50-3:13).
- 7. Anchor the Tent:** Secure the tent to the ground using the provided stakes and ropes. Insert the base into the ground and use ground nails for stability (2:41-2:47).



Secure The Tent To The Ground Deeply

The tent is more stable with the ropes ,stakes and sand bag.



Stake



Rope

Image: Securing the tent to the ground using stakes and ropes for enhanced stability.



Pervious to light side window



The plastic Angle



Foot pad



Hook and loop fasteners

Image: Detailed view of key components: pervious-to-light side window, plastic angle connector, foot pad, and hook and loop fasteners.

OPERATING INSTRUCTIONS


The FDW 10'x20' Outdoor Canopy Tent is designed for versatility and ease of use.

- **Removable Sidewalls:** The tent features removable sidewalls with clear windows. These can be easily attached or removed using the hook and loop fasteners to adjust ventilation and light as needed. Six sidewalls with clear windows provide maximum light and unobstructed viewing, while all eight sidewalls are removable to boost air circulation.
- **Entry/Exit:** The tent design allows for flexible entry and exit points by adjusting the sidewalls.



Waterproof

High-quality waterproof fabric can effectively block the intrusion of rainwater

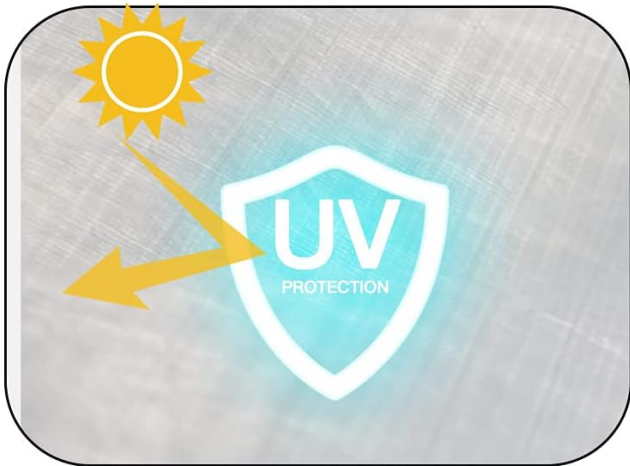

Sun protection

The anti-ultraviolet coating effectively blocks the entry of ultraviolet rays

Image: The side windows are removable, allowing for adjustable brightness and ventilation.

MAINTENANCE

- **Cleaning:** Clean the polyethylene fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as this can damage the material. Allow the fabric to dry completely before storage to prevent mildew.
- **Storage:** Disassemble the tent and store all components in a dry, cool place when not in use. This will prolong the lifespan of the product. Note that a carrying bag is not included.
- **Frame Care:** The rust and corrosion-resistant powder-coated steel framework should be wiped clean as needed. Inspect poles and connectors for any damage before each use.

SPECIFICATIONS

Feature	Detail
Brand	FDW
Model	FDW 10'x20'

Manufacturer Part Number	PT-1020-4-White-1
Size	10 x 20 feet (approximately 224"L x 113"W x 97.6"H)
Top Height	8.2 feet
Floor Area	200 Square Feet
Material (Frame)	Alloy Steel (powder coated)
Material (Fabric)	100g Polyethylene
Color	White
Water Resistance Level	Waterproof
UV Protection	Yes (reflects 90% harmful sun rays)
Recommended Uses	Camping, Outdoor Activities, Party
Required Assembly	Yes

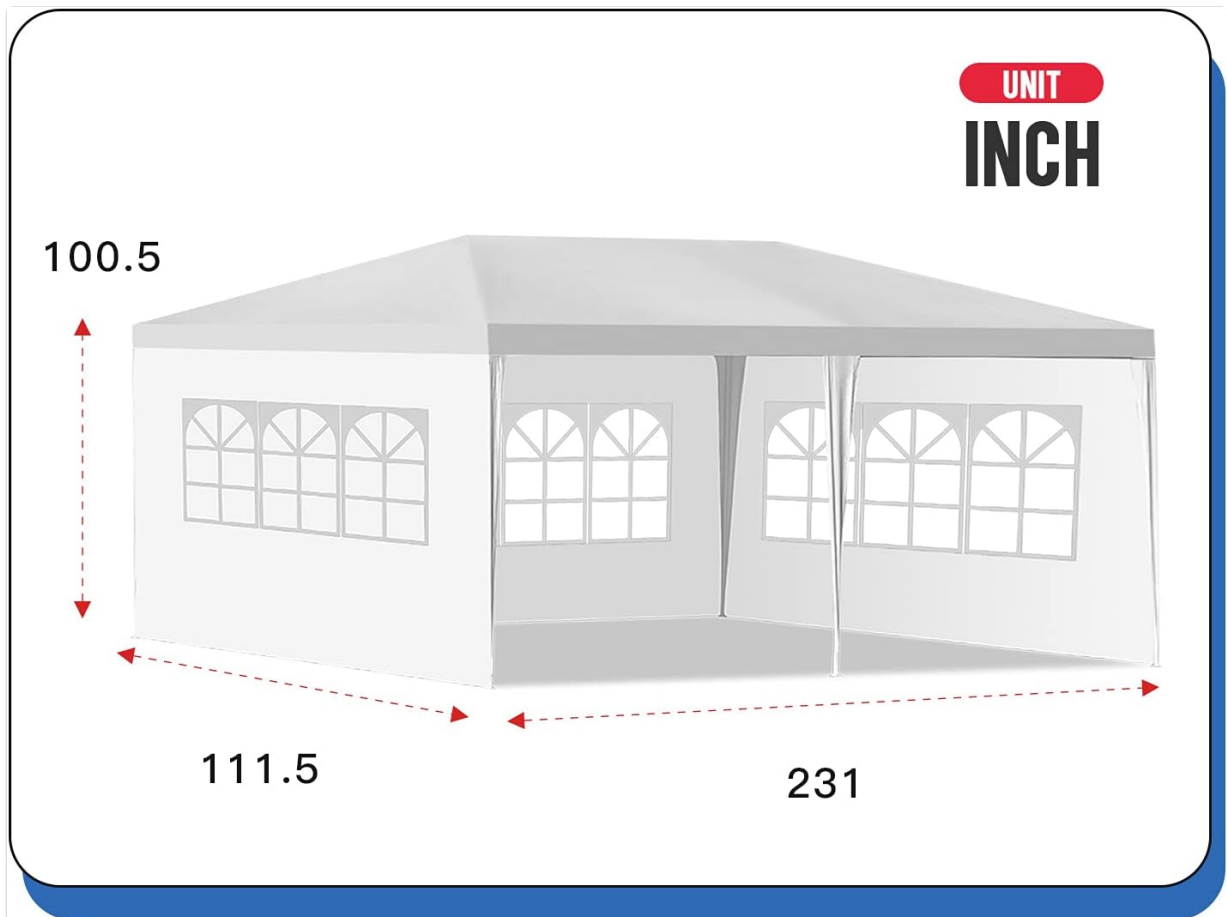


Image: Tent dimensions (Length: 231 inches, Width: 111.5 inches, Height: 100.5 inches).

TROUBLESHOOTING

- **Tent Instability:** Ensure all poles are fully inserted into their connectors and secured. Verify that the tent is properly anchored to the ground with all ropes and stakes. In windy conditions, additional weights (e.g., sandbags) may be necessary.

- **Water Accumulation on Roof:** Ensure the roof fabric is taut and properly stretched over the frame to prevent water from pooling. Adjust the frame if necessary to maintain proper tension and slope.
- **Difficulty with Assembly:** Refer to the assembly video and instructions. Ensure you are using the correct poles and connectors for each step. Sometimes, a slight adjustment or re-alignment of poles can resolve fitting issues.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided at the point of purchase or visit the FDW official website. Keep your purchase receipt as proof of purchase.