

## Fossil FTW4002

# Fossil Gen 3 Explorist Smart Watch - FTW4002 User Manual

Model: FTW4002

## 1. INTRODUCTION

---

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Fossil Gen 3 Explorist Smart Watch, model FTW4002. Please read these instructions carefully to ensure proper use and longevity of your device.

Your browser does not support the video tag.

**Video Description:** An overview of the Fossil Explorist FTW4002 Smart Watch, showcasing its design, touchscreen interface, and key features such as notifications, Google Maps, and activity tracking. The watch features a rose gold polished case and a blue leather strap.

## 2. SETUP

---

### 2.1 Unboxing and Initial Charge

Upon unboxing your Fossil Gen 3 Explorist Smart Watch, it is recommended to fully charge the device before first use. The watch comes with a magnetic charger. Connect the charger to a power source and place the watch onto the magnetic charging pad. Ensure the watch is securely seated for proper charging. A full charge may take approximately 4-5 hours.

### 2.2 Pairing with Your Smartphone

To utilize the full functionality of your smartwatch, it must be paired with a compatible smartphone (Android OS or iOS). Ensure Bluetooth is enabled on your phone.

1. Download the Wear OS by Google app from your phone's app store.
2. Open the Wear OS app and follow the on-screen instructions to begin the pairing process.
3. On your watch, select your preferred language and follow the prompts to connect to your phone.
4. Confirm the pairing code displayed on both your watch and phone.

### 2.3 Installing Wear OS App

The Wear OS by Google app is crucial for managing your watch settings, notifications, and installing additional applications. Ensure the app is always updated to the latest version for optimal performance.


## 3. OPERATING YOUR SMARTWATCH

---

### 3.1 Basic Navigation

Your Fossil Gen 3 Explorist features a responsive touchscreen and physical buttons for navigation.

- **Touchscreen:** Swipe up, down, left, or right to navigate through menus and notifications. Tap to select items.
- **Crown Button:** Press the main crown button to return to the watch face or access the app drawer. Rotate the crown to scroll through lists.
- **Customizable Buttons:** The two additional buttons can be customized to quickly launch your favorite apps or functions.

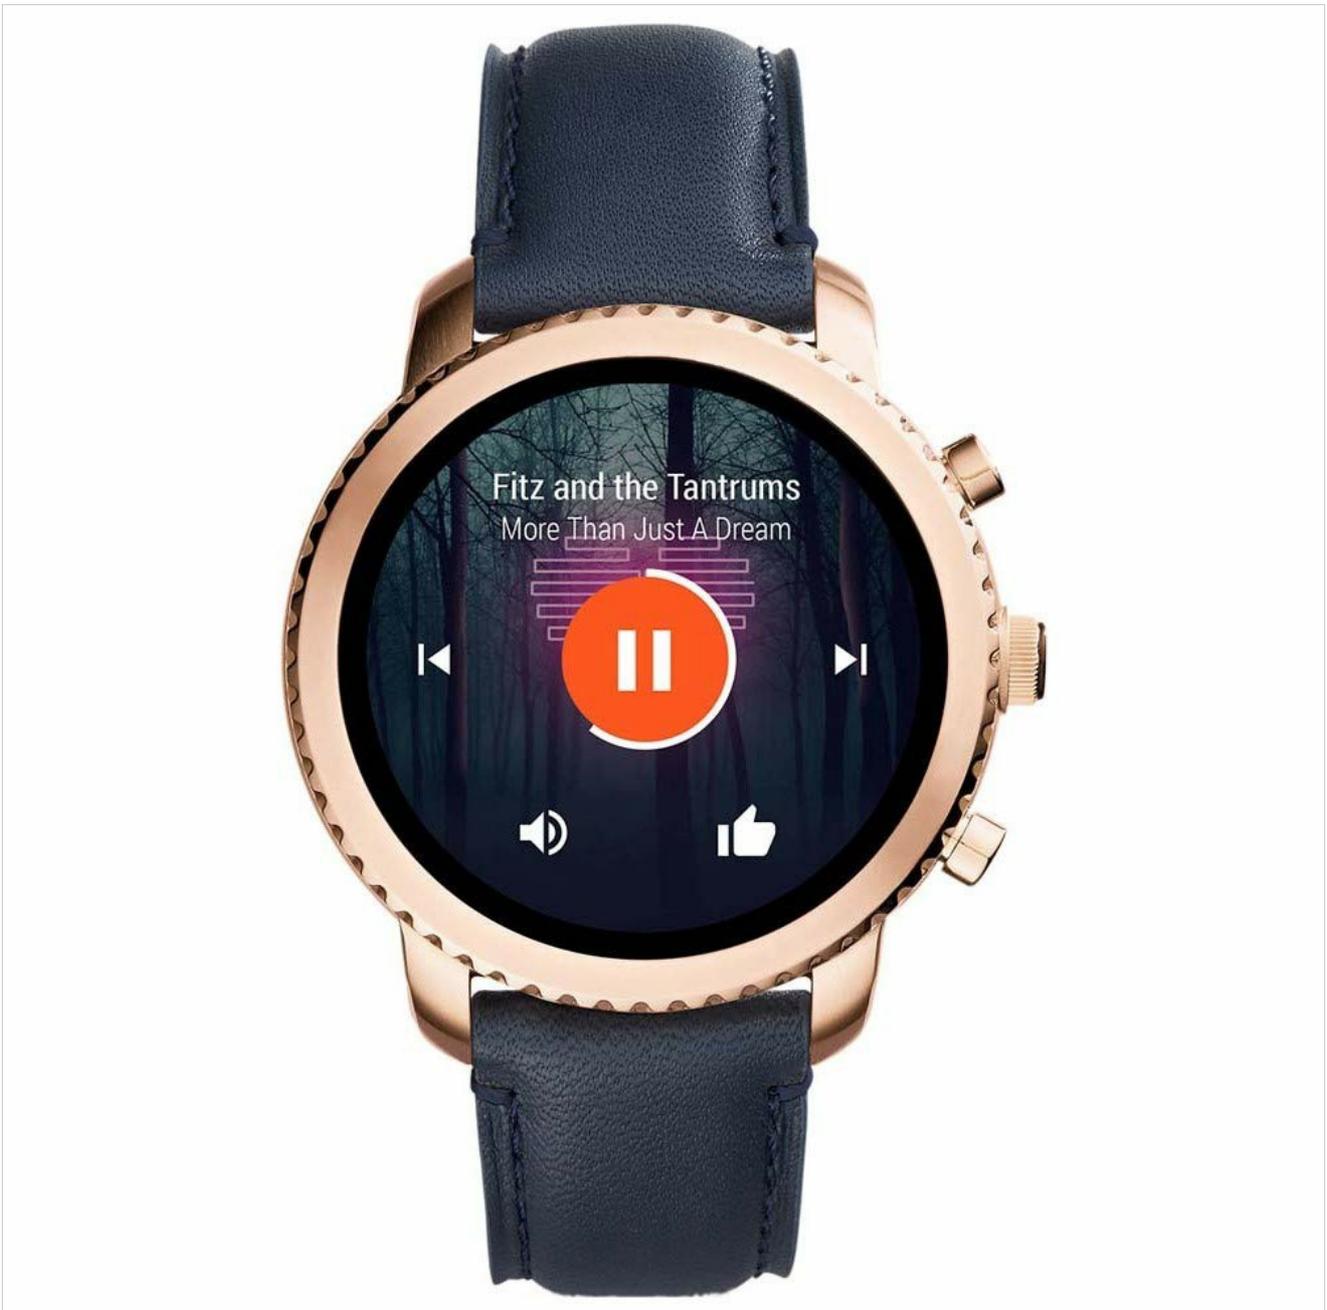

**Image Description:** A side profile of the Fossil Gen 3 Explorist Smart Watch, highlighting the rose gold case, the main rotating crown, and the two customizable push-buttons on the right side of the watch face.

### 3.2 Voice Commands


The watch supports voice-activated Google Assistant. Simply say "Hey Google" or press and hold the main crown button to activate the assistant. You can ask questions, set reminders, or control smart home devices using your voice.

### 3.3 Notifications

Receive social media alerts, text messages, emails, and app notifications directly on your watch. You can view and often respond to these notifications from your wrist.



**Image Description:** The watch face showing a notification for an upcoming event: "In 30 minutes Coffee with Jamie" at "Joe's Coffee Shop".

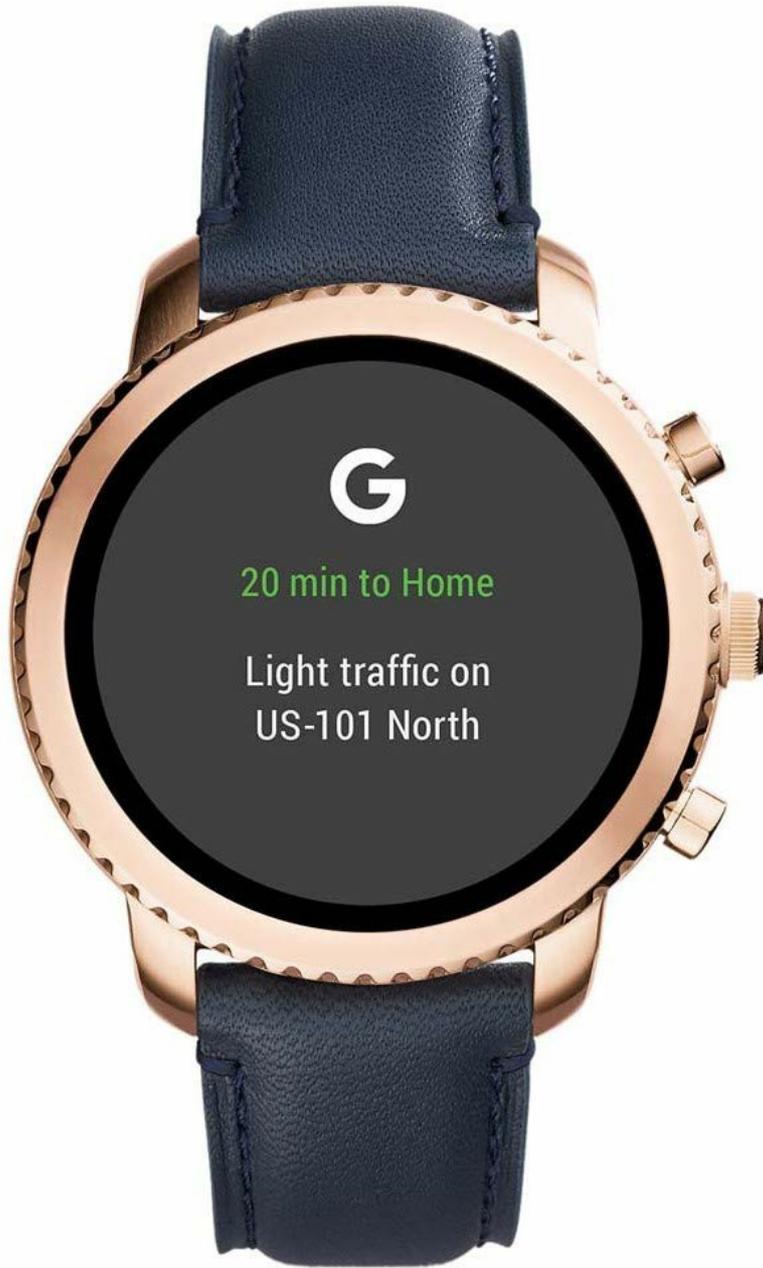

**Image Description:** The watch face indicating an incoming call from "Jamie calling phone" with options to accept or decline.



**Image Description:** The watch face showing a message notification from "Jamie" stating "Just leaving. Meet you there!".

### **3.4 Activity Tracking**

The watch includes an activity tracker to monitor your daily steps and other fitness metrics. Use the pre-installed Google Fit app or other compatible fitness applications to track your progress.

### **3.5 Google Maps Navigation**

Utilize Google Maps for turn-by-turn navigation directly on your wrist. This feature is particularly useful when walking or cycling, providing directions without needing to check your phone.



**Image Description:** The watch face showing Google Maps navigation, indicating "20 min to Home" and "Light traffic on US-101 North".

### 3.6 Music Control

Control music playback on your paired smartphone directly from your watch. You can play, pause, skip tracks, and adjust media volume.



**Image Description:** The watch face displaying music playback controls, showing the artist "Fitz and the Tantrums" and song "More Than Just a Dream", with play/pause, skip, and volume icons.

### 3.7 Power Management

- **Power On/Off:** Press and hold the main crown button to power the watch on or off.
- **Restart/Reset:** Access these options through the watch settings or by pressing and holding the main crown button for an extended period (typically 10-15 seconds for a forced restart).

## 4. MAINTENANCE AND CARE

---

### 4.1 Cleaning

To clean your watch, wipe the case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the finish. Ensure the watch is dry before charging.

### 4.2 Water Resistance Guidelines

The Fossil Gen 3 Explorist is water resistant. This means it can withstand splashes, rain, or brief immersion in

shallow water. However, it is **not** suitable for swimming, diving, or high-pressure water activities. Avoid exposing the watch to hot water or steam.

### 4.3 Battery Care

To maximize battery life, avoid extreme temperatures. Charge the watch regularly and avoid letting the battery completely drain for extended periods. While charging, ensure the watch is placed on a stable, flat surface.



**Image Description:** The underside of the Fossil Gen 3 Explorist Smart Watch, displaying the charging contacts, the Fossil logo, and the blue leather strap with a rose gold buckle.

## 5. TROUBLESHOOTING

---

### 5.1 Common Issues

- **Rapid Battery Drain:** This can be caused by frequent use of demanding apps, always-on display, or poor connectivity. Try reducing screen brightness, disabling unnecessary notifications, or turning off Wi-Fi when not needed.
- **Connectivity Problems:** Ensure Bluetooth is active on both your watch and phone. Restart both devices and

try re-pairing if issues persist. Check that the Wear OS app is running in the background on your phone.

- **Slow Performance:** If the watch feels sluggish, try restarting it. Close unused apps and ensure the Wear OS app on your phone is up to date.

## 5.2 Boot Loop Resolution

Some users may experience a boot loop issue where the watch continuously restarts. If this occurs:

1. Press and hold the main crown button for approximately 10-15 seconds to force a restart.
2. If the issue persists, try deactivating Google Assistant temporarily through the Wear OS app on your phone, then restart the watch.
3. Ensure your watch's software is updated to the latest version.
4. If all else fails, a factory reset may be necessary. Note that this will erase all data on your watch.

## 6. SPECIFICATIONS

Feature	Detail
Brand	Fossil
Model	FTW4002
Model Name	Fossil Explorist
Product Dimensions	8.6 x 11.6 x 11.6 cm
Item Weight	100 g
Operating System	Android OS, iOS
Compatible Devices	Smartphone
Display Technology	LCD
Standing Screen Display Size	44 Millimetres
Display Type	Analog-Digital
Battery Cell Composition	Lithium Polymer
Wireless Type	Bluetooth
Connector Type	Bluetooth, Wi-Fi
Device Interface - Primary	Buttons
Material	Stainless steel
Water Resistance	Yes (Splashes, rain, brief immersion)

## 7. WARRANTY INFORMATION

Your Fossil Gen 3 Explorist Smart Watch comes with a **2-year manufacturer warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or visit the official Fossil website.

## 8. SUPPORT AND SERVICE

---

For further assistance, technical support, or service inquiries, please visit the official Fossil support website or contact their customer service. You can find contact details and FAQs on the Fossil brand store page or in the documentation provided with your watch.