

[Manuals.plus](#) /

> [Canon](#) /

> Canon TS5120 Wireless All-In-One Printer User Manual

## Canon TS5120

# Canon TS5120 Wireless All-In-One Printer

## USER MANUAL

### Introduction

The Canon PIXMA TS5120 is a versatile wireless all-in-one inkjet printer designed for home use, offering printing, scanning, and copying functionalities. It supports mobile and tablet printing, including AirPrint™ and Google Cloud Print, making it convenient for everyday tasks and high-quality photo printing.



Figure 1: Canon TS5120 Wireless All-In-One Printer

### Setup Guide

## 1. Unboxing and Initial Preparation

- Carefully remove the printer from its packaging.
- Remove all orange protective tapes and plastic pieces from the printer, including those on the ink cartridge area.
- Lift and carry the unit by placing your hands on each side to avoid damage to plastic components.

## 2. Ink Cartridge Installation

- Open the printer's access cover.
- Install the included full set of ink cartridges (PG-240/CL-241) into their respective slots. Ensure they click into place.

## 3. Power Connection

- Connect the power cord to the printer and then to a power outlet.
- Press the power button to turn on the printer.

## 4. Software and Driver Installation

- Insert the Setup CD-ROM into your computer's drive and follow the on-screen instructions. This is the recommended method for a smooth setup.
- Alternatively, download the necessary drivers and software from the official Canon support website.
- For mobile devices, download the Canon PRINT App from your device's app store.

## 5. Wireless Network Setup

- Follow the prompts on the printer's LCD display or the software installation guide to connect to your Wi-Fi network.
- The printer supports various connectivity options including Wi-Fi, AirPrint™, Google Cloud Print, and Bluetooth.
- Ensure your computer or mobile device is connected to the same network for seamless wireless printing.
- The printer is compatible with Windows (10, 8.1, 7 SP1), Mac OS X (v10.10.5 - macOS v10.12 Sierra), iOS, Android™, Windows 10 Mobile, and Amazon Fire devices.

## Operating Instructions

---

### 1. Loading Paper

- The PIXMA TS5120 features both front and rear paper support.
- For standard paper, use the front paper cassette. Do not overload the tray and ensure the paper guard is properly secured.
- For envelopes or thicker media, use the rear paper feed.
- Supported media sizes include 8.5 x 11 inch (standard letter) and 4 x 6 inch photo paper.

### 2. Printing Documents and Photos

- From your computer or mobile device, select the document or photo you wish to print.
- Choose the Canon TS5120 from your list of available printers. For wireless printing on some systems, ensure you select the XPS version of the printer if available.
- Adjust print settings such as paper type, size, and quality as needed. The printer supports borderless printing for photos.

- The printer supports automatic duplex (two-sided) printing.
- You can print directly from cloud services and social media platforms via the Canon PRINT App.
- The printer is compatible with voice commands via Alexa for convenient printing.



Figure 2: Voice-activated printing with Alexa

### 3. Copying Documents

- Place the document face-down on the scanner glass.
- Use the printer's control panel to select the "Copy" function.
- Adjust settings such as number of copies, color/black & white, and reduction/enlargement (25% - 400%).
- Press the Start button to begin copying.

### 4. Scanning Documents

- Place the document face-down on the flatbed scanner glass.
- Select the "Scan" function from the printer's control panel or initiate the scan from your computer/mobile device using the Canon PRINT App.
- Choose your desired scan destination (e.g., computer, smartphone, cloud).

## Maintenance

### 1. Ink Cartridge Replacement

- When an ink cartridge is low or empty, a notification will appear on the printer's display or your computer.
- Replace empty cartridges with genuine Canon PG-240 (black) and CL-241 (color) ink cartridges for optimal performance.

### 2. Print Head Alignment and Cleaning

- If print quality degrades (e.g., streaks, faded colors), perform a print head alignment or cleaning from the printer's maintenance menu or the printer software on your computer.

### 3. General Cleaning

- Regularly wipe the exterior of the printer with a soft, damp cloth.
- Keep the scanner glass clean to ensure clear scans and copies.

### Troubleshooting

- **Paper Feed Issues:** Ensure paper is loaded correctly in the tray and not overloaded. Adjust paper guides.
- **Connectivity Problems:** Verify Wi-Fi connection on both printer and device. Restart router and printer. Ensure correct printer driver/XPS version is selected.
- **Print Quality:** Perform print head cleaning or alignment. Check ink levels. Ensure appropriate print settings (e.g., paper type, quality) are selected for the media being used.
- **Ink Absorber Warning:** If you receive an ink absorber warning, this indicates the printer has reached a predetermined print count. Consult Canon support for service options.

For more detailed troubleshooting, refer to the Setup CD-ROM documentation or the Canon official support website.

### Specifications

Feature	Detail
Product Dimensions	14.2"D x 16.8"W x 5.8"H
Item Weight	14.3 pounds
Connectivity Technology	USB, Wi-Fi, Bluetooth
Printing Technology	Inkjet
Max Print Speed (Color)	40 ppm
Max Print Speed (Monochrome)	40 ppm
Maximum Black and White Print Resolution	1080 dpi
Scanner Type	Flatbed
Max Copy Speed (Black & White)	4E+1 ppm
Max Copy Resolution (Color)	600 dpi
Max Copy Resolution (Black & White)	1920 dpi
Duplex Printing	Automatic
Max Input Sheet Capacity	150

Included Components	PIXMA TS5120 Printer, Photo Paper Sample Pack, Setup CD-ROM, Power Cord, Full Set of Ink Cartridges (PG-240/CL-241)
Model Number	2228C002
UPC	013803290578

## Warranty and Support

The Canon PIXMA TS5120 comes with a limited warranty. For specific warranty terms, technical support, driver downloads, and service information, please visit the official Canon support website or contact Canon customer service.

You can also find helpful resources and FAQs on the [Canon Store on Amazon](#).