

PHILIPS MG7720/15

Philips MG7720/15 Multigroom Series 7000 Instruction Manual

Model: MG7720/15

1. INTRODUCTION

This manual provides instructions for the safe and effective use of your Philips MG7720/15 Multigroom Series 7000. This versatile grooming tool is designed for precision styling from head to toe, featuring DualCut blades for enhanced cutting performance and a no-slip rubber grip for improved control. Please read these instructions carefully before first use and retain them for future reference.

2. IMPORTANT SAFETY INFORMATION

To ensure safe operation, always follow these basic precautions:

- Do not immerse the appliance or charging adapter in water.
- Keep the appliance dry.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Only use the original charging adapter provided with the appliance.
- Unplug the appliance before cleaning it under running water.
- Do not use the appliance if it is damaged.

3. PACKAGE CONTENTS AND SETUP

Your Philips MG7720/15 Multigroom Series 7000 includes the following components:

- Multigroom Trimmer Handle
- Precision Trimmer Head
- Detail Metal Trimmer

- Nose and Ear Trimmer
- Body Shaver
- Wide Hair Clipper
- Adjustable Beard Combs (various lengths)
- Hair Combs (various lengths)
- Body Combs (various lengths)
- Cleaning Brush
- Storage Pouch
- Charging Adapter



Figure 1: Overview of the Philips MG7720/15 Multigroom Series 7000 and its complete set of 14 accessories, including various trimmer heads, guide combs, and a storage pouch.

3.1 Charging the Appliance

1. Ensure the appliance is switched off.
2. Insert the small plug of the charging adapter into the socket at the bottom of the trimmer.
3. Plug the adapter into a wall outlet.
4. The charging indicator light on the trimmer will illuminate, indicating that it is charging. A full charge typically takes approximately 1 hour and provides up to 120 minutes of cordless use.
5. Unplug the appliance once fully charged.

3.2 Attaching and Detaching Trimmer Heads and Combs

To change attachments:

- **To detach a head:** Hold the trimmer handle firmly and gently pull the head upwards from the handle.
- **To attach a head:** Align the head with the slot on the trimmer handle and push it down until you hear a click.
- **To attach a comb:** Slide the desired comb onto the trimmer head until it clicks into place.
- **To detach a comb:** Pull the comb upwards from the trimmer head.



Figure 2: The main trimmer handle of the Philips MG7720/15, highlighting its ergonomic design and power button.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

1. Press the power button to turn the trimmer on.
2. Press the power button again to turn the trimmer off.

4.2 Trimming Your Beard and Hair

Use the precision trimmer head with the desired beard or hair comb for an even trim.

- Select the appropriate comb length for your desired style.
- Move the trimmer against the direction of hair growth for optimal cutting.
- For detailing and sharp lines, remove the comb and use the precision trimmer head directly.



Figure 3: A detailed view of the DualCut blades, engineered for precise and efficient trimming.

4.3 Using the Nose and Ear Trimmer

Attach the nose and ear trimmer head. Gently insert the trimmer into your nostril or ear canal. Move it slowly to remove unwanted hair. Do not insert too deeply.

4.4 Body Grooming

Attach the body shaver or body combs for grooming body hair. Use on dry or wet skin.

5. MAINTENANCE

5.1 Cleaning

The trimmer is water-resistant and can be cleaned under running water.

1. Turn off and unplug the appliance.
2. Remove the trimmer head and combs.
3. Rinse the trimmer head and combs under warm running water.
4. You can also rinse the main body of the trimmer under running water, ensuring the charging port is closed if applicable.
5. Use the cleaning brush to remove any stubborn hair particles.

6. Allow all parts to air dry completely before reassembling or storing.

5.2 Storage

Store the trimmer and its accessories in the provided storage pouch in a dry, safe place, away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **Appliance does not turn on:**

- Ensure the appliance is fully charged.
- Check if the power button is pressed firmly.

- **Poor trimming performance:**

- Clean the trimmer head and blades thoroughly to remove any hair buildup.
- Ensure the comb is correctly attached.
- The blades are self-sharpening and do not require oiling. If performance significantly degrades, contact customer support.

- **Charging indicator not working:**

- Ensure the charging adapter is properly connected to both the trimmer and the wall outlet.
- Check if the wall outlet is functioning.

7. SPECIFICATIONS

Feature	Detail
Model Number	MG7720/15
Brand	PHILIPS
Product Dimensions (L x W x H)	40 x 160 x 40 mm (4 x 16 x 4 cm)
Item Weight	0.31 Kilograms (310 g)
Power Source	Corded Electric (for charging), Cordless (for operation)
Battery Type	1 Lithium Ion battery (required)
Blade Material	Stainless Steel
Special Feature	Cordless, DualCut Technology, Water-resistant
Target Audience	Men

8. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the warranty card included with your product or visit the official Philips website. You can also find support resources and frequently asked questions there.

Manufacturer: Philips

Place of Business: Eindhoven, Noord-brabant 5621 JG, NL

