

[Manuals.plus](#) /

› [BOMAZ](#) /

› BOMAZ Replacement Remote Control for LG AKB72914043 Series TVs - User Manual

BOMAZ 758232815199

BOMAZ Replacement Remote Control User Manual

Model: 758232815199

INTRODUCTION

This manual provides instructions for the BOMAZ Replacement Remote Control, designed for use with various LG LCD and LED TV models. This remote control is a direct replacement for the original LG AKB72914043 remote and is compatible with models such as 47LK550, 47LK550-UA, 55LW5700, 55LV5400-UB, 42LK530, 42LK530-UC, 42LW5700, 55LW5600, and 55LV3700-UD.

The remote control features a slim design and is ready for use without any programming required. Simply insert batteries, and it will function with your compatible LG television.



Image 1: Front view of the BOMAZ Replacement Remote Control. This image displays the black remote control with various buttons for TV operation.

SETUP

Follow these steps to prepare your remote control for use:

1. **Insert Batteries:** Open the battery compartment cover on the back of the remote control. Insert two (2) AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
2. **Close Compartment:** Replace the battery compartment cover securely.
3. **No Programming Required:** This remote control is pre-programmed and does not require any setup or pairing with your LG TV. It is ready for immediate use once batteries are installed.

Note: Batteries are not included with the remote control.

OPERATING INSTRUCTIONS

The BOMAZ Replacement Remote Control functions identically to your original LG remote. Point the remote control directly at your television's infrared receiver for optimal performance.

- **Power Button:** Press to turn the TV on or off.
- **Number Buttons (0-9):** Use to directly select channels.
- **Channel Up/Down:** Navigate through channels sequentially.
- **Volume Up/Down:** Adjust the television's volume level.
- **Mute Button:** Silence the TV audio.
- **Input/Source Button:** Switch between different video input sources (e.g., HDMI, AV).
- **Menu Button:** Access the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right) and Enter/OK:** Use to navigate menus and confirm selections.
- **Playback Controls:** Buttons for functions like Play, Pause, Stop, Rewind, Fast Forward (functionality depends on TV model and content).

The operable distance for the remote control is more than 8 meters (approximately 26 feet).

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Battery Replacement:** Replace batteries when the remote control's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new AAA batteries.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Storage:** Store the remote control in a dry place, away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote control from drops and impacts, which can cause internal damage.

TROUBLESHOOTING

If you experience issues with your remote control, try the following solutions:

Problem	Solution
Remote control is not responding.	• Check if the batteries are inserted correctly with the correct polarity. • Replace old batteries with new AAA batteries. • Ensure there are no obstructions between the remote control and the TV's infrared receiver. • Point the remote directly at the TV.
Remote control range is reduced.	• Replace batteries with new ones. • Ensure no strong light sources (like direct sunlight) are interfering with the TV's IR receiver.
Certain buttons do not work.	• This remote is a direct replacement; however, some advanced functions specific to certain original LG remotes might not be supported if they were unique to that model. • Ensure the button is not physically stuck.

SPECIFICATIONS

- **Model Number:** 758232815199
- **Brand:** BOMAZ
- **Compatible Devices:** LG LCD/LED Televisions (AKB72914043 series and listed models)
- **Material:** ABS Material
- **Power Source:** 2 x AAA Batteries (not included)
- **Operable Distance:** More than 8 meters (26 feet)
- **Dimensions:** 9.8 x 5.3 x 1.2 inches (24.9 x 13.5 x 3.0 cm)
- **Item Weight:** 3.52 ounces (100 grams)
- **Special Feature:** No Programming Required

WARRANTY AND SUPPORT

This BOMAZ Replacement Remote Control comes with a **90-day warranty** from the date of purchase.

If you encounter any issues with your remote control within the warranty period, or have questions regarding its operation, please contact the seller or manufacturer for assistance. Provide your purchase details when seeking support.

The manufacturer tests every remote before shipment to ensure functionality. If you receive a remote with a problem, please contact customer service for resolution.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B074XYCRVH>

More documents and user manuals: <https://manuals.plus/>