

Continental Electric PS77411

Continental Electric Professional Series 2-Slice Toaster (Model PS77411) Instruction Manual

This manual provides instructions for the safe and efficient operation, maintenance, and troubleshooting of your Continental Electric Professional Series 2-Slice Toaster.

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

2. PRODUCT OVERVIEW

The Continental Electric Professional Series 2-Slice Toaster (Model PS77411) is designed for efficient toasting of bread and bagels. It features a durable stainless steel exterior, extra-wide slots to accommodate various bread types, and a self-centering function for even toasting. The toaster includes an adjustable browning dial with 6 settings, along with dedicated buttons for Cancel, Reheat, and Defrost functions.



Figure 1: Front view of the toaster, showcasing its stainless steel finish and control panel.

3. SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials. Ensure all components are present and undamaged.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the appliance.
3. **First Use:** Before first use, operate the toaster without bread on the highest setting (6) for a few minutes. This will burn off any manufacturing residues and eliminate initial odors. A slight smoke or odor is normal during this process.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

4. OPERATING INSTRUCTIONS

4.1 Controls

The toaster features an adjustable browning dial and three function buttons:

- **Browning Dial (1-6):** Adjusts the toasting level from light (1) to dark (6).
- **CANCEL Button:** Stops the toasting cycle immediately and ejects the toast.
- **REHEAT Button:** Warms already toasted items without further browning.
- **DEFROST Button:** Toasts frozen bread, extending the toasting time to thaw and then toast.
- **BAGEL Button:** Toasts the cut side of bagels while gently warming the outer side.



Figure 2: Detailed view of the browning dial and function buttons.

4.2 Toasting Bread

1. Insert up to two slices of bread into the toaster slots.
2. Select your desired browning level using the browning dial (1 for light, 6 for dark).
3. Press the toast lever down until it locks into place. The indicator light for the selected function (if any) will illuminate.
4. The toaster will automatically raise the toast when the cycle is complete.
5. To stop toasting at any time, press the CANCEL button.



Figure 3: Toaster in operation with bread inserted and the lever engaged.

4.3 Using Special Functions

- **Defrost:** Place frozen bread in the slots, select your desired browning level, then press the toast lever down and press the DEFROST button. The DEFROST indicator light will illuminate.
- **Reheat:** Place already toasted bread in the slots, select your desired browning level, then press the toast lever down and press the REHEAT button. The REHEAT indicator light will illuminate.
- **Bagel:** Place cut bagels into the slots with the cut side facing inwards, select your desired browning level, then press the toast lever down and press the BAGEL button. The BAGEL indicator light will illuminate.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Always unplug** the toaster from the electrical outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the stainless steel finish.
3. **Crumb Tray:** Pull out the crumb tray located at the bottom of the toaster. Empty crumbs into a waste bin. **Hand wash the crumb tray** with warm, soapy water. Rinse thoroughly and dry completely before reinserting. Do not wash the crumb tray in a dishwasher, as this may cause rust.
4. **Interior Cleaning:** Do not insert any objects into the toasting slots to clean. If food becomes lodged, unplug the

toaster and carefully remove the food after the toaster has cooled.



Figure 4: Top view of the toaster slots, illustrating the wide design.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure toaster is securely plugged in. Check circuit breaker or try a different outlet.
Toast is unevenly browned.	Inconsistent bread thickness; initial use; crumb buildup.	Ensure bread slices are of similar thickness. The first few uses may result in slight variations. Clean the crumb tray regularly.
Toast lever does not stay down.	Toaster not plugged in; internal malfunction.	Ensure the toaster is plugged into a live electrical outlet. If the issue persists, discontinue use and contact customer support.
Toaster sparks or emits excessive smoke.	Food lodged in slots; internal electrical fault.	Immediately unplug the toaster. If food is lodged, remove it carefully once cooled. If sparking or excessive smoke continues, discontinue use and contact customer support.
Food stuck in slots after toasting.	Small or irregularly shaped food items.	Unplug the toaster and allow it to cool. Carefully lift the toast lever to raise the food. If necessary, gently remove the food with non-metallic tongs.

7. SPECIFICATIONS

Feature	Detail
Brand	Continental Electric
Model Number	PS77411
Color	Stainless Steel
Material	Stainless Steel
Number of Slices	2
Wattage	925 watts
Voltage	120V
Number of Settings	6 (Browning Levels)
Special Features	Manual, Wide Slots, Self-Centering, Safety Toast Lift, Cancel, Reheat, Defrost, Bagel Functions
Product Dimensions	11.7 x 7.7 x 8.7 inches
Item Weight	3 Pounds

8. WARRANTY AND SUPPORT

Your Continental Electric Professional Series 2-Slice Toaster comes with a **3 Year Limited Warranty**. This warranty covers defects in material and workmanship under normal household use.

For warranty claims, technical assistance, or customer support, please refer to the contact information provided with your product packaging or visit the official Continental Electric website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question